


JT922

Parts Manual

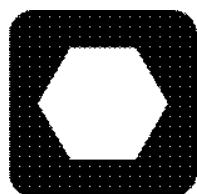

CMW®

Issue 6

053-1134

Ditch Witch®

JT922

ISSUE NO. 06PL-06/11

For Replacement Copy Order P/N 053-1134

This manual contains information concerning the following models:
JT922 & JT922T4i Directional Drilling System

Copyright 2007, 2009, 2011 by The Charles Machine Works, Inc.

 **Ditch Witch®**, Ditch Witch, CMW, AutoCrowd, Jet Trac, Roto Witch, Subsite, Fluid Miser, Power Pipe, Super Witch, Pierce Arrow, Zahn, The Underground, and The Underground Authority Worldwide are registered trademarks of The Charles Machine Works, Inc.

ID0176431

FOREWORD

This manual contains illustrated parts lists to help you select quality ProTech® Replacement parts for your Ditch Witch® equipment. Using other replacement parts will lessen the productivity of your equipment.

- ◆ Part numbers enclosed in a box are no longer available from The Charles Machine Works, Inc. Your local Ditch Witch dealer may be able to locate the part for you.
- ◆ Footnotes provide more information to help you identify parts shown in the manual.
- ◆ Assembly instructions and Tech Bits articles referenced in footnotes are available through your local Ditch Witch dealer.
- ◆ Description and specifications in this book were current at publication. However, The Charles Machine Works, Inc. reserves the right to improve equipment, so this manual might not reflect the most current improvements.
- ◆ Instructions on recommended equipment use and maintenance are in the Operator's Manual that was shipped with your equipment.

Keep the following in mind when ordering ProTech replacement parts:

- ◆ Specify parts you need by part number and description, not by illustration reference numbers.
- ◆ Have equipment model and serial number on hand to help ensure you get the right parts for your machine whether it's old or new.

Thank you for buying and using Ditch Witch equipment and ProTech replacement parts.

WARRANTY

DW WARRANTY Policy
July, 2005

POLICY 1: DITCH WITCH® EQUIPMENT AND REPLACEMENT PARTS LIMITED WARRANTY POLICY

Subject to the limitation and exclusions herein, free replacement parts will be provided at any authorized Ditch Witch dealership for any Ditch Witch equipment or parts manufactured by The Charles Machine Works, Inc. (CMW) that fail due to a defect in material or workmanship within one (1) year of first commercial use (Exception: 2 years for all SK500 Attachments). Free labor will be provided at any authorized Ditch Witch dealership for installation of parts under this warranty during the first year following "initial commercial" use of the serial numbered Ditch Witch equipment on which it is installed. The customer is responsible for transporting their equipment to an authorized Ditch Witch dealership for all warranty work.

EXCLUSIONS FROM PRODUCT WARRANTY

- All incidental or consequential damages.
- All defects, damages, or injuries caused by misuse, abuse, improper installation, alteration, neglect, or uses other than those for which products were intended.
- All defects, damages, or injuries caused by improper training, operation, or servicing of products in a manner inconsistent with manufacturer's recommendations.
- All engines and engine accessories (these are covered by original manufacturer's warranty).
- Tires, belts, and other parts which are subject to another manufacturer's warranty. (Such warranty will be available to purchaser.)
- ALL IMPLIED WARRANTIES NOT EXPRESSLY STATED HEREIN, INCLUDING ANY WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE AND MERCHANTABILITY.

IF THE PRODUCTS ARE PURCHASED FOR COMMERCIAL PURPOSES, AS DEFINED BY THE UNIFORM COMMERCIAL CODE, THEN THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE FACE HEREOF AND THERE ARE NO IMPLIED WARRANTIES OF ANY KIND WHICH EXTEND TO A COMMERCIAL BUYER. ALL OTHER PROVISIONS OF THIS LIMITED WARRANTY APPLY INCLUDING THE DUTIES IMPOSED.

Ditch Witch products have been tested to deliver acceptable performance in most conditions. This does not imply they will deliver acceptable performance in all conditions. Therefore, to assure suitability, products should be operated under anticipated working conditions prior to purchase.

Defects will be determined by an inspection within thirty (30) days of the date of failure of the product or part by CMW or its authorized dealer. CMW will provide the location of its inspection facilities or its nearest authorized dealer upon inquiry. CMW reserves the right to supply remanufactured replacement parts under this warranty as it deems appropriate.

Extended warranties are available upon request from your local Ditch Witch dealer or CMW.

Some states do not allow exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply. Further, some states do not allow exclusion of or limitation of how long an implied warranty lasts, so the above limitation may not apply. This limited warranty gives product owner specific legal rights and the product owner may also have other rights which vary from state to state.

For information regarding this limited warranty, contact CMW's Product Support Department, P.O. Box 66, Perry, OK 73077-0066, or contact your local Ditch Witch dealer.

CONTENTS

Decals

Decal Location – JT922/JT922S.....	8
------------------------------------	---

Engine Components

Engine and Accessories.....	14
Engine and Accessories - Begins.....	16
Engine Installation	16
Engine Mounts	18
Exhaust System	20
Exhaust System - Begins	22
Air Filter	24
Air Filter - Begins	26
Battery	28
Battery Cables	30
Fuel Tank	32
Electrical Components	34
Front Engine Cover	36
Engine Enclosure Top	38
Engine Enclosure Top - Begins.....	40
Engine Enclosure	42
Engine Enclosure - Begins	44
Engine Access Panel	46
Engine Access Panel - Begins	48
Rear Cover	50
Rear Cover - Begins	52
Setup Valve	54
Engine Skid Mounting	56

Frame Components

Cylinder Grease	64
Drill Frame.....	65
Front Idler	62
Hose Carrier	80
Rotation Gearbox	78
Spindle Drive	76
Stabilizer & Pivot	68
Thrust Drive.....	74
Tracks	60
Wrench, Rotating	72
Wrench, Stationary.....	70

Operator's Station

Left Console	88
Operators Station	84
Right Console.....	86
Wrench Valve.....	90

Hydraulics

Anchor Hydraulics	114
Anchor Valve Hydraulics	112
Anchor Valve Service Parts.....	110
Carriage Hydraulics	136
Drilling Fluid Motor Hydraulics.....	116
Ground Drive Hydraulics	106
Hose Carrier Hydraulics	134
Hydraulic Cooler Bypass - Begins	102
Hydraulic Cooler Bypass - Ends	100

Hydraulic Cylinder (2.0"x1.0").....	150
Hydraulic Cylinder (3.5"x1.75"x2.0").....	148
Hydraulic Cylinder (3.5"x2.0").....	152
Hydraulic Filter	98
Hydraulic Pump	94
Hydraulic Reservoir	96
Joystick Service Parts	126
Manifold Service Parts	118
Pilot Manifold Service Parts	124
Pilot Pressure and Return	120
Pilot Pressure and Return - Begins	122
Stabilizer/Tilt Hydraulics	108
Thrust/Rotation & Setup Supply	104
Thrust/Rotation Gauges	138
Thrust/Rotation Pilot Hydraulics	128
Thrust/Rotation Pilot Hydraulics - Begins.....	130
Thrust/Rotation Valve Hydraulics	132
Wrench Valve Hydraulics	142
Wrench Valve Service Parts	140
Wrench, Rotating Hydraulics	146
Wrench, Stationary Hydraulics.....	144

Anchor Systems

Anchor System.....	156
--------------------	-----

Fluid Systems

Drilling Fluid Plumbing	166
Drilling Fluid Pump Inlet – 13 Gal.....	164
Drilling Fluid Pump Inlet – 9 Gal	162
Mud Pump – 13 GPM	170
Mud Pump – 9 GPM.....	168
Water Tank	160

Accessories

Auto Luber Assembly	174
Canopy	180
Grease Pump – Low Output	178
Grounding Cables	190
Lubricator Mount, Nozzle & Applicator	176
T18B Tie Down Kit	184
Umbrella Kit	182
Wash Wand	188
Wash Wand Plumbing	186


Miscellaneous

Bolt/Nut Torque Chart	194
Filters	198
Optional Kits	198
Parts Manual Change Request	199
Related Publications	198
Replacement O-Ring Chart.....	197
Warranty Registration	202


DECALS

ID0135069

DECAL LOCATION JT922

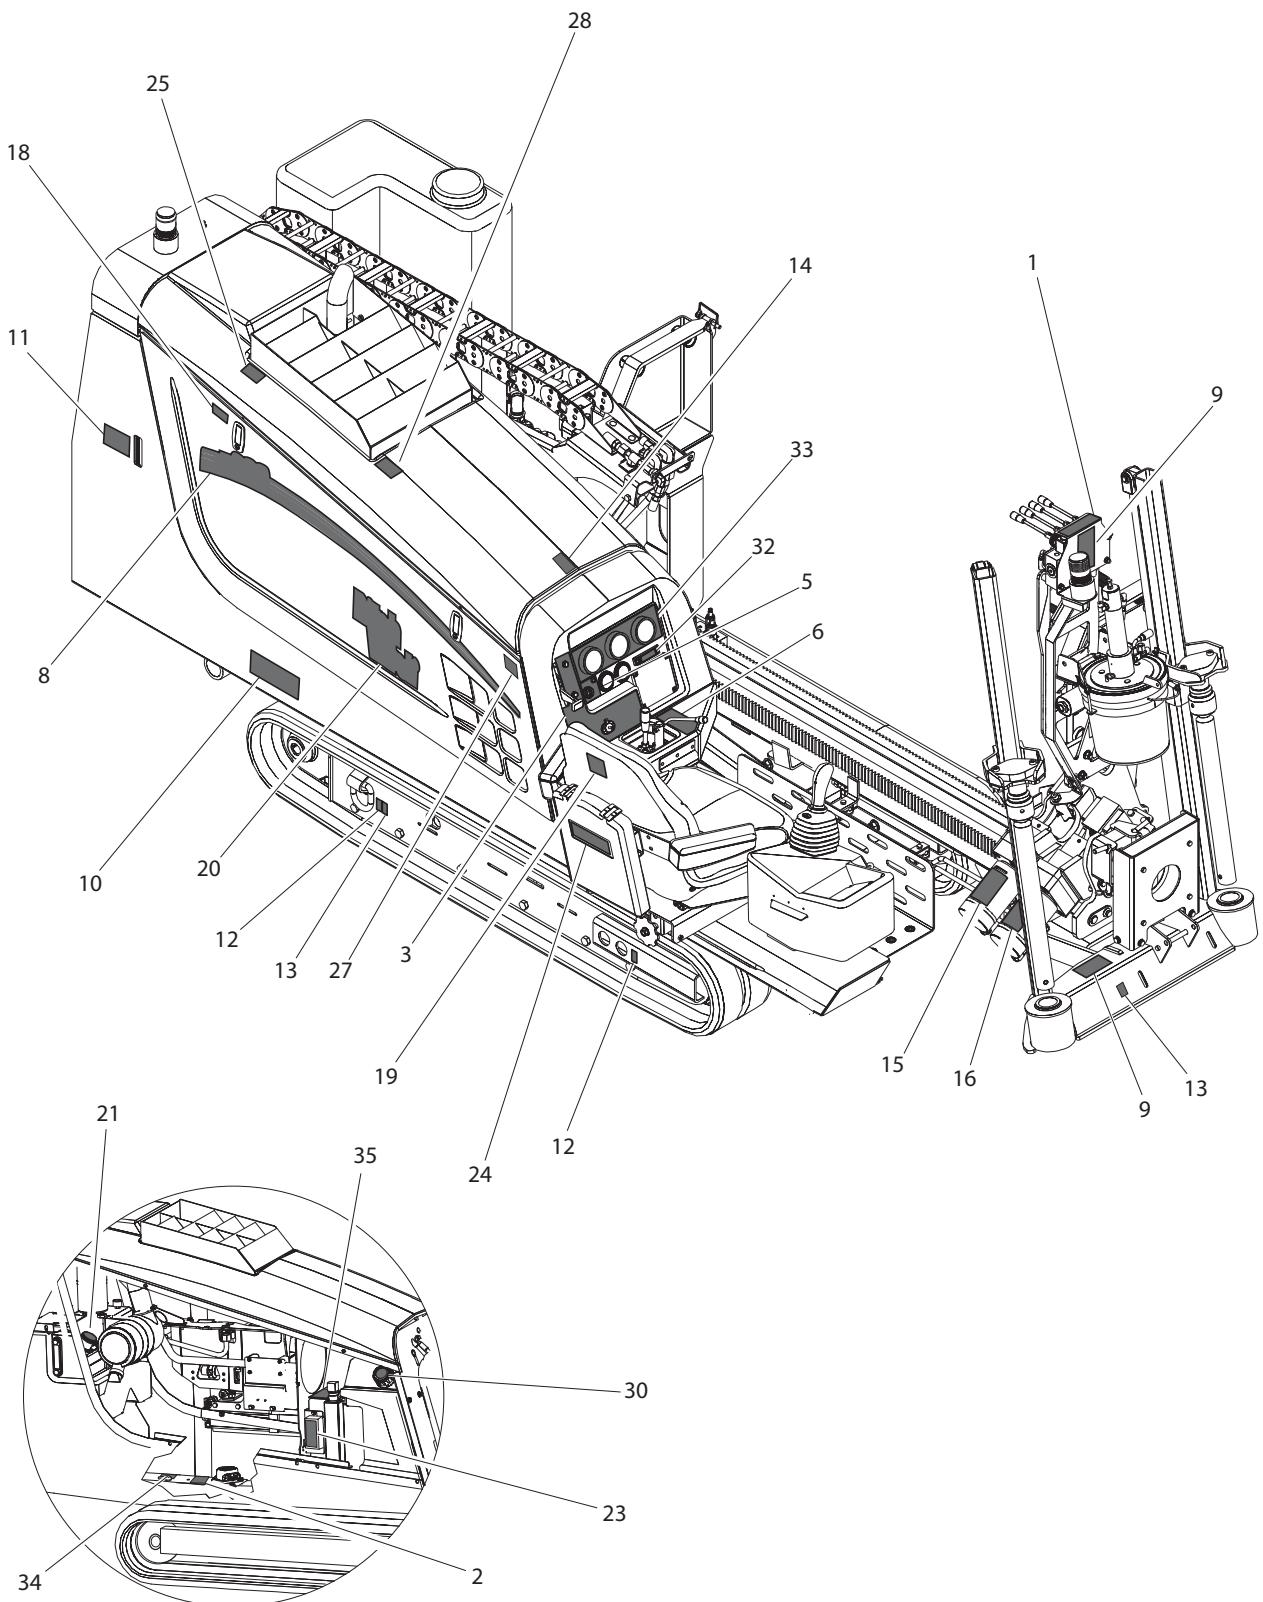

DECAL LOCATION
JT922

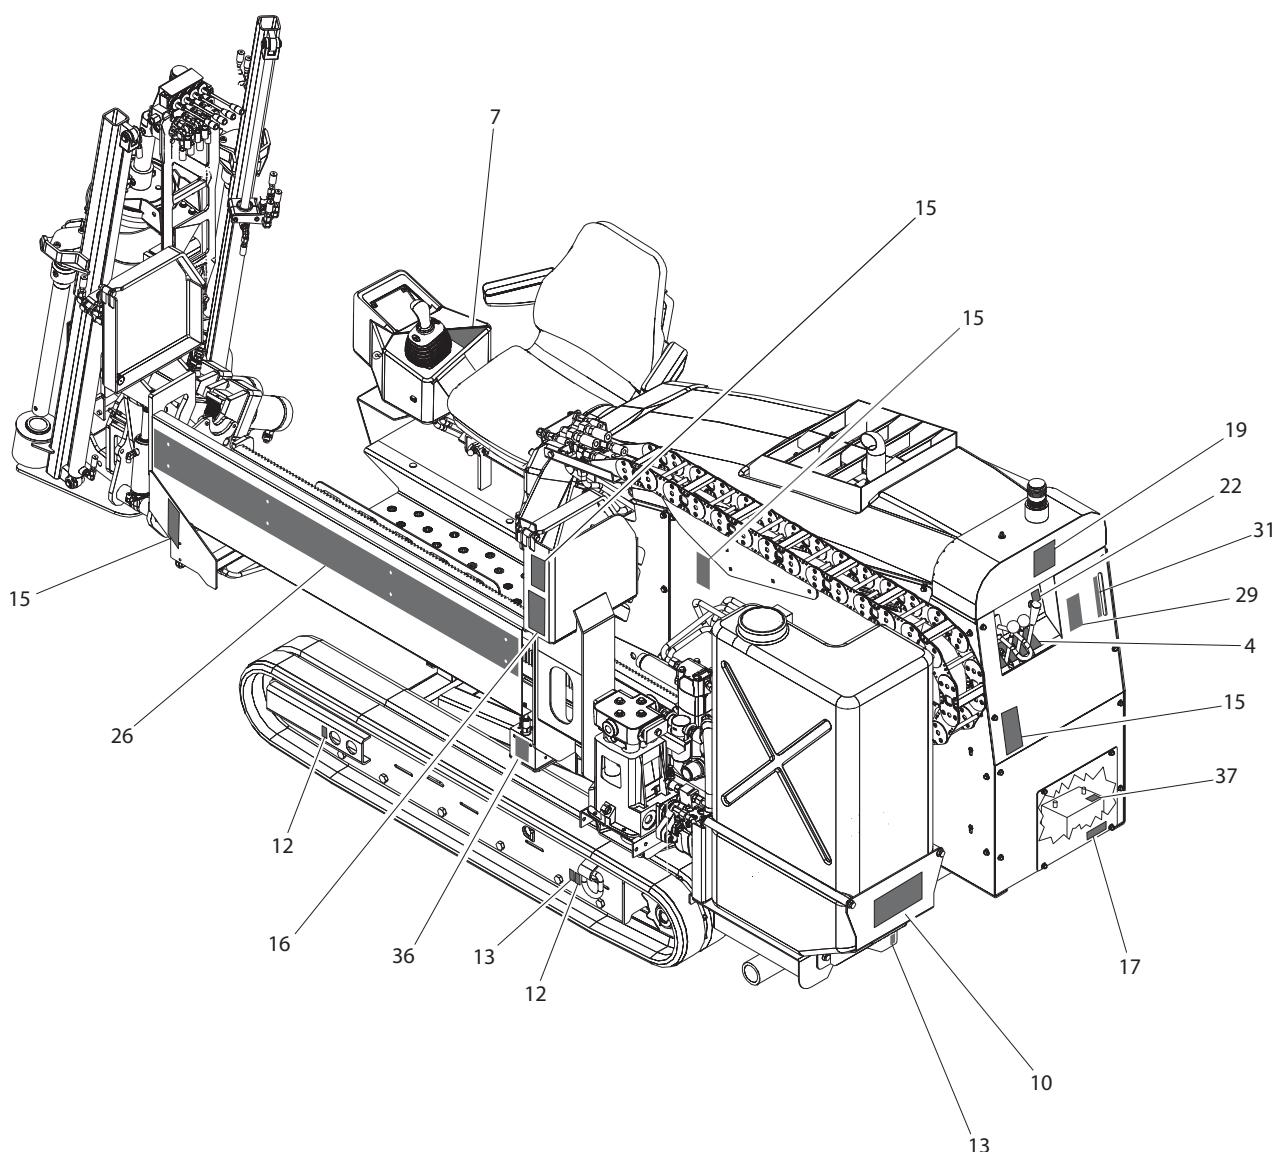

DECAL LOCATION

JT922

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	270-1501	1	DECAL KIT - JT922	
I	700-071	1	FRONT ANCHOR	
2	270-1452	1	FUSE BLOCK	
3	270-1489	1	JT922 CONSOLE DECAL	
4	270-1496	1	TRACK CONTROL	
5	270-1497	1	IGNITION SWITCH	
6	270-1498	1	DRILLING FLUID DECAL	
7	270-1499	1	THRUST AND ROTATE	
8	270-1500	1	JT922 MODEL ID	
9	273-278	2	DANGER WRENCH	
I0	274-049	2	DANGER ELECTROCUTION	
I1	274-198	1	NOTICE OIL LEVEL	
I2	274-442	4	LIFT LOCATION	
I3	274-318	4	TIE DOWN LOCATION	
I4	274-780	1	JET TRAC PATENT	
I5	273-546	5	WARNING MOVING PARTS	
I6	270-1506	2	DANGER ROTATING SHAFT	
I7	275-203	1	BATTERY	
I8	275-400	1	NOTICE OIL LEVEL	
I9	275-450	2	LOGO PLACARD	
20	700-158	1	DITCH WITCH LOGOTYPE	
21	700-063	1	HYDRAULIC OIL TANK	
22	700-II6	1	TRACKER CONTROL	
23	270-1896	1	ELECTRICAL PANEL (BUSSMAN)	PLACE ON INSIDE OF BUSSMAN COVER
24	275-048	1	IMPORTANT SAFETY RULES	
25	273-423	1	CAUTION HOT PARTS	
26	270-1502	1	JT922 MODEL ID PIPEBOX	
27	274-291	1	SOUND POWER	SEE FOOTNOTE I
28	273-459	1	NOTICE EXPLOSION POSSIBLE	
29	275-383	1	NOTICE SLOPE PARKING DECAL	
30	700-062	1	DIESEL FUEL CAP	
31	270-I271	1	THROTTLE CONTROL	
32	270-1578	1	LED DISPLAY	
33	270-1869	1	GAUGE PANEL	
34	700-212	1	MASTER DISCONNECT SWITCH	
35	270-1898	1	TEST PORT LOCATIONS A	
36	270-1899	1	TEST PORT LOCATIONS B	
37	273-267	1	DITCH WITCH BATTERY	

FOOTNOTES


I. NOT PART OF KIT

NOTES:

ENGINE COMPONENTS

ID0134845

ENGINE AND ACCESSORIES

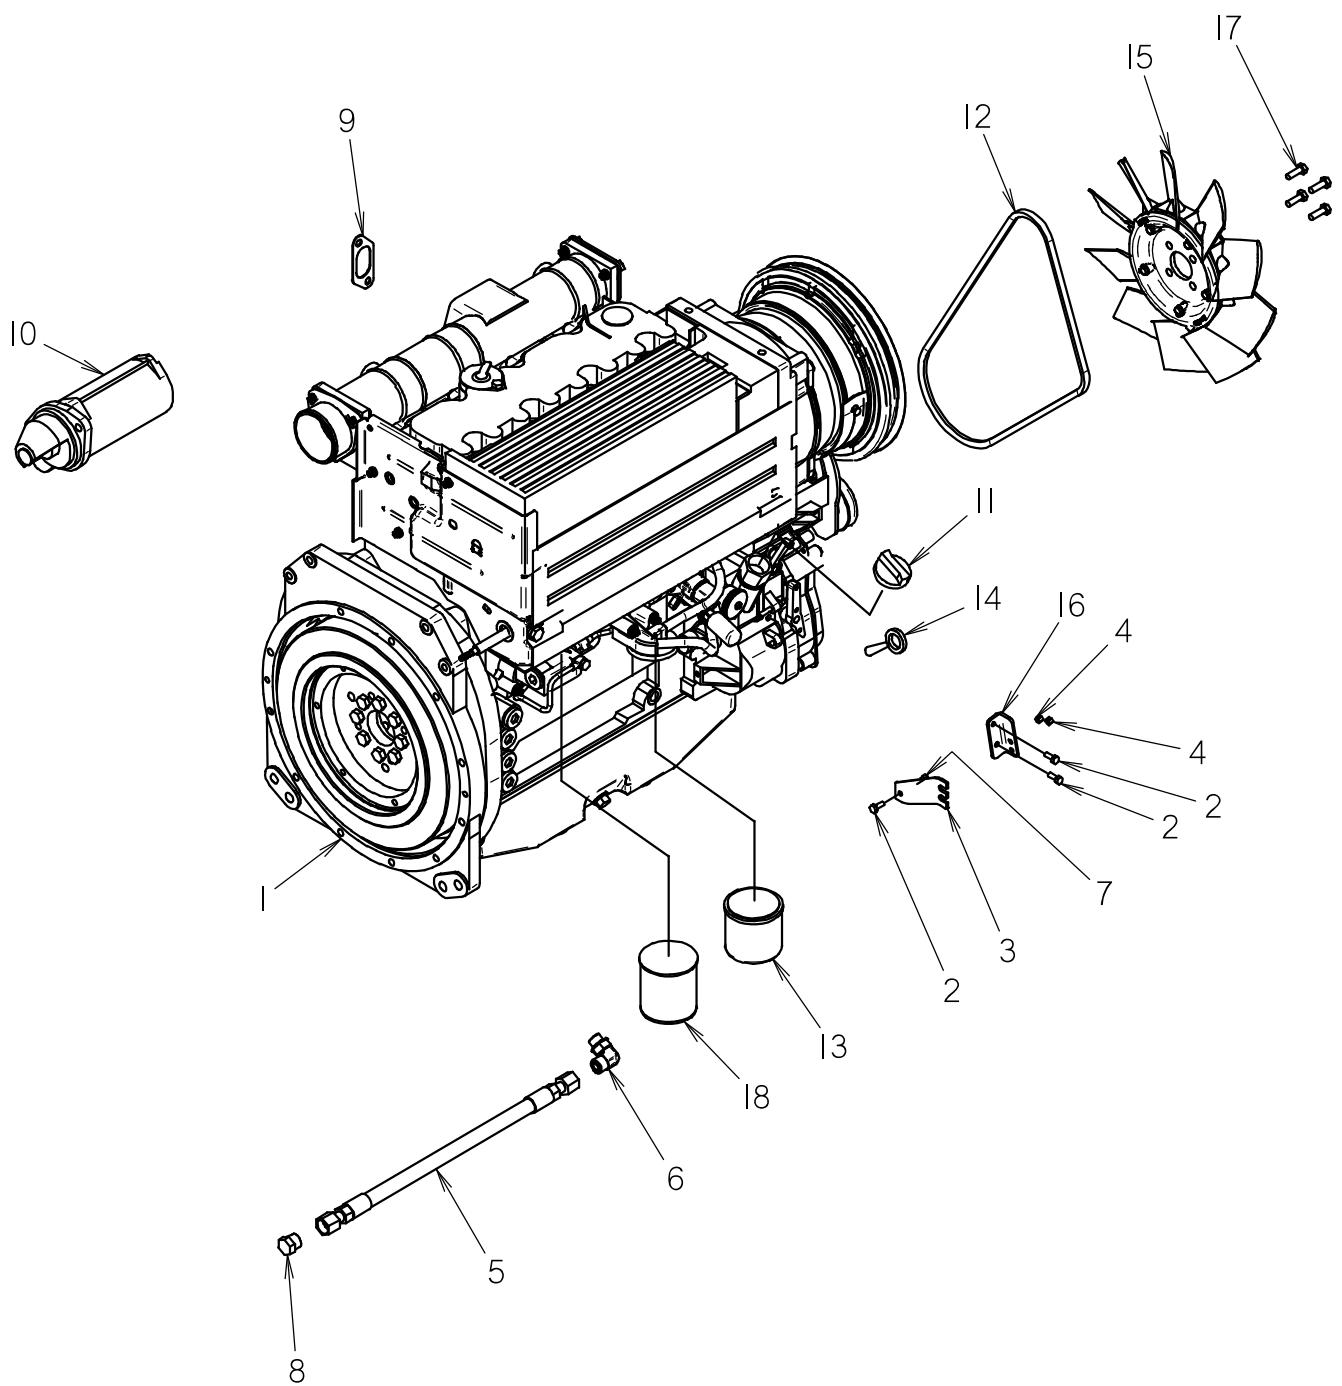

ENGINE AND ACCESSORIES

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	I95-I024	1	ENGINE (DEUTZ F4L20II)	
2	I06-23I	3	SCREW (M6-1.00 X 16MM)	
3	300-418I	1	CABLE MOUNT	
4	I08-I33	2	CABLE STOP	
5	515-255	1	HOSE (080FX-18"-3000)	
6	I59-595	1	ELBOW (M8X1.50-080)	
7	I06-106	1	NUT (M6-1.00)	
8	I54-33I	1	PLUG (080)	
9	I65-727	1	EXHAUST MANIFOLD GASKET	
I0	I94-548	1	STARTER	
I1	I94-570	1	OIL FILL CAP	
I2	I70-453	1	BELT (10MM X 1175MM)	
I3	I95-807	1	FUEL FILTER ELEMENT (PRIMARY)	
I4	I94-563	1	DIP STICK	
I5	I95-I068	1	FAN	
I6	300-4182	1	THROTTLE BRACKET	
I7	I05-806	4	SCREW (M8-1.25 X 25MM)	TORQUE TO 16 FT-LBS, USE LOCTITE 242 OR EQUIVALENT
I8	I95-849	1	ELEMENT (12NF,3.562" SPIN-ON)	

NOT SHOWN:

I95-I389 FUEL LIFT PUMP

SERVICE PART & SEE FOOTNOTE I


FOOTNOTES:

- I. IF FUEL LIFT PUMP I95-I389 IS USED THE IN-LINE FILTER WILL NOT BE REQUIRED.

NOTE:

ENGINE AND ACCESSORIES

JT922 T4i
BEGINS WITH S/N: CMWJT922P80000309

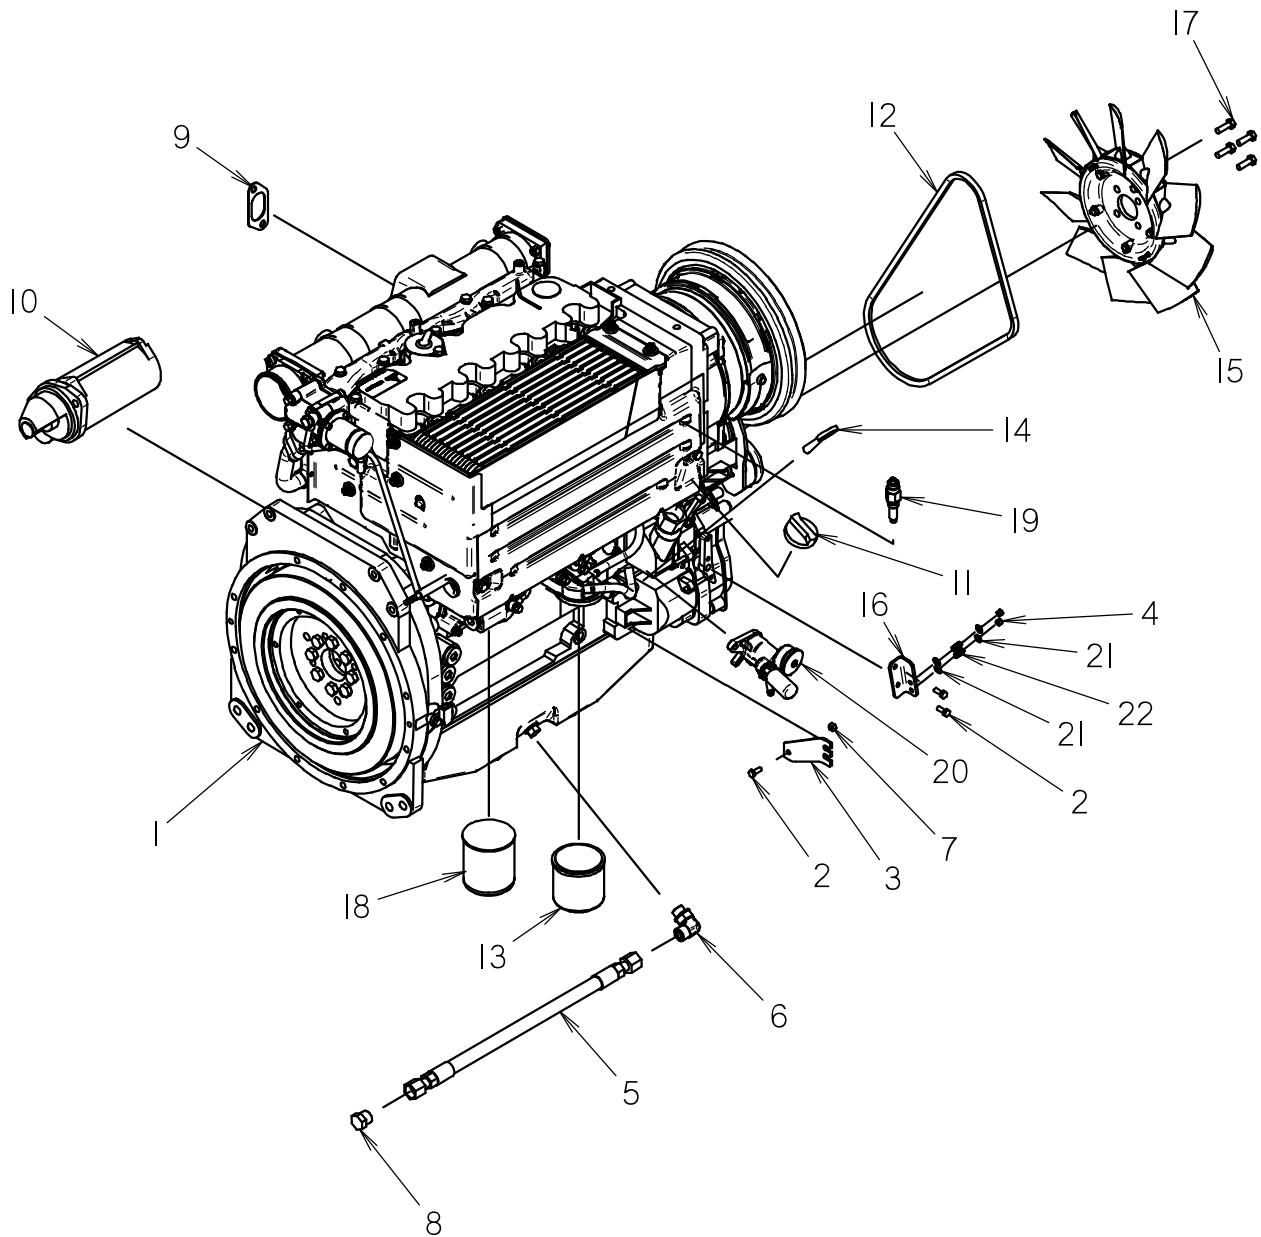

ENGINE AND ACCESSORIES

JT922 T4i

BEGINS WITH S/N: CMWJT922P80000309

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	I95-I071	1	ENGINE (DEUTZ)	
2	I06-231	3	SCREW (M6-1.00 X 16MM)	
3	300-4181	1	CABLE MOUNT	
4	I08-I33	2	CABLE STOP	
5	515-255	1	HOSE (080FX-18"-3000)	
6	I59-595	1	ELBOW (M18X1.50-080)	
7	I06-I06	1	NUT (M6-1.00)	
8	I54-331	1	PLUG (080)	
9	I65-727	1	EXHAUST MANIFOLD GASKET	
10	I95-I392	1	STARTER, 9 TOOTH	
11	I94-570	1	OIL FILL CAP	
12	I70-453	1	BELT (10MM X 1175MM)	
13	I95-807	1	FUEL FILTER ELEMENT (PRIMARY)	
14	I94-563	1	DIP STICK	
15	I95-I068	1	FAN	
16	300-4182	1	THROTTLE BRACKET	
17	I05-806	4	SCREW (M8-1.25 X 25MM)	
18	I95-849	1	ELEMENT (12NF, 3.562" SPIN-ON)	
19	I25-I321	1	TEMPERATURE SWITCH	
20	I95-I389	1	FUEL LIFT PUMP	
21	I07-310	4	WASHER (#10)	SEE FOOTNOTE 1
22	I15-618	2	COMPRESSION SPRING (.625")	SEE FOOTNOTE 1


NOT SHOWN:

FOOTNOTES:

1. PARTS, ALONG WITH THROTTLE CABLE I95-I501, BELONG TO KIT I90-I467. SEE INSTALLATION INSTRUCTIONS ID0230528 FOR DETAILS.

NOTE:

ENGINE MOUNTS

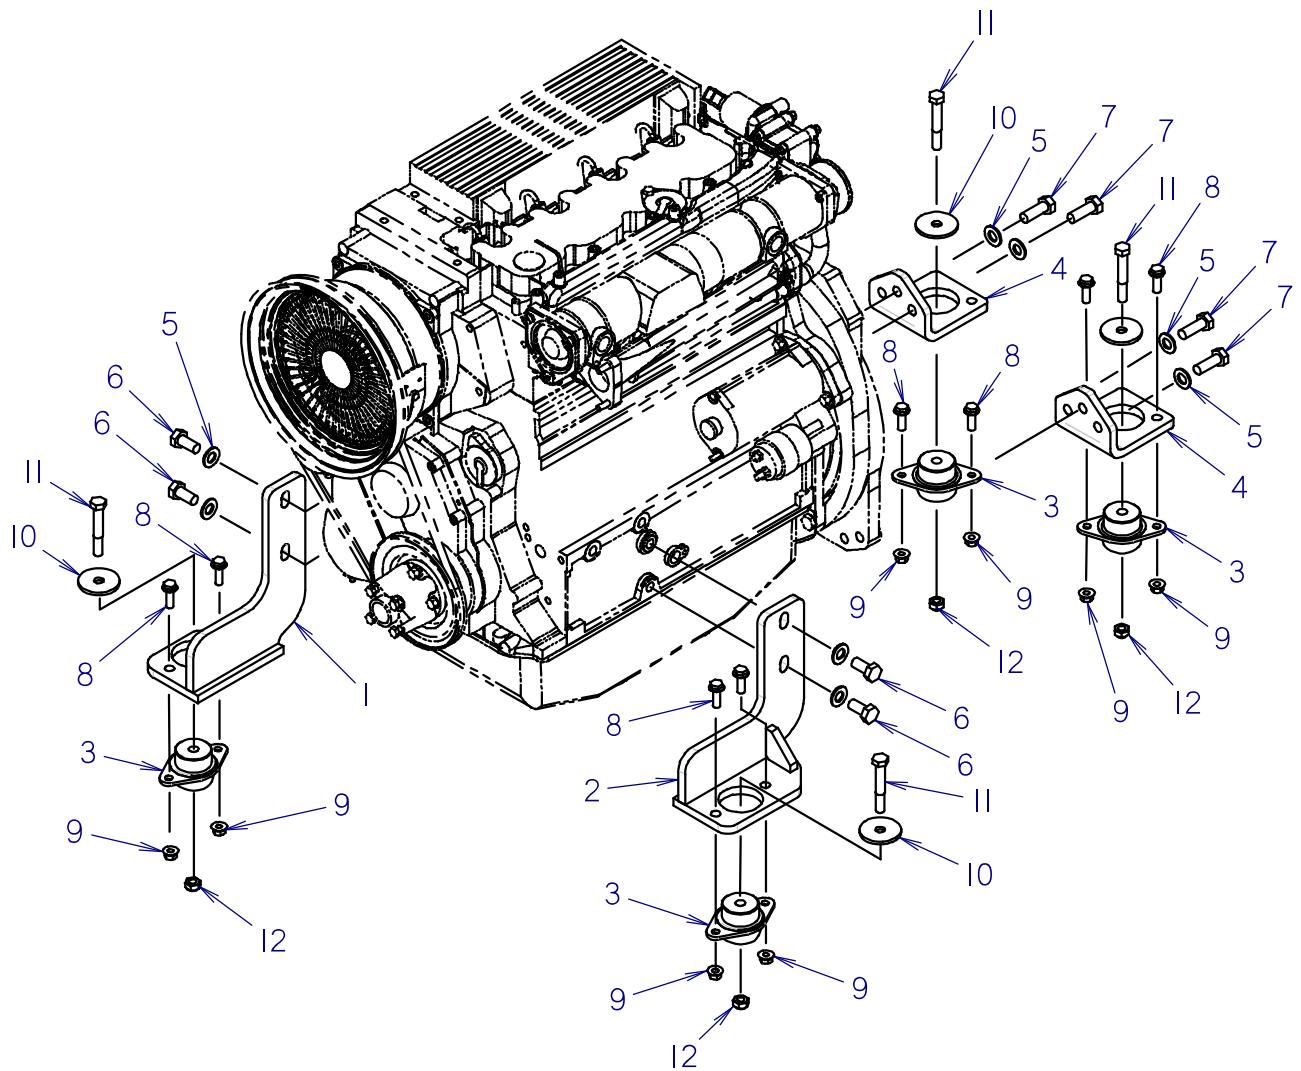

ENGINE MOUNTS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	300-3442	1	RIGHT ENGINE MOUNT	
2	300-3446	1	LT ENGINE MOUNT	
3	I16-487	4	SHOCK MOUNT	
4	300-2801	2	REAR ENGINE MOUNT	
5	106-598	8	WASHER (9/16" HARDENED)	
6	106-596	4	LK SCREW (M14-2.00X30MM,EPXY)	
7	106-597	4	LK SCREW (M14-2.00X40MM,EPXY)	
8	106-383	8	FLG LK SCREW (M10-1.50 X 30MM)	
9	106-266	8	FLG NUT (M10-1.50)	
I0	105-475	4	WASHER (1/2")	
I1	106-700	4	SCREW (M12-1.75 X 80MM)	
I2	106-685	4	LOCKNUT(M12-1.75,PRV TRQ,10.9)	


NOT SHOWN:

FOOTNOTES:

NOTE:

01

ID0164753

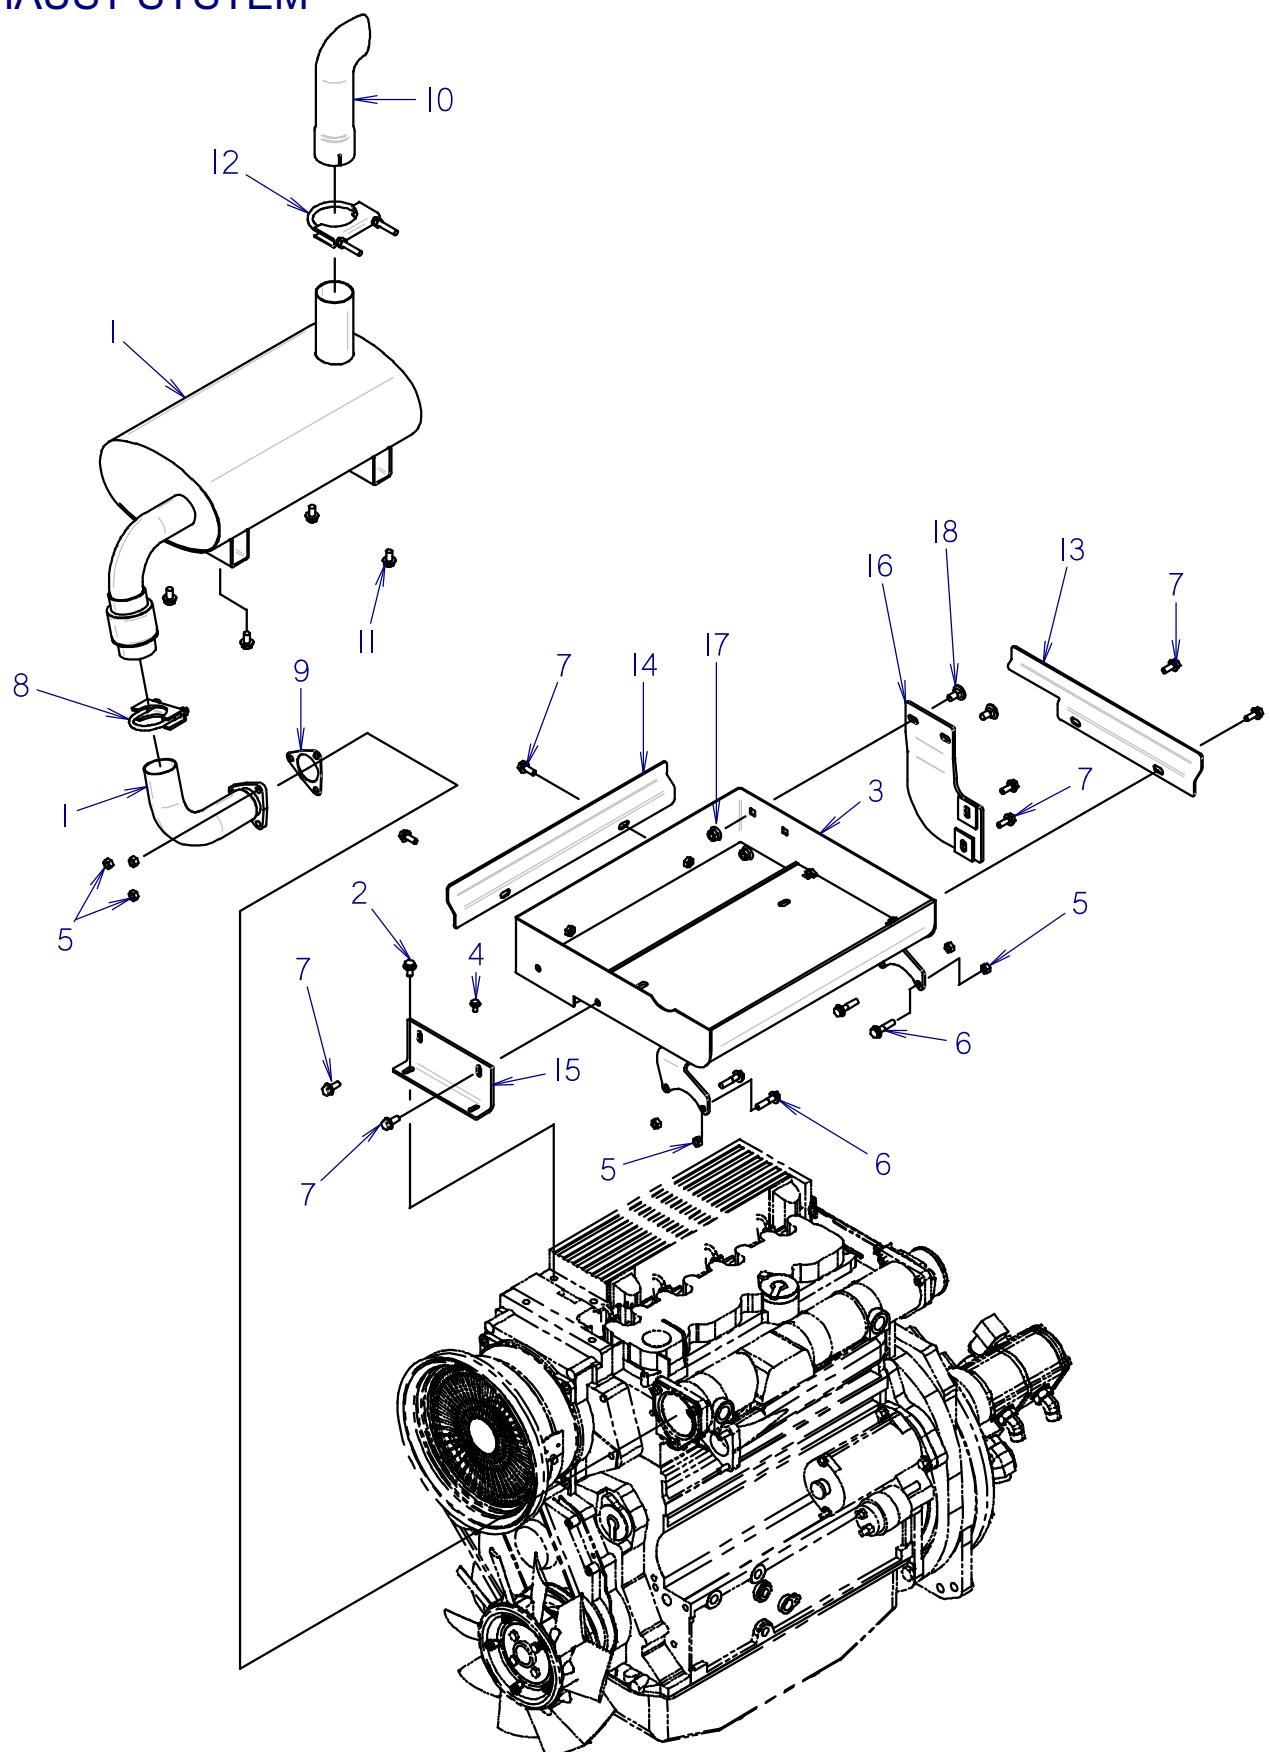EXHAUST SYSTEM

EXHAUST SYSTEM

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	I95-I050	1	MUFFLER	
2	I06-380	1	FLG LK SCREW (M8-1.25 X 16MM)	
3	300-282I	1	BLOWER BOX	
4	I06-378	1	FLG LK SCREW (M6-1.00 X 12MM)	
5	I06-078	7	NUT (M8-1.25)	
6	I06-989	4	FLG LK SCREW (M8-1.25 X 35MM)	
7	I06-162	8	FLG SCREW (M8-1.25 X 20MM, GD8)	
8	I95-II18	1	MUFFLER CLAMP (2")	
9	I94-438	1	EXHAUST GASKET	
I0	I95-I080	1	EXHAUST STACK	
I1	50I-I53	4	FLG LK BOLT (3/8-NC X 5/8")	
I2	I96-354	1	MUFFLER CLAMP (2.5")	
I3	300-409I	1	RETAINER	
I4	300-4090	1	RETAINER	
I5	300-28I4	1	TAB	
I6	300-4089	1	BOX SUPPORT	
I7	I06-387	2	FLG LOCKNUT (M10-1.50)	
I8	I07-700	2	CARRIAGE BOLT (M10-1.50X20MM)	

NOT SHOWN:


FOOTNOTES:

NOTE:

EXHAUST SYSTEM

JT922 T4i

BEGINS WITH S/M: CMWJT922P0000309

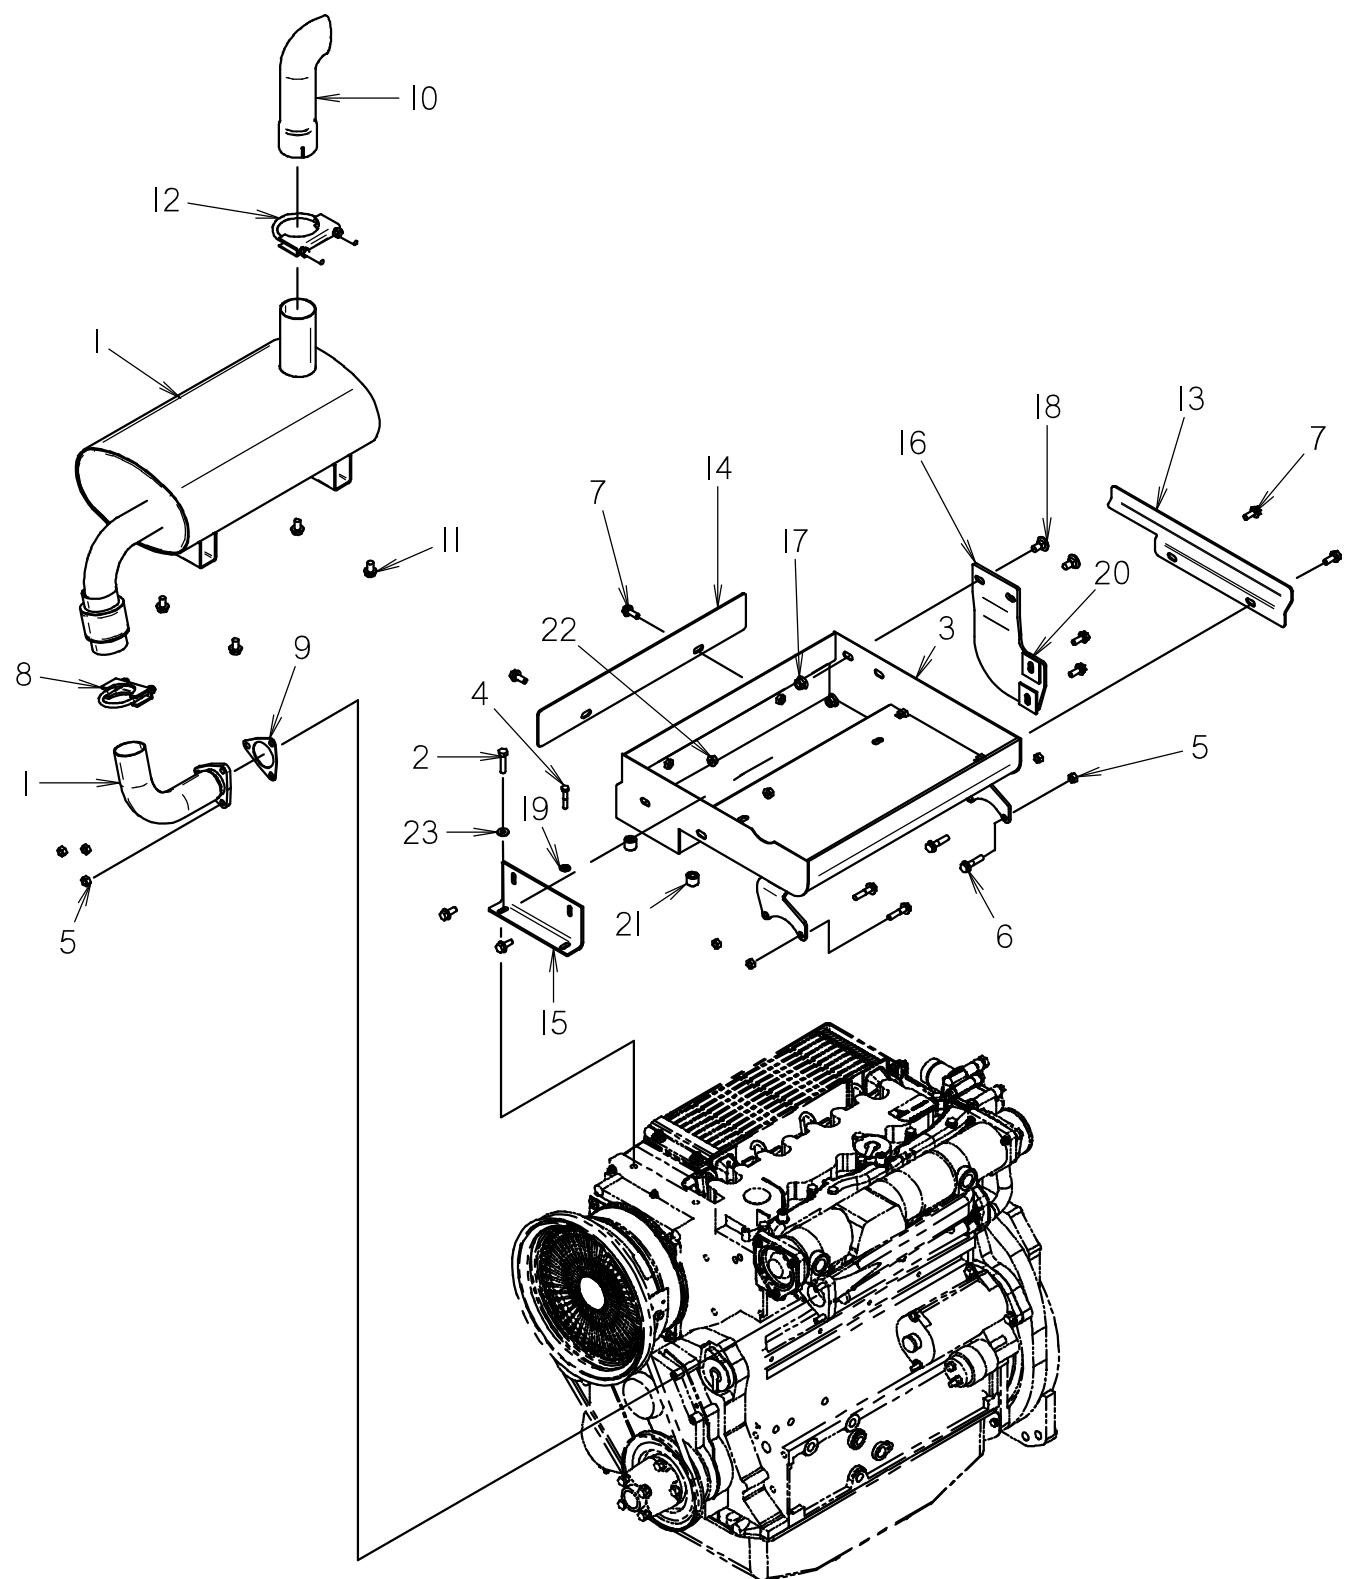

EXHAUST SYSTEM

JT922 T4i

BEGINS WITH S/M: CMWJT922P0000309


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	I95-I050	1	MUFFLER	
2	I07-492	1	SCREW (M8-I.25 X 35MM; ALL THD)	
3	300-4405	1	BLOWER BOX	
4	502-651	1	SCREW (M6-I.00 X 35MM)	
5	I06-078	7	NUT (M8-I.25)	
6	I06-989	4	FLG LK SCREW (M8-I.25 X 35MM)	
7	I06-162	8	FLG SCREW (M8-I.25 X 20MM, CD8)	
8	I95-II18	1	MUFFLER CLAMP (2")	
9	I94-438	1	EXHAUST GASKET	
I0	I95-I080	1	EXHAUST STACK	
I1	501-153	4	FLG LK BOLT (3/8-NC X 5/8")	
I2	I96-354	1	MUFFLER CLAMP (2.5")	
I3	300-4091	1	RETAINER	
I4	300-6960	1	RETAINER	
I5	300-2814	1	TAB	
I6	300-2820	1	BOX BRACKET	
I7	I06-387	2	FLG LOCKNUT (M10-I.50)	
I8	I07-700	2	CARRIAGE BOLT (M10-I.50X20MM)	
I9	I06-389	1	WASHER (M8)	
20	300-3614	2	PLATE SPACER	
21	300-7818	2	BUSHING, 3/4 OD	
22	I06-386	2	FLG LOCKNUT (M8-I.25)	
23	I05-095	1	WASHER (1/4")	

NOT SHOWN:

FOOTNOTES:

NOTE:

AIR FILTER

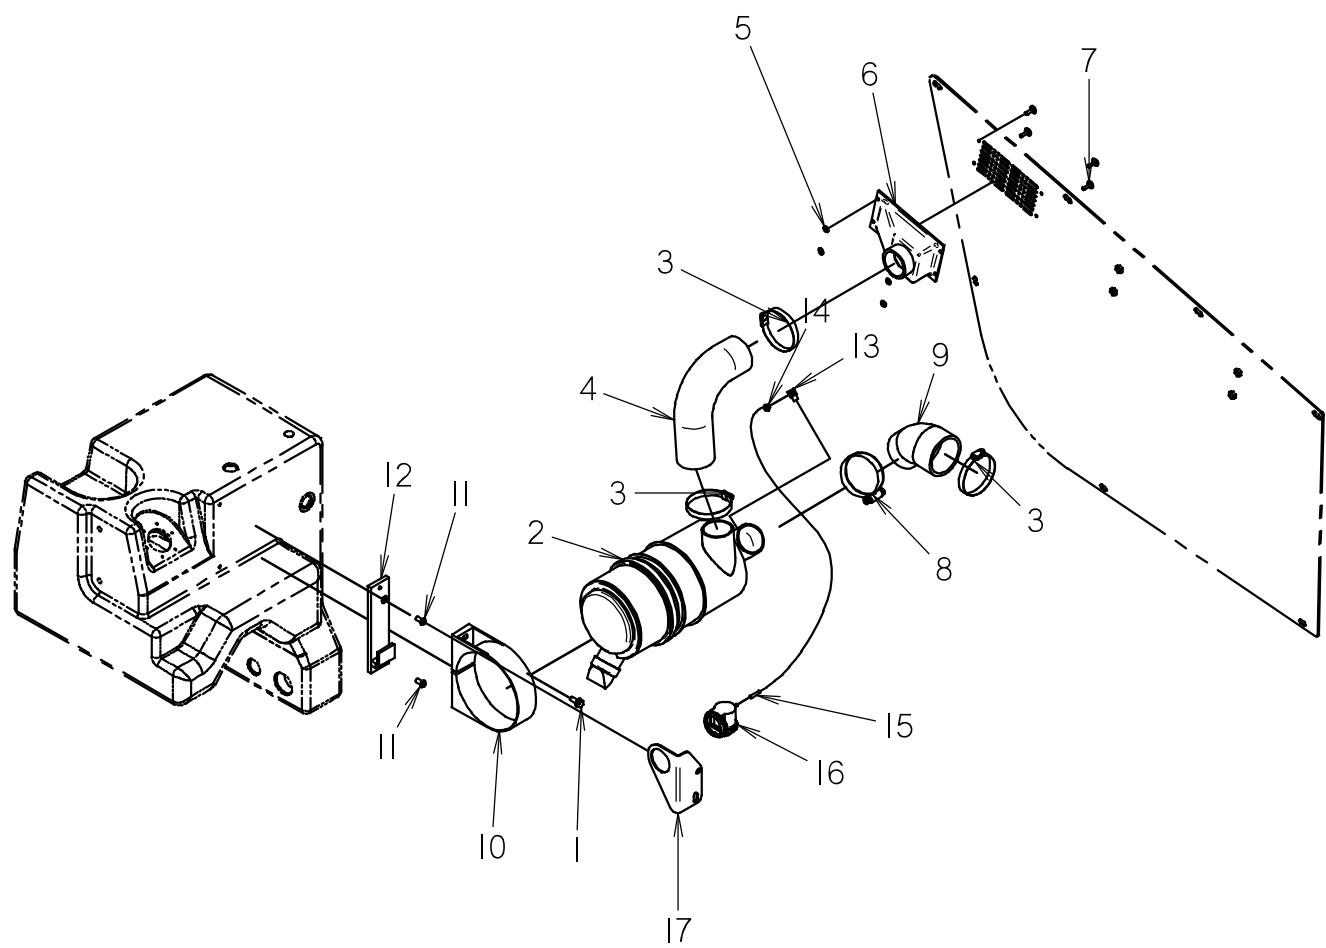

AIR FILTER

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	I06-I62	1	FLG SCREW (M8-1.25 X 20MM, CD8)	
2	I94-297	1	AIR FILTER	
3	II0-I69	3	WORM CLAMP (2.81/2" TO 3.750")	
4	I95-III7	1	AIR INTAKE HOSE	
5	I07-310	4	WASHER (#10)	
6	3I3-093	1	SHROUD, AIR INTAKE	
7	II0-348	4	POP RIVET (3/16" X .664")	
8	II0-311	1	WORM CLAMP (1-5/16" TO 3-1/4")	
9	I05-III4	1	AIR FILTER HOSE	
I0	I49-I65	1	MOUNTING CLAMP (6.79")	
II	I06-774	2	BOLT (M8-1.25 X 16MM,BUT SOCI)	
I2	300-3732	1	AIR FILTER BRACKET	
I3	I56-241	1	STREET ELBOW (02N-C2NF90)	
I4	I55-I50	1	S/O COUPLER (02N-02H)	
I5	II6-I92	14	BULK HOSE (7/64", SOLD PER FT)	
I6	2I5-I50	1	RESTRICTION INDICATOR(20",H2O)	
I7	300-4I56	1	BRACKET	

NOT SHOWN:


FOOTNOTES:

NOTE:

AIR FILTER

JT922 T4i

BEGINS WITH S/N: CMWJT922P0000309

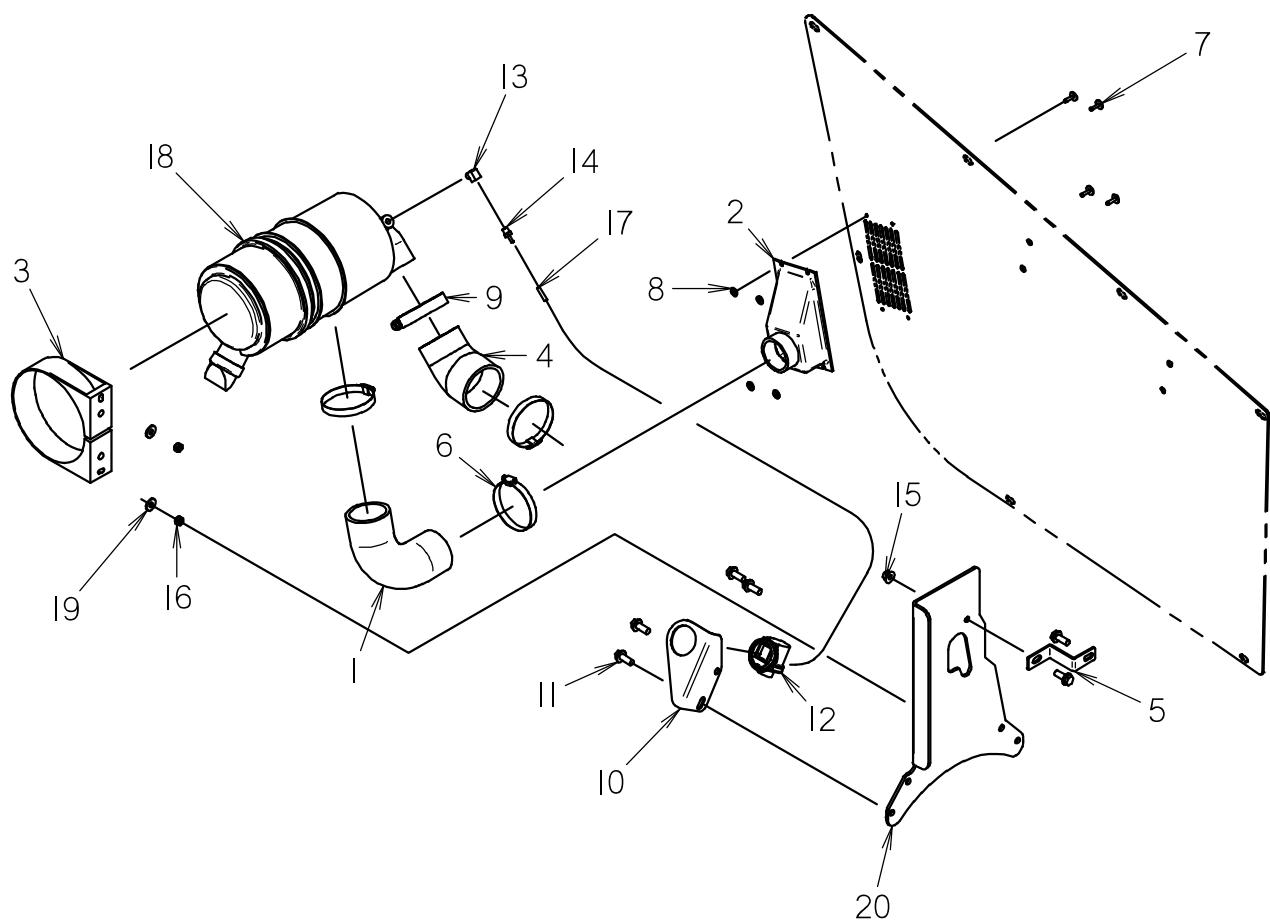

AIR FILTER

JT922 T4i


BEGINS WITH S/N: CMWJT922P0000309

REF PART NO.	NUMBER	QTY	DESCRIPTION	REMARKS
I	I95-I322	1	AIR INTAKE HOSE	
2	313-093	1	SHROUD, AIR INTAKE	
3	I49-I65	1	MOUNTING CLAMP (6.79")	
4	I05-II14	1	AIR FILTER HOSE	
5	300-6706	1	Clip Mount	
6	II0-I69	3	WORM CLAMP (2.812" TO 3.750")	
7	II0-348	4	POP RIVET (3/16" X .664")	
8	I05-284	4	WASHER (3/16")	
9	II0-311	1	WORM CLAMP (1-5/16" TO 3-1/4")	
I0	300-4I56	1	BRACKET	
II	I06-724	6	FLG SCREW (M10-1.50 X 25MM)	
I2	215-150	1	RESTRICTION INDICATOR(20" H2O)	
I3	156-241	1	STREET ELBOW (02N-C2NF90)	
I4	155-150	1	S/O COUPLER (02N-02H)	
I5	I06-266	1	FLG NUT (M10-1.50)	
I6	I05-089	2	LOCKNUT (5/16-NCI)	
I7	II6-I92	14	BULK HOSE (7/64", SOLD PER FT)	
I8	I94-297	1	AIR FILTER	
I9	I05-II7	2	WASHER (5/16")	
20	300-6961	1	FILTER MOUNT	

NOT SHOWN:

FOOTNOTES:

NOTE:

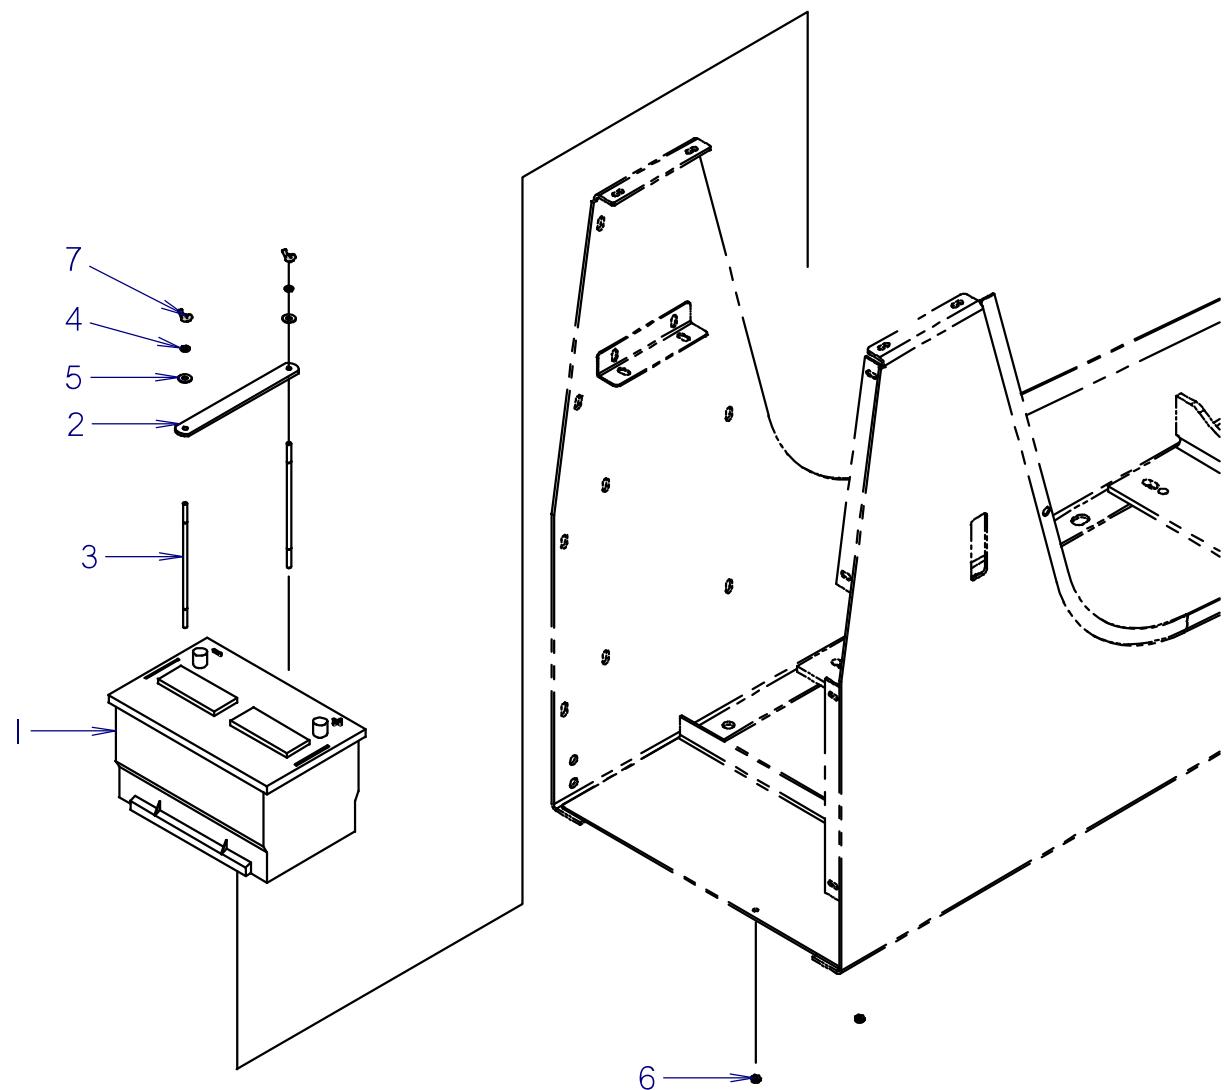BATTERY

BATTERY

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	213-104	1	BATTERY (12V, 875CCA)	
2	300-3379	1	BATTERY HOLD DOWN	
3	300-3380	2	TIE-DOWN ROD	
4	105-079	2	LOCK WASHER (1/4")	
5	105-095	2	WASHER (1/4")	
6	105-085	2	LOCKNUT (1/4"-NC)	
7	195-339	2	WING NUT (1/4-NC)	

NOT SHOWN:


FOOTNOTES:

NOTE:

BATTERY CABLES

T4I

BEGINS WITH S/N: CMWJT922P80000309

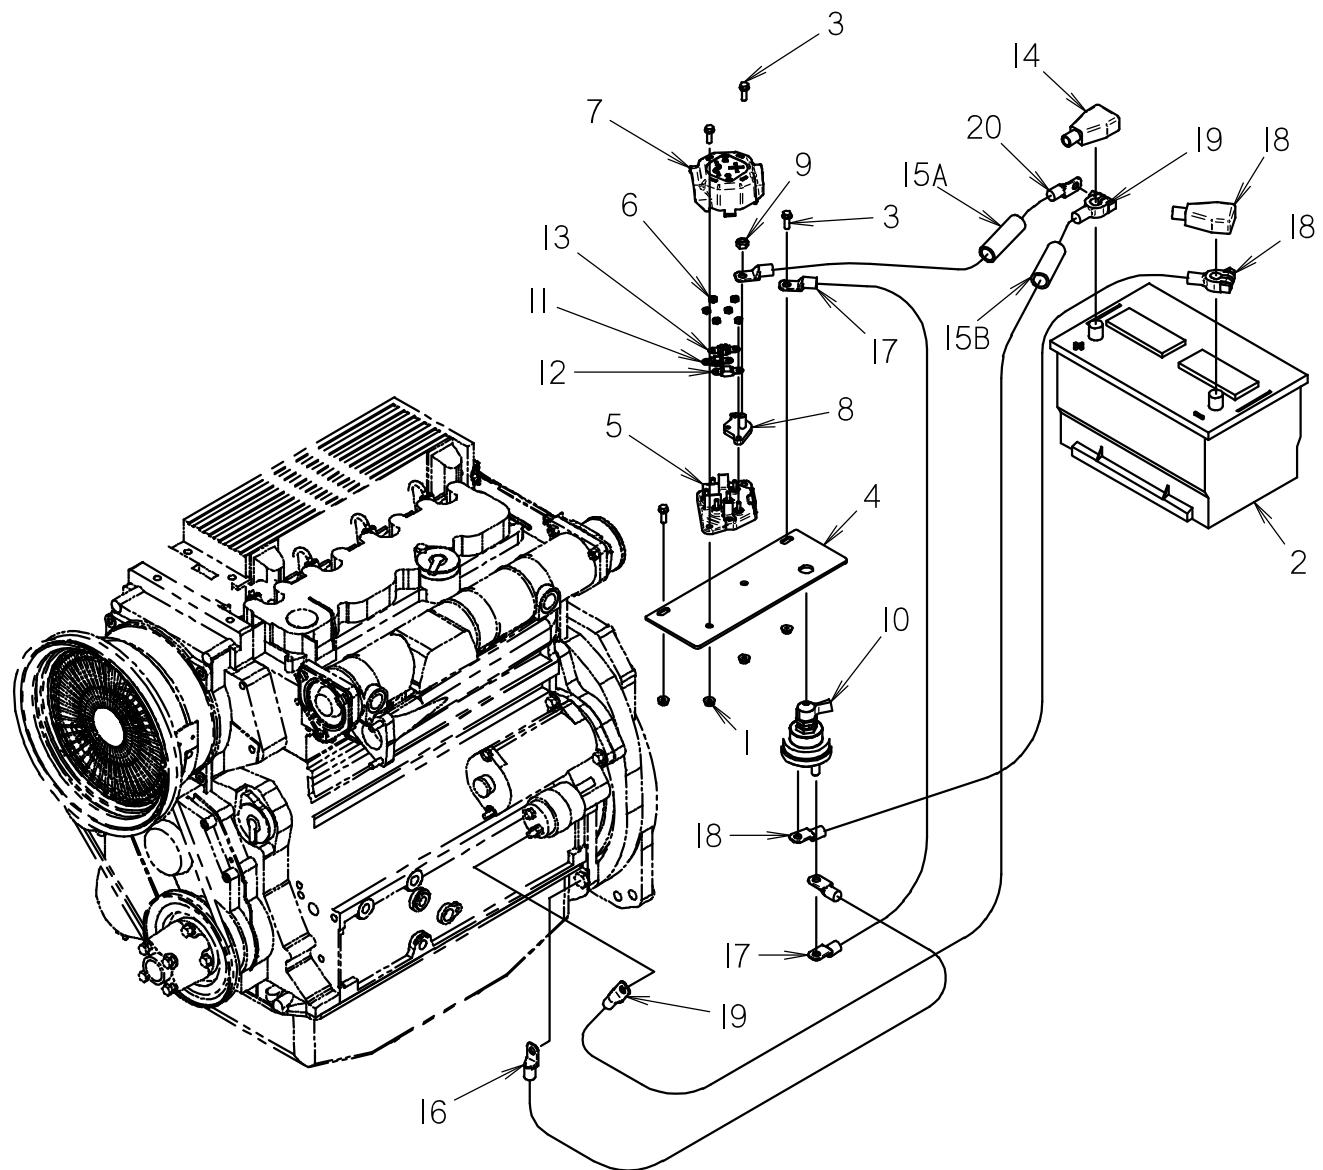

BATTERY CABLES

T4I

BEGINS WITH S/N: CMWJT922P80000309


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	105-832	4	FLG LOCKNUT (1/4-NC)	
2	213-104	1	BATTERY (12V, 875CCA)	
3	106-159	4	FLG SCREW (1/4-NC X 3/4")	
4	300-3263	1	BRACKET	
5	215-1009	1	MAIN FUSE HOLDER BASE	
6	106-048	6	LOCKNUT (#10-24)	
7	215-1010	1	MAIN FUSE HOLDER COVER	
8	215-1011	1	BUSSBAR (MAIN FUSE HOLDER)	
9	105-047	1	LOCKNUT (3/8-NC)	
I0	217-819	1	BATTERY DISCONNECT SWITCH	
I1	2II-1000	1	BK/AMI 80 AMP FUSE	
I2	2II-3II	1	BK/AMI 100 AMP FUSE	
I3	2II-3I0	1	BK/AMI 60 AMP FUSE	
I4	II6-I93	1	TERMINAL COVER (RED)	
I5	II6-389	75	BULK TUBING (3/4".SOLD PER FT)	I5A USE I @ 30", I5B USE I @ 45"
I6	215-1035	1	BAT CABLE (1 GA X 55", BLK)	
I7	213-002	1	BAT CABLE (6GA X 12.0", BLACK)	
I8	215-1029	1	BAT CABLE (1 GA X 28", BLK)	
I9	215-3I0	1	BAT CABLE (1 GA X 50", RED)	
I0	215-333	1	BAT CABLE (4 GA X 35", RED)	

NOT SHOWN:

FOOTNOTES:

NOTE:

FUEL TANK

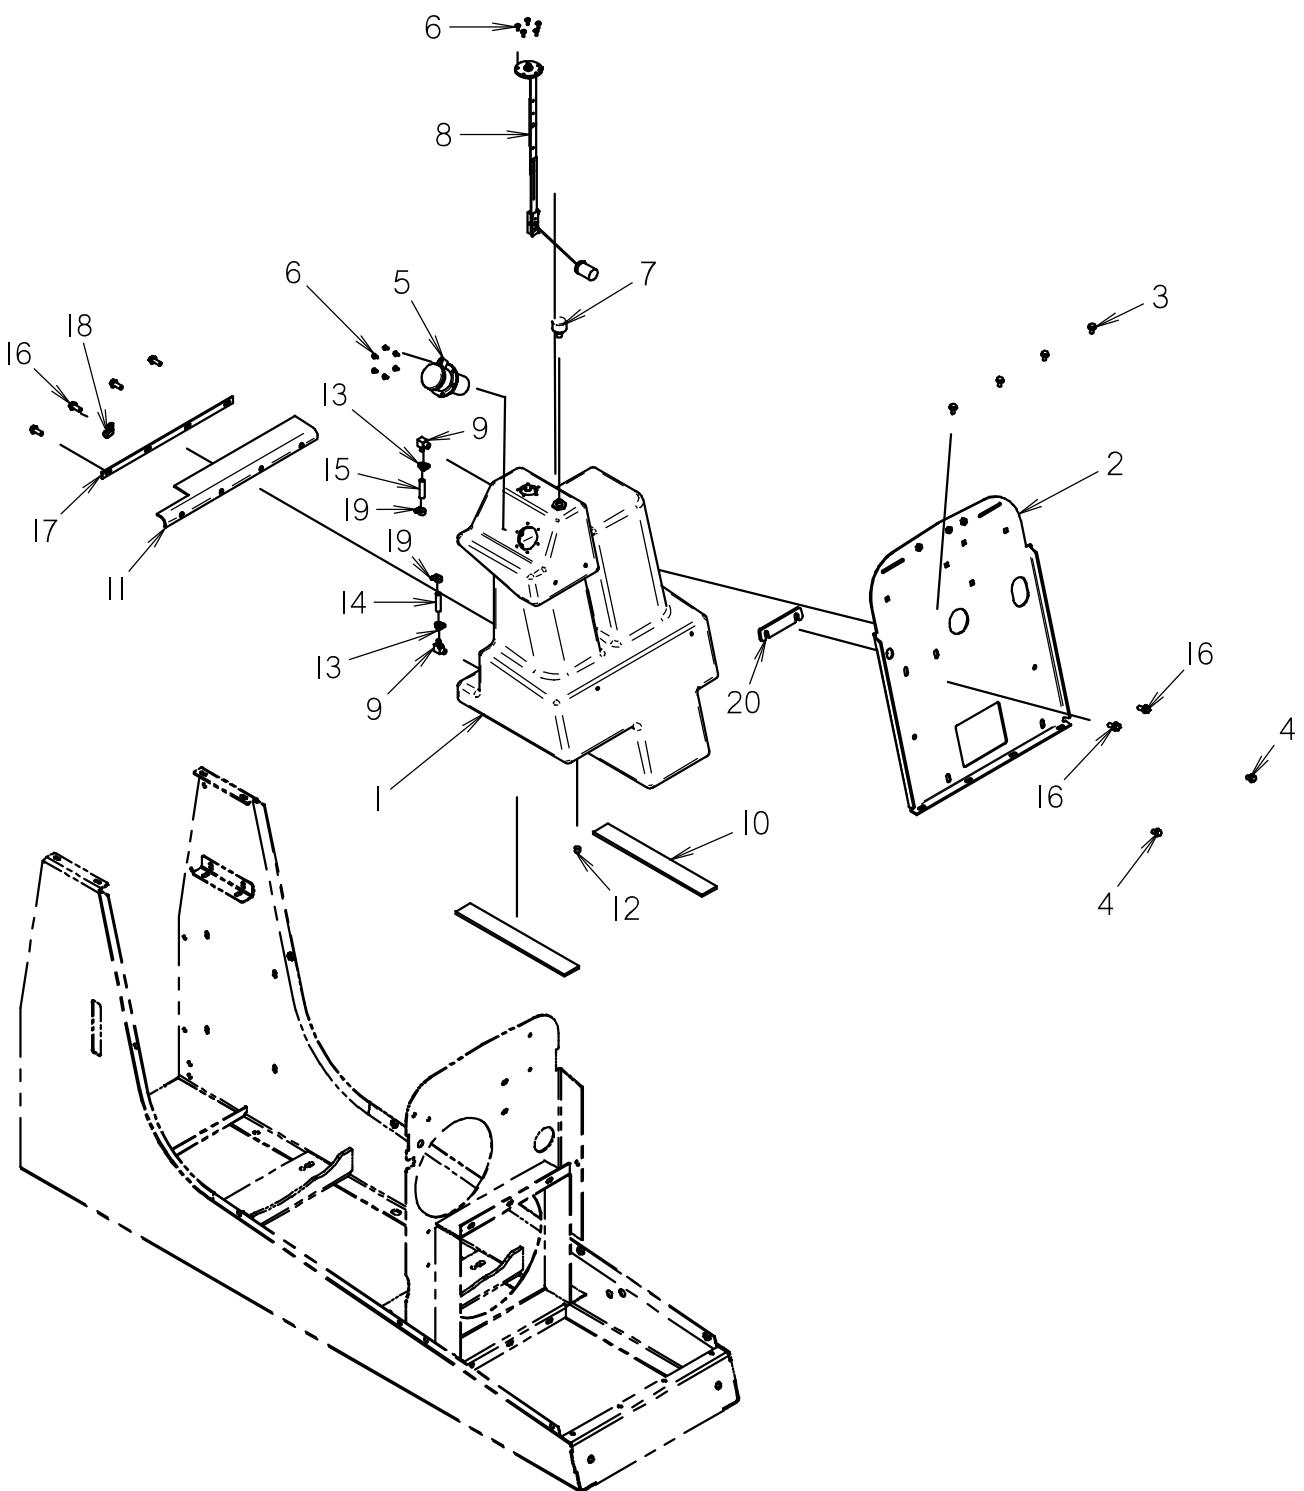

FUEL TANK

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	362-I077	1	FUEL TANK	
2	300-3903	1	FRONT FIREWALL WELDMENT	
3	106-380	4	FLG LK SCREW (M8-1.25 X 16MM)	
4	501-I53	2	FLG LK BOLT (3/8-NC X 5/8")	
5	364-567	1	FILL NECK	
6	I05-214	II	FLG SCREW (#10-24 X .5")	
7	III-021	1	BREATHER CAP (TANK)	
8	215-I362	1	FUEL SENDER	
9	I55-I64	2	S/O COUPLER (O4N-05H90)	
I0	II7-I009	2	SUPPORT MAT	
II	362-II26	1	RUBBER BELTING (.20" THICK)	
I2	II5-444	1	PLUG (O4N, SOC, SS)	
I3	II0-528	2	SNAP-ON CLAMP (.531" TO .593")	
I4	II6-I08	39	BULK HOSE (5/16", SOLD PER FT)	I @ 39"
I5	II6-I08	34	BULK HOSE (5/16", SOLD PER FT)	I @ 34"
I6	I05-826	6	FLG LK BOLT (3/8-NC X 1")	
I7	300-4088	1	SUPPORT BAR	
I8	II0-I26	1	BOLT-ON CLAMP (1/2")	
I9	II0-249	2	WORM CLAMP (1/4" TO 5/8")	
20	300-5006	1	SHIM	

NOT SHOWN:


FOOTNOTES:

NOTE:

II

ID0168926

ELECTRICAL COMPONENTS

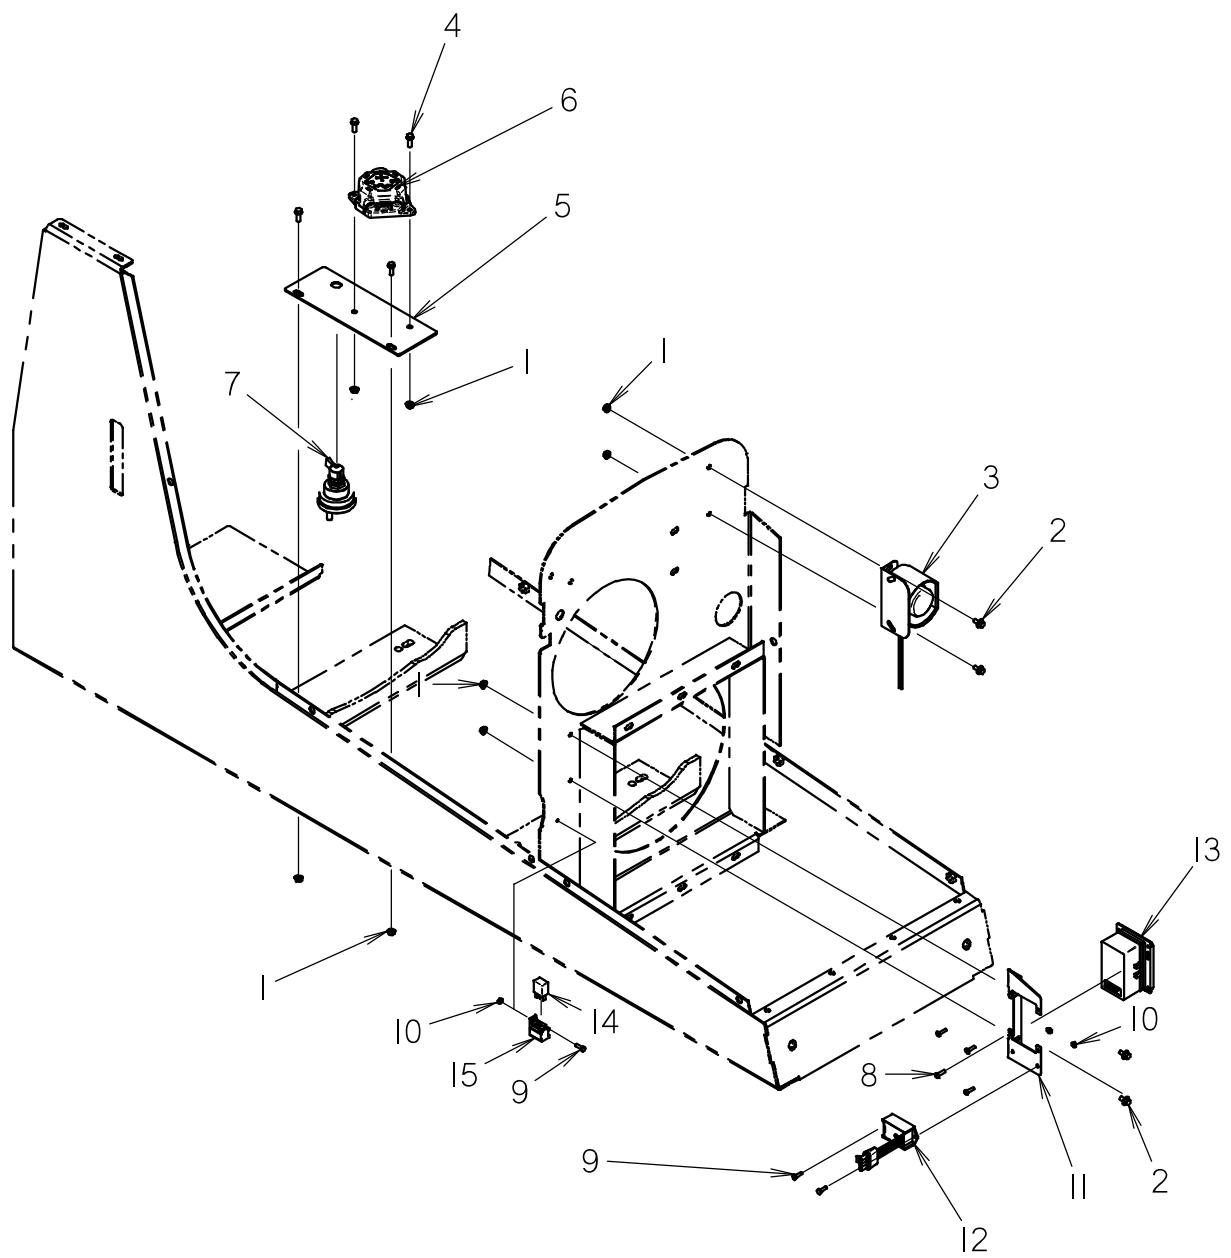

ELECTRICAL COMPONENTS


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	105-832	8	FLG LOCKNUT (1/4-NC)	
2	105-836	4	FLG LK BOLT (1/4-NC X 1/2")	
3	306-602	1	ALARM	
4	106-159	4	FLG SCREW (1/4-NC X 3/4")	
5	300-3263	1	BRACKET	
6	350-1616	1	MAIN FUSE HOLDER (3 BK/AMI FUSES)	
7	217-819	1	BATTERY DISCONNECT SWITCH	
8	105-649	4	BOLT (#10-32 X .75", BUTI)	
9	107-781	3	HEX SCREW (#10-24 X 5/8")	
I0	105-811	3	LOCKNUT (#10-24)	
I1	300-4086	1	MOUNTING BRACKET	
I2	217-937	1	START BYPASS DELAY TIMER	
I3	215-II77	1	JT922 ENGINE FRAME HARNESS	
I4	217-710	1	MICRO RELAY (SPDT)	BEGINS WITH S/N: CMWJT922JA0000402
I5	215-1566	1	JT922 HOME SWITCH HARNESS	BEGINS WITH S/N: CMWJT922JA0000402

NOT SHOWN:

FOOTNOTES:

NOTE:

FRONT ENGINE COVER

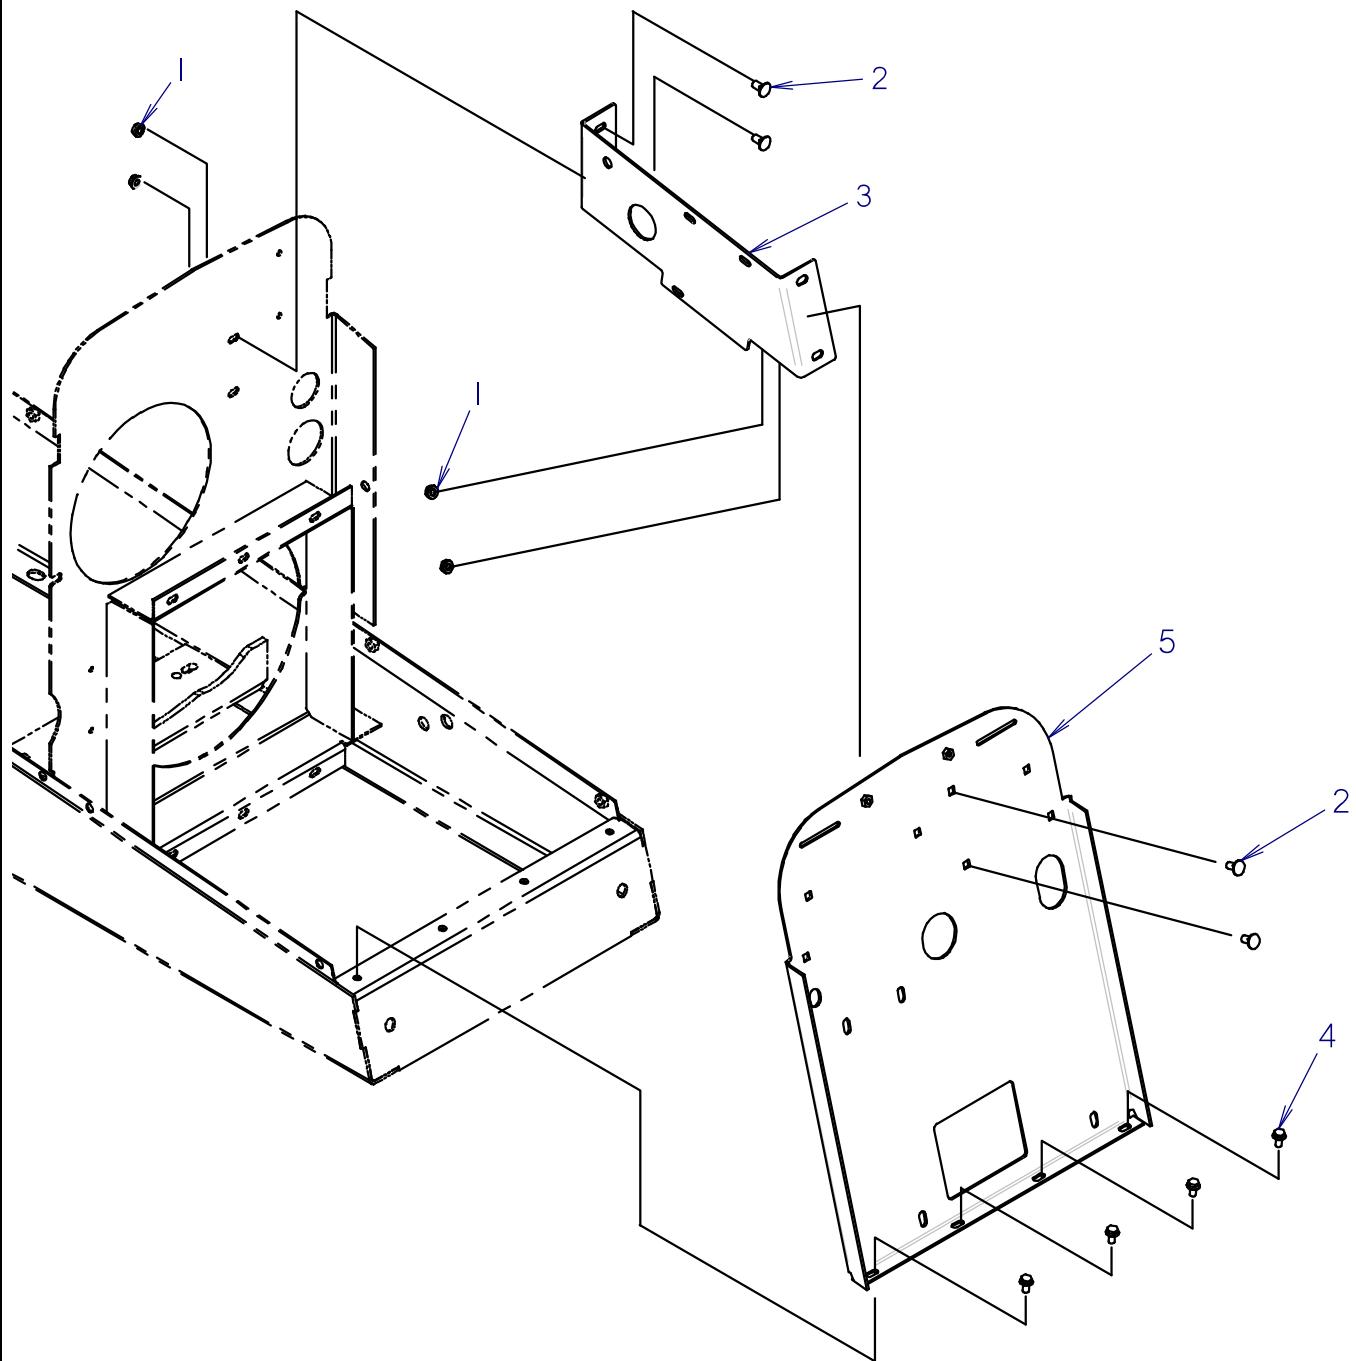


FRONT ENGINE COVER

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	105-834	4	FLG LOCKNUT (3/8-NC)	
2	105-835	4	CARRIAGE BOLT (3/8-NC X 3/4")	
3	300-2712	1	VALVE MOUNT	
4	106-380	4	FLG LK SCREW (M8-1.25 X 16MM)	
5	300-3903	1	FRONT FIREWALL WELDMENT	

NOT SHOWN:

FOOTNOTES:

NOTE:

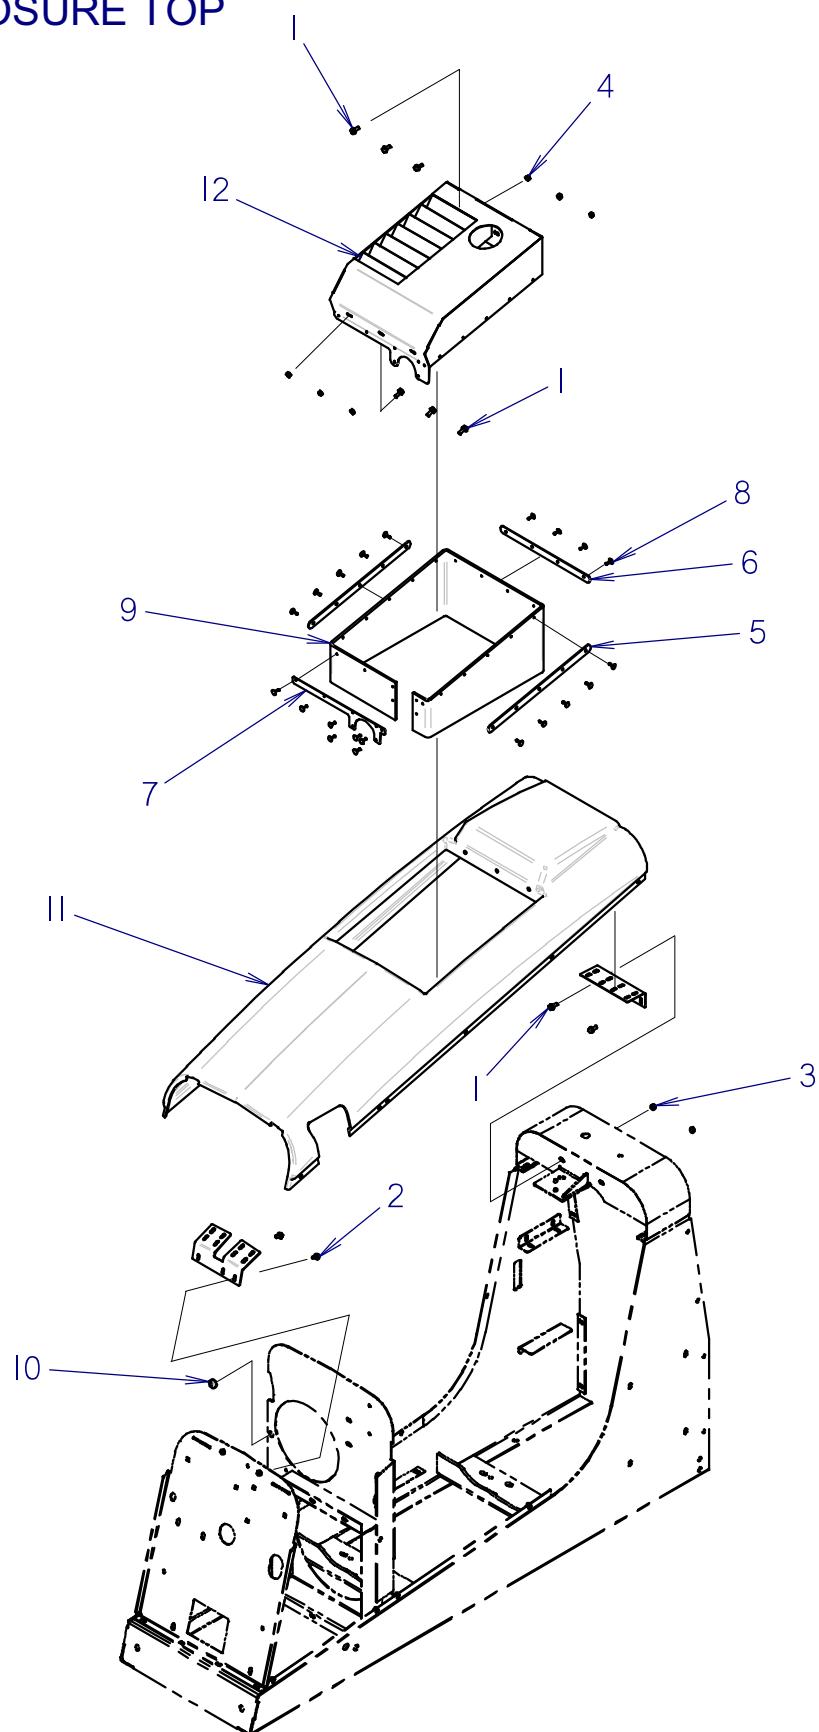ENGINE ENCLOSURE TOP

ENGINE ENCLOSURE TOP


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	106-162	8	FLG SCREW (M8-1.25 X 20MM, GD8)	
2	106-380	2	FLG LK SCREW (M8-1.25 X 16MM)	
3	106-386	2	FLG LOCKNUT (M8-1.25)	
4	106-561	6	LOCKNUT (M8-1.25, PRV TRQ, 10.9)	
5	300-3987	2	SIDE BACKING STRIP	
6	300-3989	1	REAR BACKING STRIP	
7	300-3988	1	FRONT BACKING STRIP	
8	II0-348	21	POP RIVET (3/16" X .664")	
9	362-II18	1	SKIRT	
10	II5-349	1	GROMMET (1/2")	
II	362-I082	1	HOOD ASSEMBLY	
I2	300-4734	1	LOUVER BOX	

NOT SHOWN:

FOOTNOTES:

NOTE:

ENGINE ENCLOSURE TOP
JT922 T4i
BEGINS WITH S/N: CMWJT922P0000309

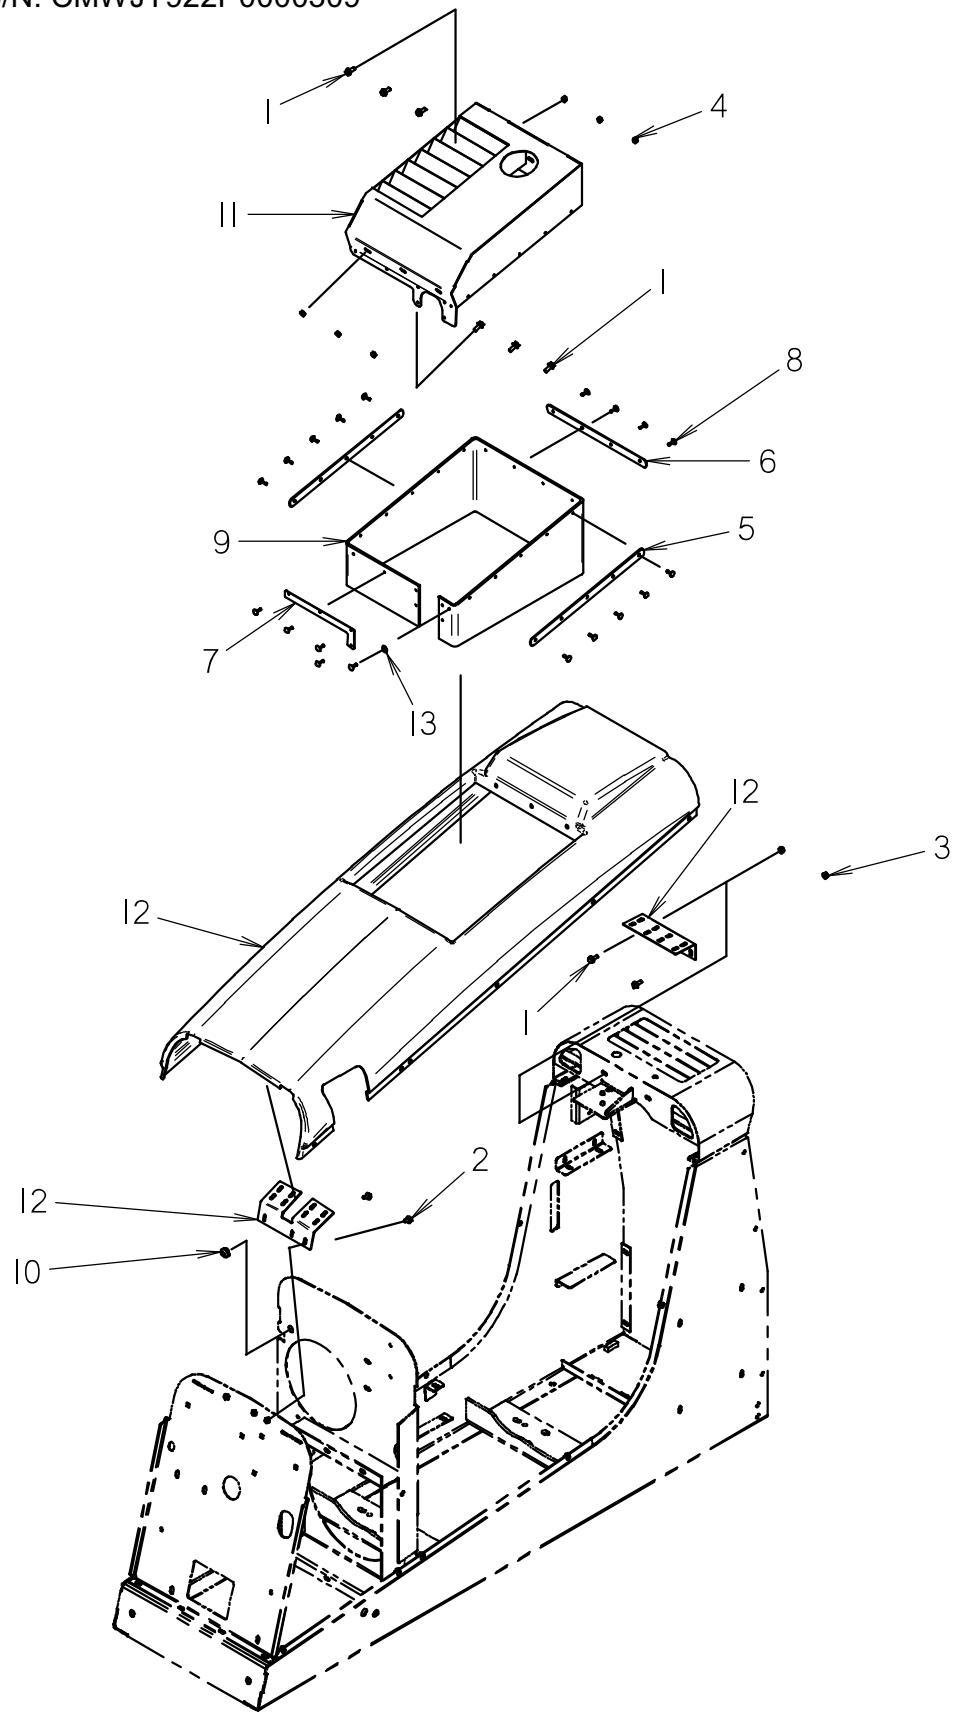

ENGINE ENCLOSURE TOP

JT922 T4i

BEGINS WITH S/N: CMWJT922P0000309


REF PART NO.	NUMBER	QTY	DESCRIPTION	REMARKS
I	106-I62	8	FLG SCREW (M8-1.25 X 20MM, GD8)	
2	106-380	2	FLG LK SCREW (M8-1.25 X 16MM)	
3	106-386	2	FLG LOCKNUT (M8-1.25)	
4	106-561	6	LOCKNUT (M8-1.25, PRV TRQ, 10.9)	
5	300-3987	2	SIDE BACKING STRIP	
6	300-3989	1	REAR BACKING STRIP	
7	300-3988	1	FRONT BACKING STRIP	
8	I10-348	19	POP RIVET (3/16" X .664")	
9	362-II18	1	SKIRT	
I0	I15-349	1	GROMMET (1/2")	
I1	300-4734	1	LOUVER BOX	
I2	362-I082	1	HOOD ASSEMBLY	
I3	105-095	1	WASHER (1/4")	

NOT SHOWN:

FOOTNOTES:

NOTE:

ENGINE ENCLOSURE

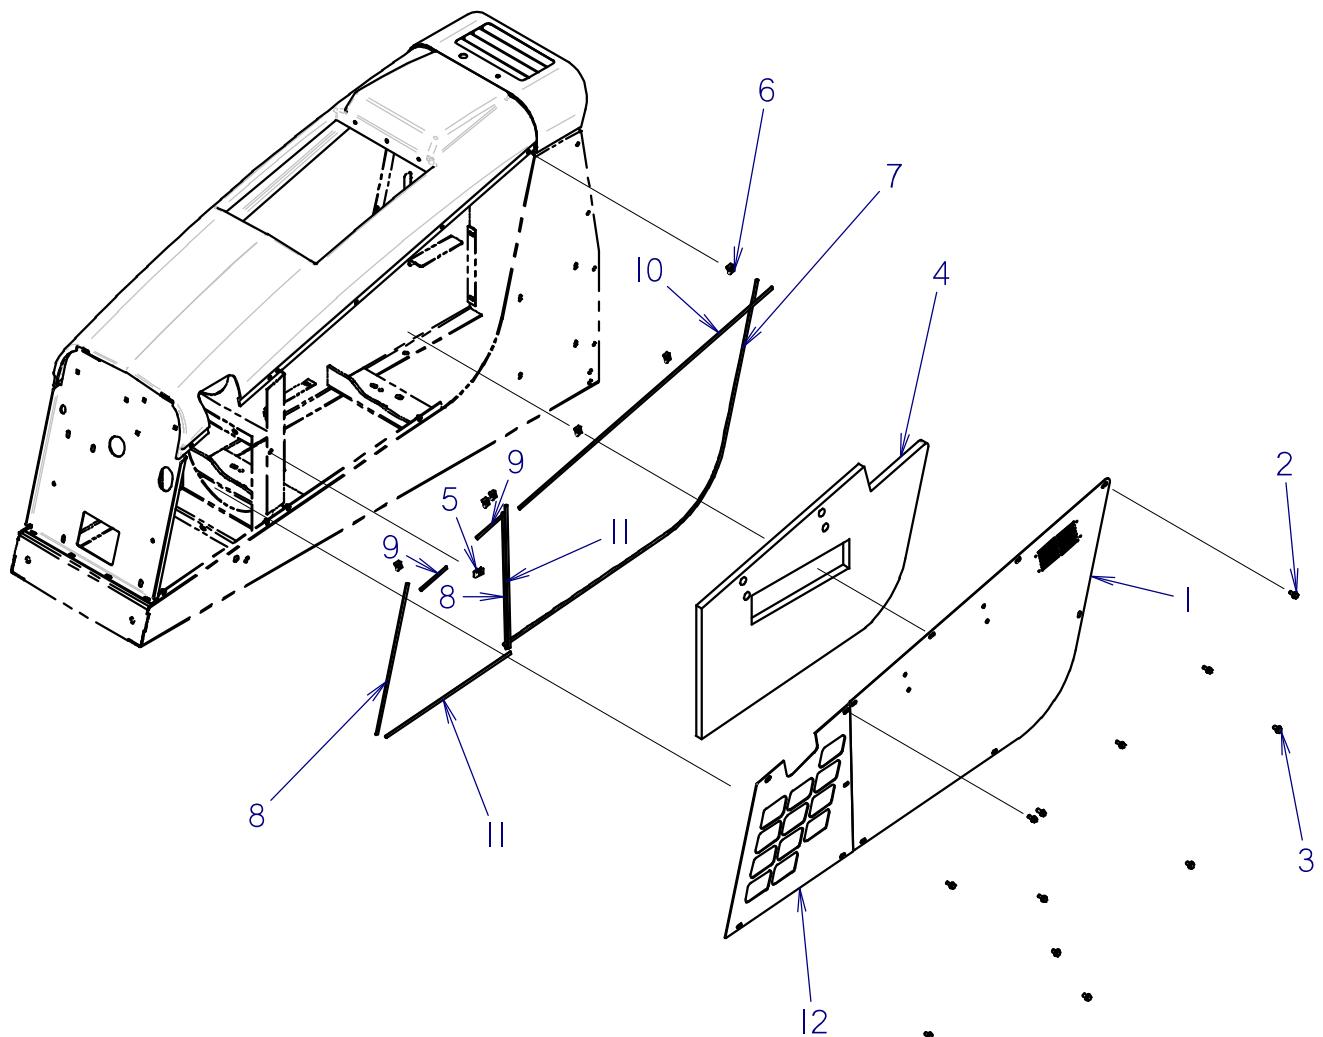

ENGINE ENCLOSURE

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	300-3612	1	REAR FIXED PANEL WELDMENT	
2	I06-162	7	FLG SCREW (M8-1.25 X 20MM, GD8)	
3	I07-585	5	FLG LK SCREW (M10-1.50 X 16MM)	
4	362-I203	1	LEFT PANEL INSULATION	
5	I07-135	1	CLIP NUT (M8-1.25)	
6	I06-551	6	CLIP NUT (M8-1.25)	
7	II6-724	83	BULK SEAL (3/32", SOLD PER FT.)	
8	II6-724	40	BULK SEAL (3/32", SOLD PER FT)	2 @ 20"
9	II6-724	9	BULK SEAL (3/32", SOLD PER FT)	I @ 4", I @ 5"
I0	II6-724	44	BULK SEAL (3/32", SOLD PER FT)	
II	II6-724	42	BULK SEAL (3/32", SOLD PER FT)	2 @ 21"
I2	300-6538	1	ACCESS PANEL	

NOT SHOWN:


FOOTNOTES:

NOTE:

ENGINE ENCLOSURE

JT922 T4i

BEGINS WITH S/N: CMWJT922P80000309

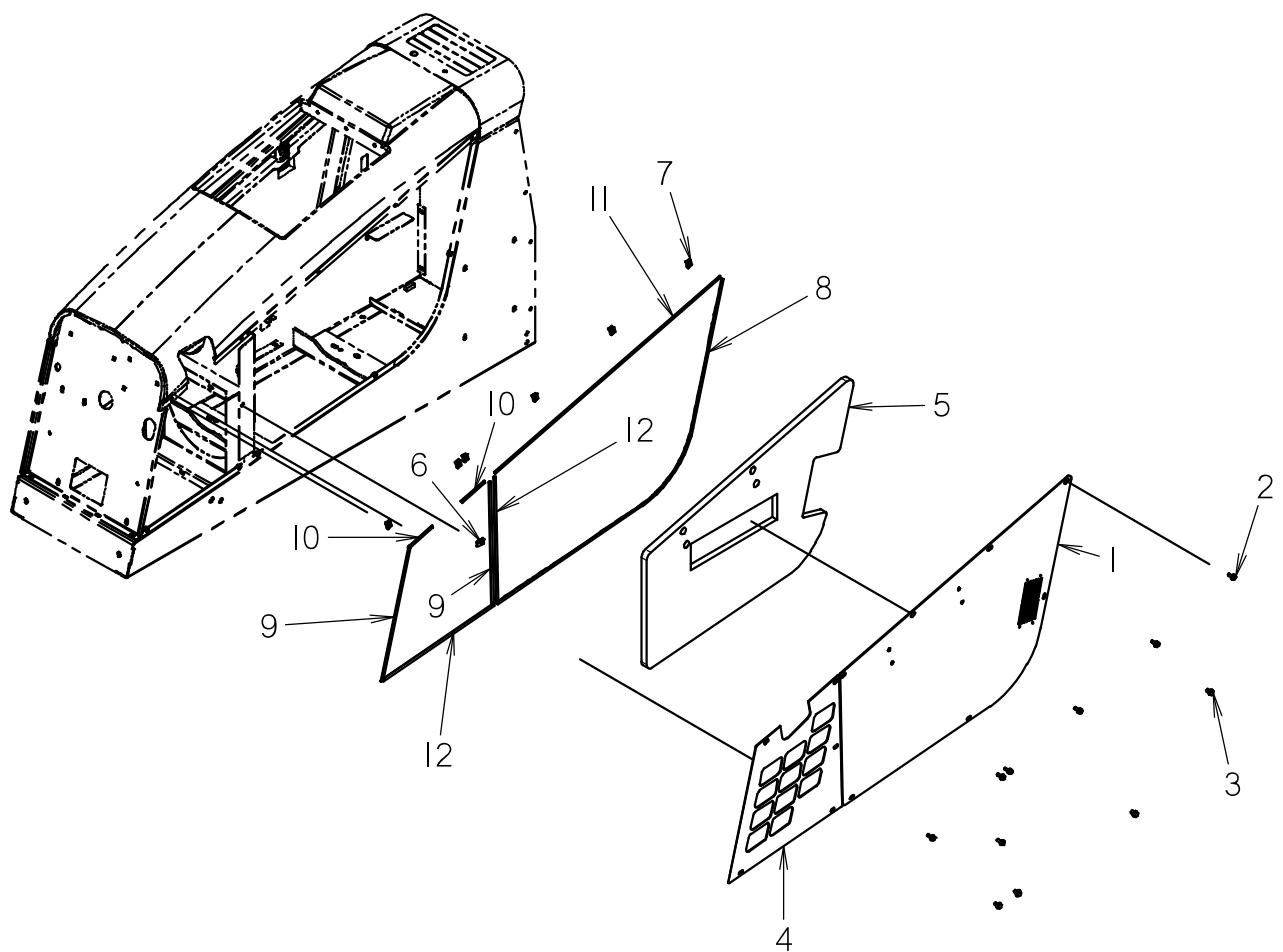

ENGINE ENCLOSURE

JT922 T4i

BEGINS WITH S/N: CMWJT922P80000309

REF PART NO.	NUMBER	QTY	DESCRIPTION	REMARKS
I	300-6709	1	REAR FIXED PANEL WELDMENT	
2	I06-I62	7	FLG SCREW (M8-1.25 X 20MM, CD8)	
3	I07-585	5	FLG LK SCREW (M10-1.50 X 16MM)	
4	300-6538	1	ACCESS PANEL	
5	362-I276	1	LEFT PANEL INSULATION	
6	I07-135	1	CLIP NUT (M8-1.25)	
7	I06-551	6	CLIP NUT (M8-1.25)	
8	I16-724	83	BULK SEAL (3/32", SOLD PER FT.)	
9	I16-724	40	BULK SEAL (3/32", SOLD PER FT.)	2 @ 20"
I0	I16-724	9	BULK SEAL (3/32", SOLD PER FT.)	1 @ 4", 1 @ 5"
I1	I16-724	44	BULK SEAL (3/32", SOLD PER FT.)	
I2	I16-724	42	BULK SEAL (3/32", SOLD PER FT.)	2 @ 21"


NOT SHOWN:

FOOTNOTES:

NOTE:

ENGINE ACCESS PANEL

ENDS WITH S/N: CMWJT922C80000324

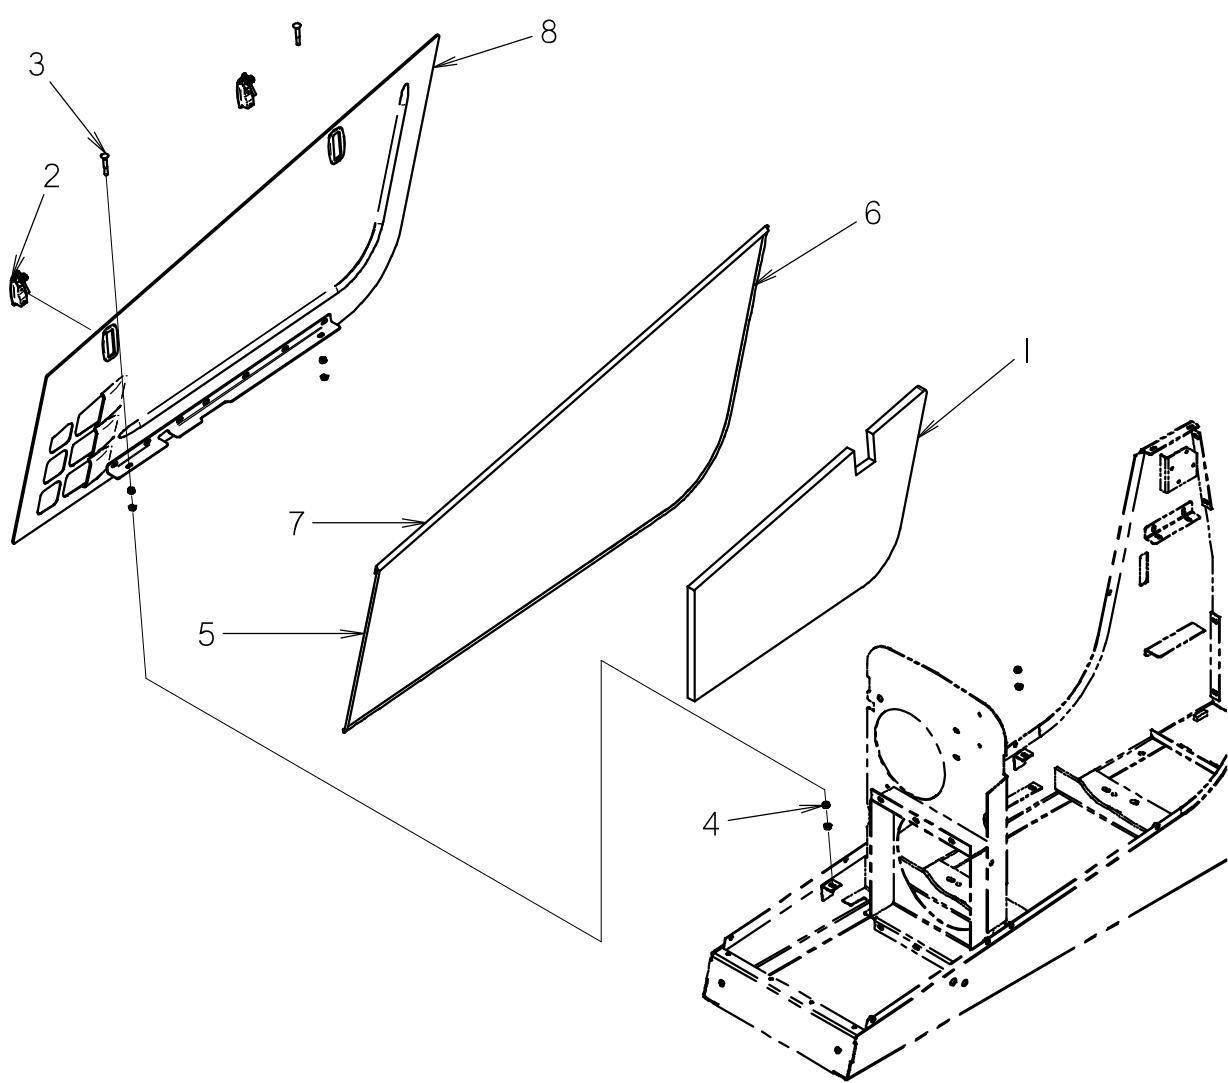

ENGINE ACCESS PANEL
ENDS WITH S/N: CMWJT922C80000324

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	362-1204	1	RIGHT PANEL INSULATION	
2	II7-558	2	LATCH, ADJUST LEVER (LOCKING)	
3	105-882	2	CARRIAGE BOLT(3/8-NC X 2-1/2")	
4	105-834	8	FLG LOCKNUT (3/8-NC)	
5	II6-724	19	BULK SEAL (3/32" SOLD PER FT.)	I @ 19"
6	II6-724	85	BULK SEAL (3/32", SOLD PER FT)	I @ 85"
7	II8-183	62	BULK EDGE (SOLD PER INCH)	I @ 62"
8	362-III6	1	SIDE PANEL ASSEMBLY	


NOT SHOWN:

FOOTNOTES:

NOTE:

ENGINE ACCESS PANEL

BEGINS WITH S/N: CMWJT922T80000325

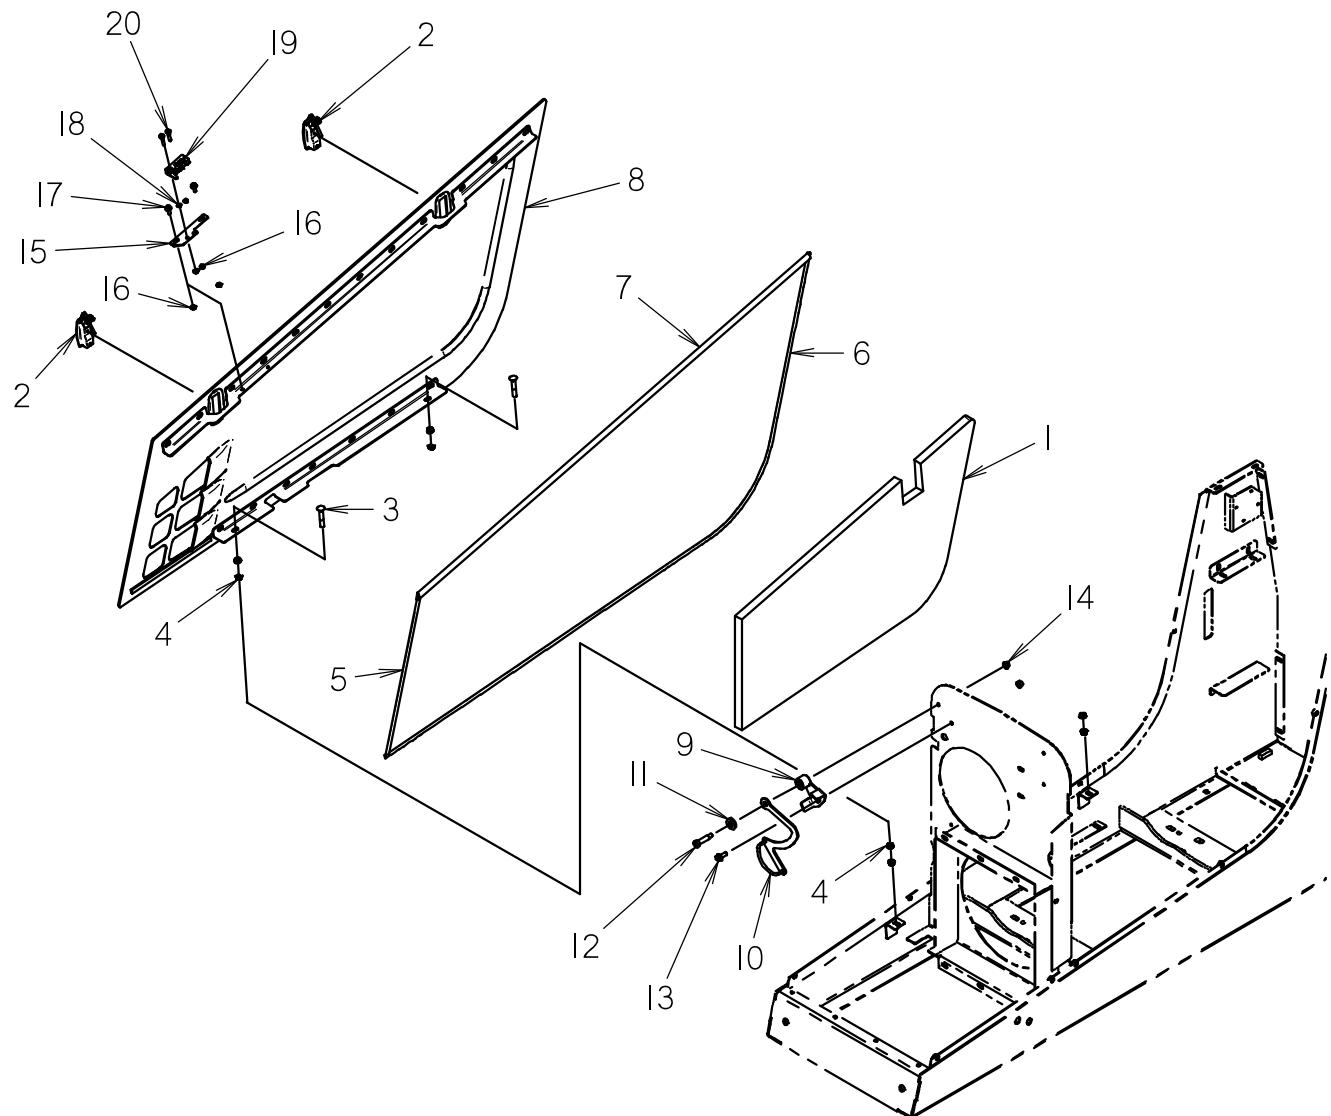

ENGINE ACCESS PANEL

BEGINS WITH S/N: CMWJT922T80000325


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	362-I204	1	RIGHT PANEL INSULATION	
2	I17-558	2	LATCH, ADJUST LEVER (LOCKING)	
3	I05-882	2	CARRIAGE BOLT (3/8-NC X 2-1/2")	
4	I05-834	8	FLG LOCKNUT (3/8-NC)	
5	I16-724	19	BULK SEAL (3/32" SOLD PER FT.)	I @ 19"
6	I16-724	85	BULK SEAL (3/32", SOLD PER FT)	I @ 85"
7	I18-I83	62	BULK EDGE (SOLD PER INCH)	I @ 62"
8	362-III6	1	SIDE PANEL ASSEMBLY	
9	300-8350	1	MOUNT PLATE	
I0	300-8344	1	LATCH BAR	
I1	I06-784	1	WASHER	
I2	I06-I32	1	SHLD BLT (1/2" X 1-1/2", 3/8-NC)	
I3	I05-826	1	FLG LK BOLT (3/8-NC X 1")	
I4	I06-I94	2	FLANGE LOCKNUT (3/8-NC)	
I5	300-8286	1	LATCH MOUNT	
I6	I05-085	4	LOCKNUT (1/4"-NC)	
I7	I05-820	2	FLG LK BOLT (1/4-NC X 3/4")	
I8	I05-079	2	LOCK WASHER (1/4")	
I9	I05-I368	1	HOOD LATCH	
I0	I05-856	2	BOLT (1/4-NC X 1 1/4")	

NOT SHOWN:

FOOTNOTES:

NOTE:

REAR COVER

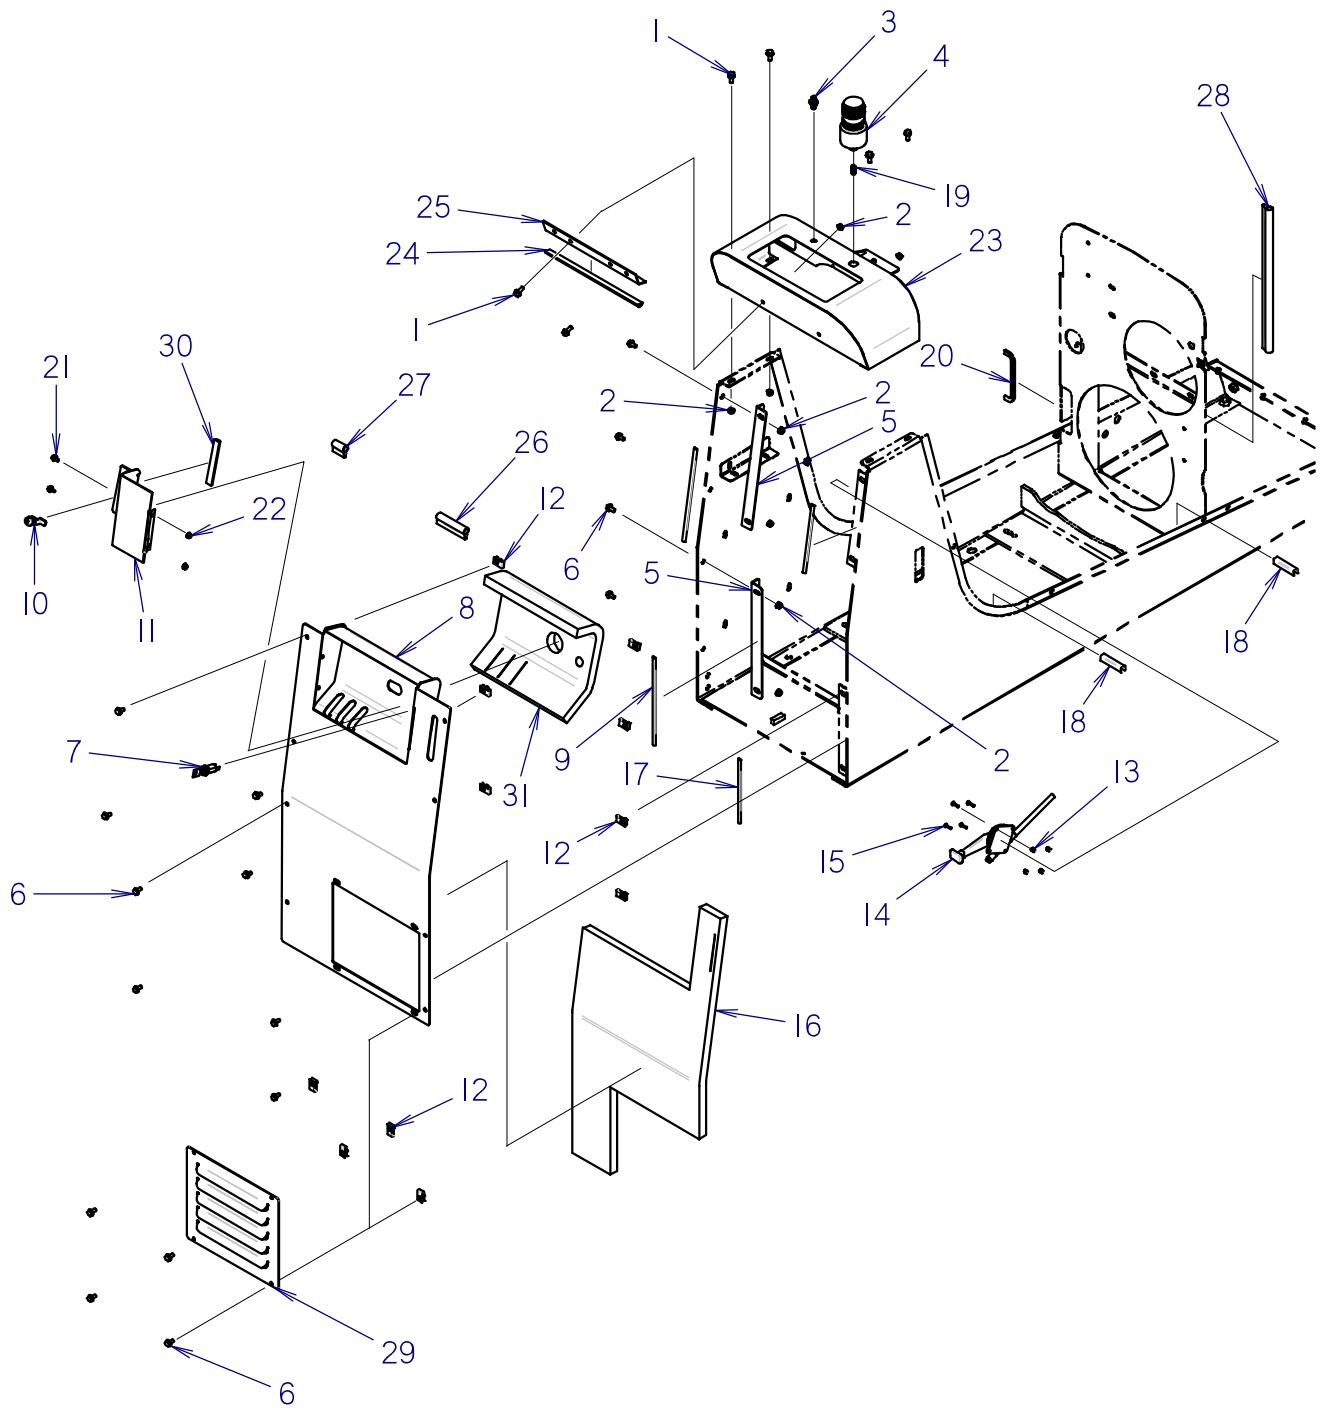

REAR COVER

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	I06-162	8	FLG SCREW (M8-1.25 X 20MM, GD8)	
2	I06-386	9	FLG LOCKNUT (M8-1.25)	
3	II-055	1	ANTENNA BULKHEAD CONNECTOR	
4	I17-296	1	STROBE LIGHT (AMBER)	
5	300-3359	2	BRACKET	
6	I06-380	16	FLG LK SCREW (M8-1.25 X 16MM)	
7	214-908	1	ON-OFF KEY SWITCH	
8	300-3382	1	REAR COVER	
9	II6-724	22	BULK SEAL (3/32", SOLD PER FT.)	2 @ II"
I0	II7-915	1	CAM LOCK	
II	300-3962	1	DOOR WELDMENT	
I2	I07-135	II	CLIP NUT (M8-1.25)	
I3	I06-055	4	#I0-24 NC NUTSERT	
I4	I94-549	1	THROTTLE CONTROL CABLE	
I5	I06-049	4	BOLT (#I0-24 X 3/4", PLPS)	
I6	I05-II61	1	REAR PANEL INSULATION	
I7	II6-724	16	BULK SEAL (3/32", SOLD PER FT.)	2 @ 8"
I8	II6-259	8	BULK EDGE (1/2", SOLD PER FT)	2 @ 4"
I9	I16-026	14	FLEX-GUARD (25")	
20	II5-671	9	BULK EDGE (1/16", SOLD PER 1")	
21	I05-836	2	FLG LK BOLT (1/4-NC X 1/2")	
22	I05-832	2	FLG LOCKNUT (1/4-NC)	
23	300-6530	1	ARCH	
24	II8-I83	14	BULK EDGE (SOLD BY FOOT)	
25	300-6006	1	SEAL BRACKET	
26	II6-421	4	BULK EDGE (1/8", SOLD PER 1")	
27	II6-421	2	BULK EDGE (1/8", SOLD PER 1")	
28	II6-421	18	BULK EDGE (1/8", SOLD PER 1")	
29	300-6007	1	BATTERY COVER	
30	II8-I83	5	BULK EDGE (SOLD BY FOOT)	
31	362-I237	1	INSULATION	

NOT SHOWN:


FOOTNOTES:

NOTE:

REAR COVER

JT922 T4i

BEGINS WITH S/N: CMWJT922P80000309

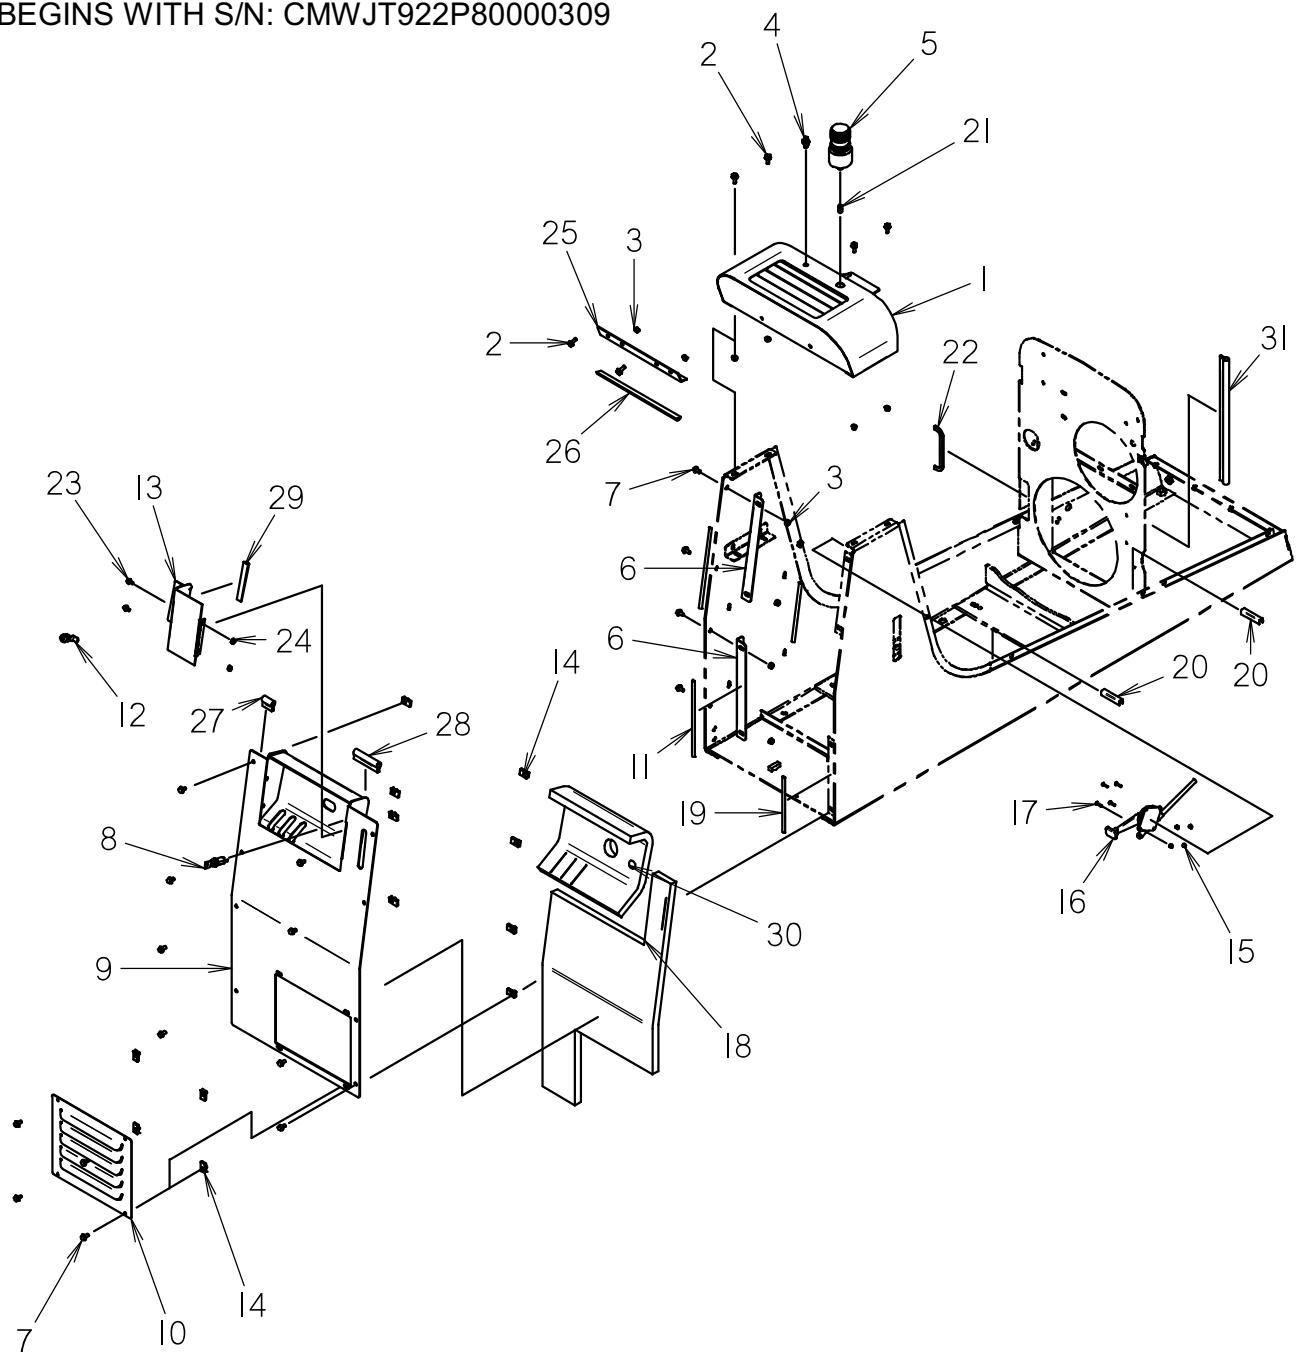

REAR COVER

JT922 T4i

BEGINS WITH S/N: CMWJT922P80000309


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	300-7596	1	ARCH	
2	I06-162	6	FLG SCREW (M8-1.25 X 20MM, GD8)	
3	I06-386	10	FLG LOCKNUT (M8-1.25)	
4	211-055	1	ANTENNA BULKHEAD CONNECTOR	
5	217-296	1	STROBE LIGHT (AMBER)	
6	300-3359	2	BRACKET	
7	I06-380	16	FLG LK SCREW (M8-1.25 X 16MM)	
8	214-908	1	ON-OFF KEY SWITCH	
9	300-3382	1	REAR COVER	
I0	300-6007	1	BATTERY COVER	
I1	I16-724	22	BULK SEAL (3/32", SOLD PER FT.)	2 @ 22"
I2	I17-915	1	CAM LOCK	KEY, PAIR 214-961
I3	300-3962	1	DOOR WELDMENT	
I4	I07-I35	12	CLIP NUT (M8-1.25)	
I5	I06-055	4	#10-24 NC NUTSERT	
I6	I95-I501	1	THROTTLE CONTROL CABLE	SEE FOOTNOTE I
I7	I06-049	4	BOLT (#10-24 X 3/4", PLPSI)	
I8	I05-I161	1	REAR PANEL INSULATION	
I9	I16-724	16	BULK SEAL (3/32", SOLD PER FT.)	2 @ 8"
I0	I16-259	8	BULK EDGE (1/2", SOLD PER FT)	2 @ 4"
I1	I26-026	14	FLEX-GUARD (.25")	
I2	I15-671	9	BULK EDGE (1/16", SOLD PER 1')	
I3	I05-836	2	FLG LK BOLT (1/4-NC X 1/2")	
I4	I05-832	2	FLG LOCKNUT (1/4-NC)	
I5	300-6006	1	SEAL BRACKET	
I6	I18-I83	14	BULK EDGE (SOLD BY FOOT)	
I7	I16-421	2	BULK EDGE (1/8", SOLD PER 1')	
I8	I16-421	4	BULK EDGE (1/8", SOLD PER 1')	
I9	I18-I83	5	BULK EDGE (SOLD BY FOOT)	
I0	362-I237	1	INSULATION	
I1	I16-421	18	BULK EDGE (1/8", SOLD PER 1')	

NOT SHOWN:

FOOTNOTES:

- I. IF REPLACING THROTTLE CABLE, ORDER KIT I90-I467, WHICH INCLUDES THROTTLE CABLE I95-I501, SPRING I15-615, AND WASHERS I07-310. SEE PARTS PAGE ID0205412 FOR LOCATION OF THE SPRING AND WASHERS, AND INSTALLATION INSTRUCTIONS ID0230528 FOR DETAILS.

NOTE:

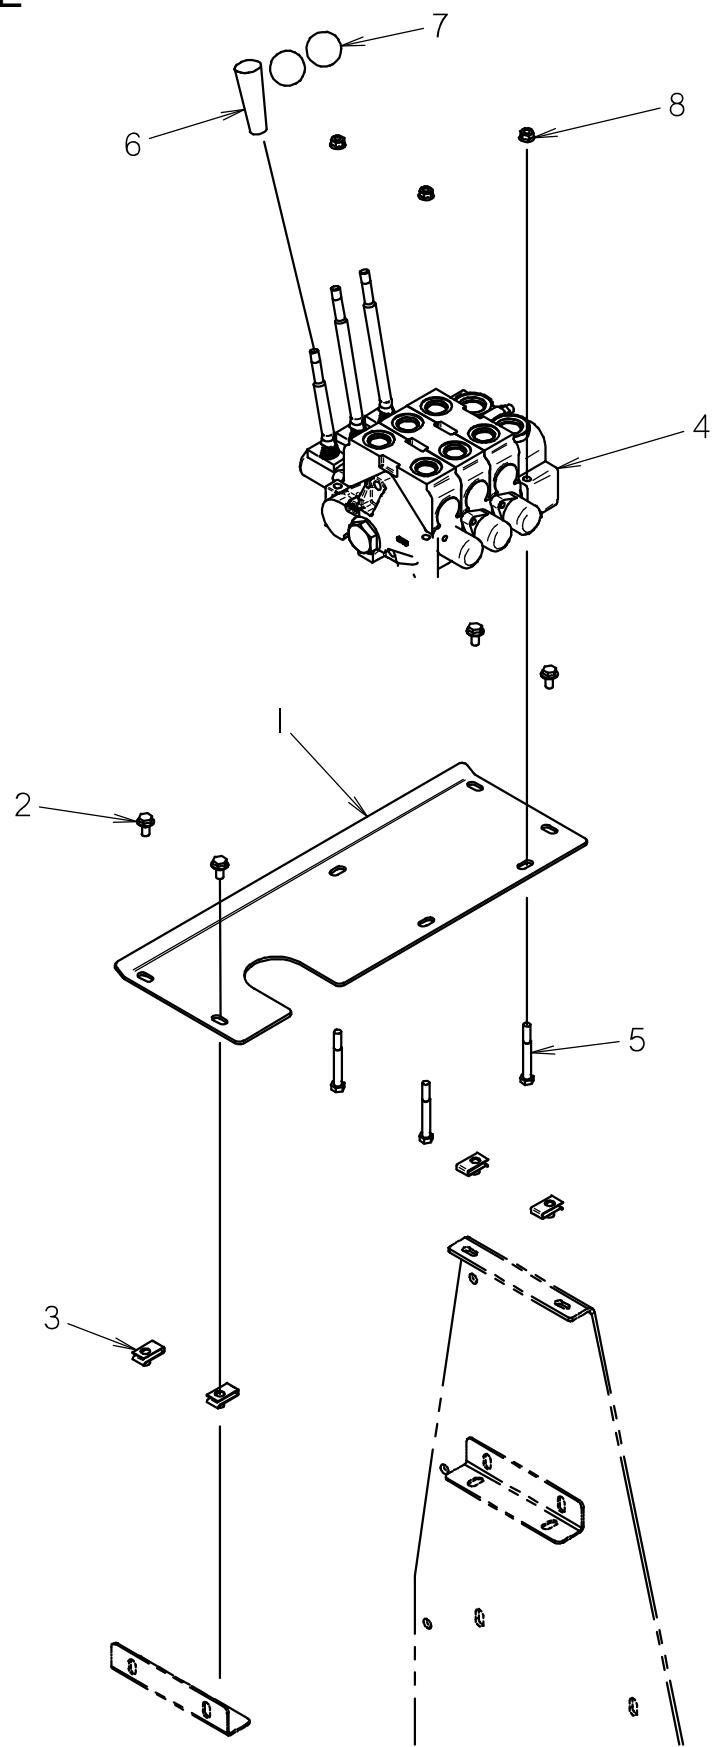SETUP VALVE

SETUP VALVE

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	300-2610	1	VALVE MOUNT	
2	106-380	4	FLG LK SCREW (M8-1.25 X 16MM)	
3	107-135	4	CLIP NUT (M8-1.25)	
4	150-1944	1	3 SPOOL VALVE	SEE FOOTNOTES 1, 2, & 3
5	106-330	3	SCREW (M8-1.25 X 70MM)	
6	110-442	1	HANDLE (3/8-NC, GREEN)	
7	110-590	2	KNOB (3/8-NC, ORANGE)	
8	106-386	3	FLG LOCKNUT (M8-1.25)	


NOT SHOWN:

FOOTNOTES:

1. INLET COVER RELIEF VALVE CARTRIDGE KIT P/N: 500-1399
2. STABILIZER SECTION CHECK CARTRIDGE KIT P/N: 499-029
3. SEAL KIT P/N 190-1656

NOTE:

ENGINE SKID MOUNTING

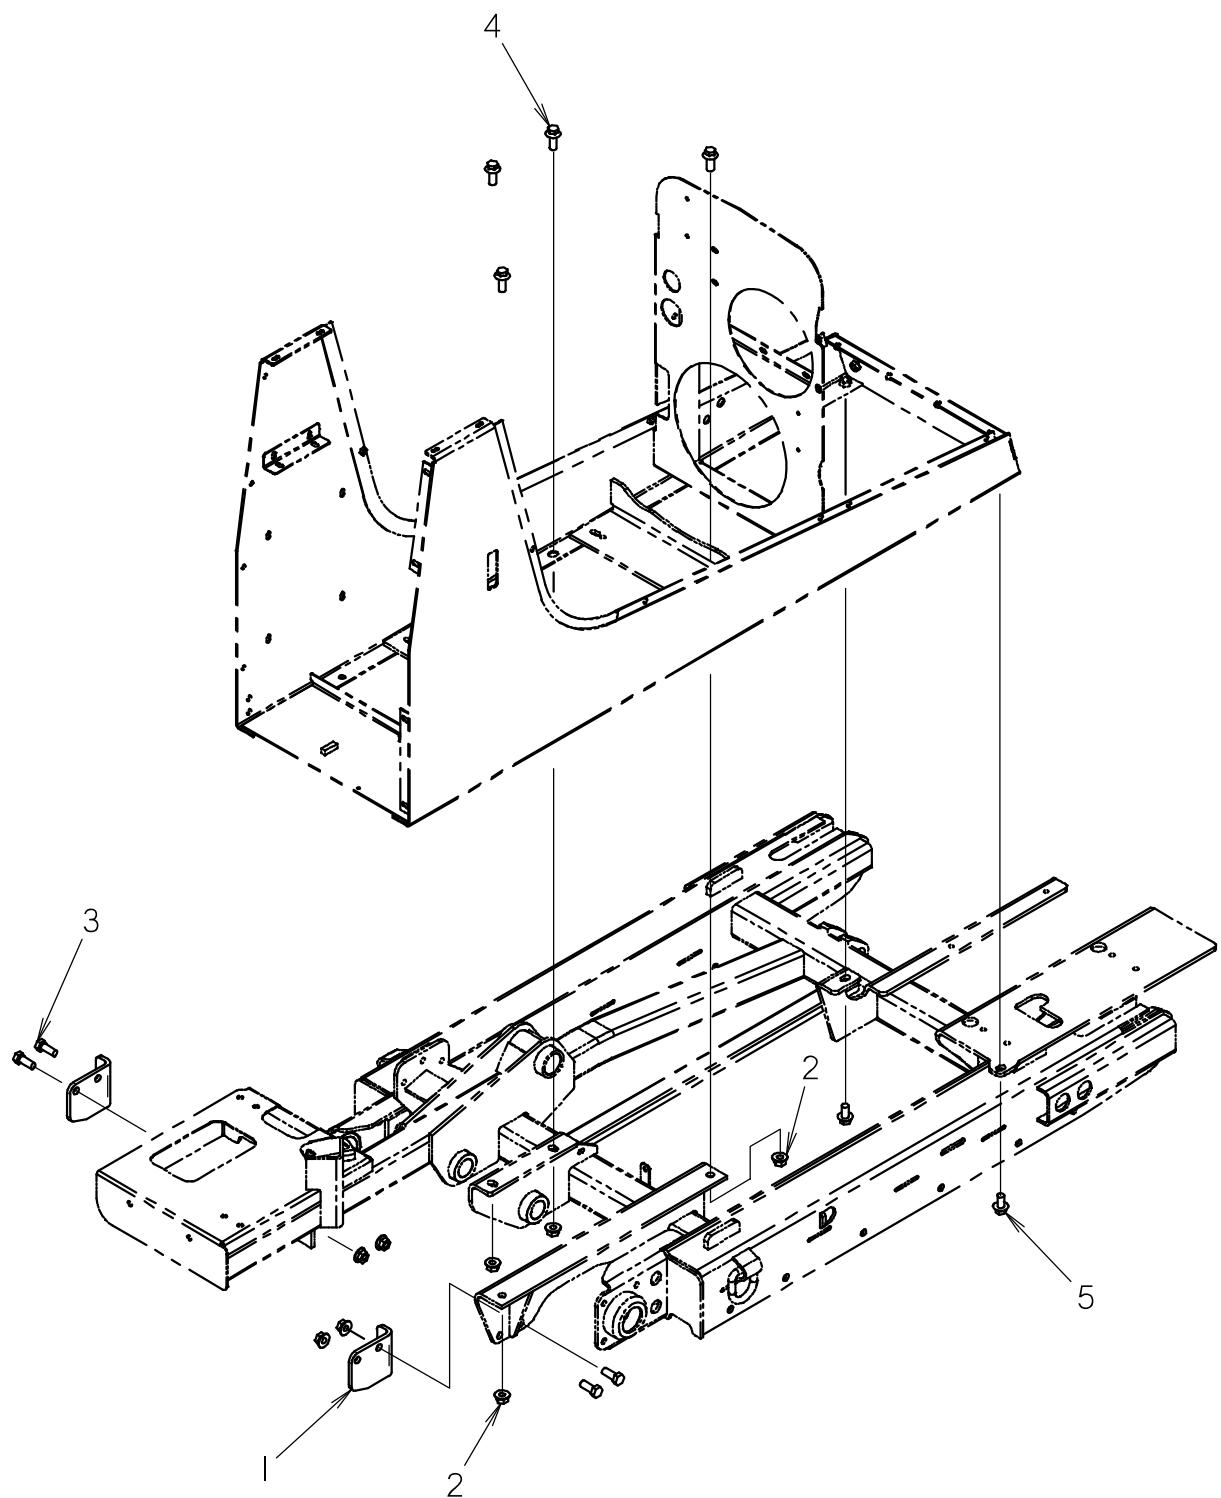

ENGINE SKID MOUNTING

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	300-478I	2	SKID PLATE	
2	106-355	8	FLG NUT (M16-2.00, I0.9)	
3	106-478	4	SCREW (M16-2.00 X 40MM, I0.9)	
4	106-470	4	FLG SCREW (M16-2.0 X 40MM)	LOCTITE 277
5	106-471	2	FLG SCREW (M16-2.00 X 30MM)	LOCTITE 277

NOT SHOWN:

FOOTNOTES:


NOTE:

NOTES:

FRAME COMPONENTS

ID0135068

TRACKS

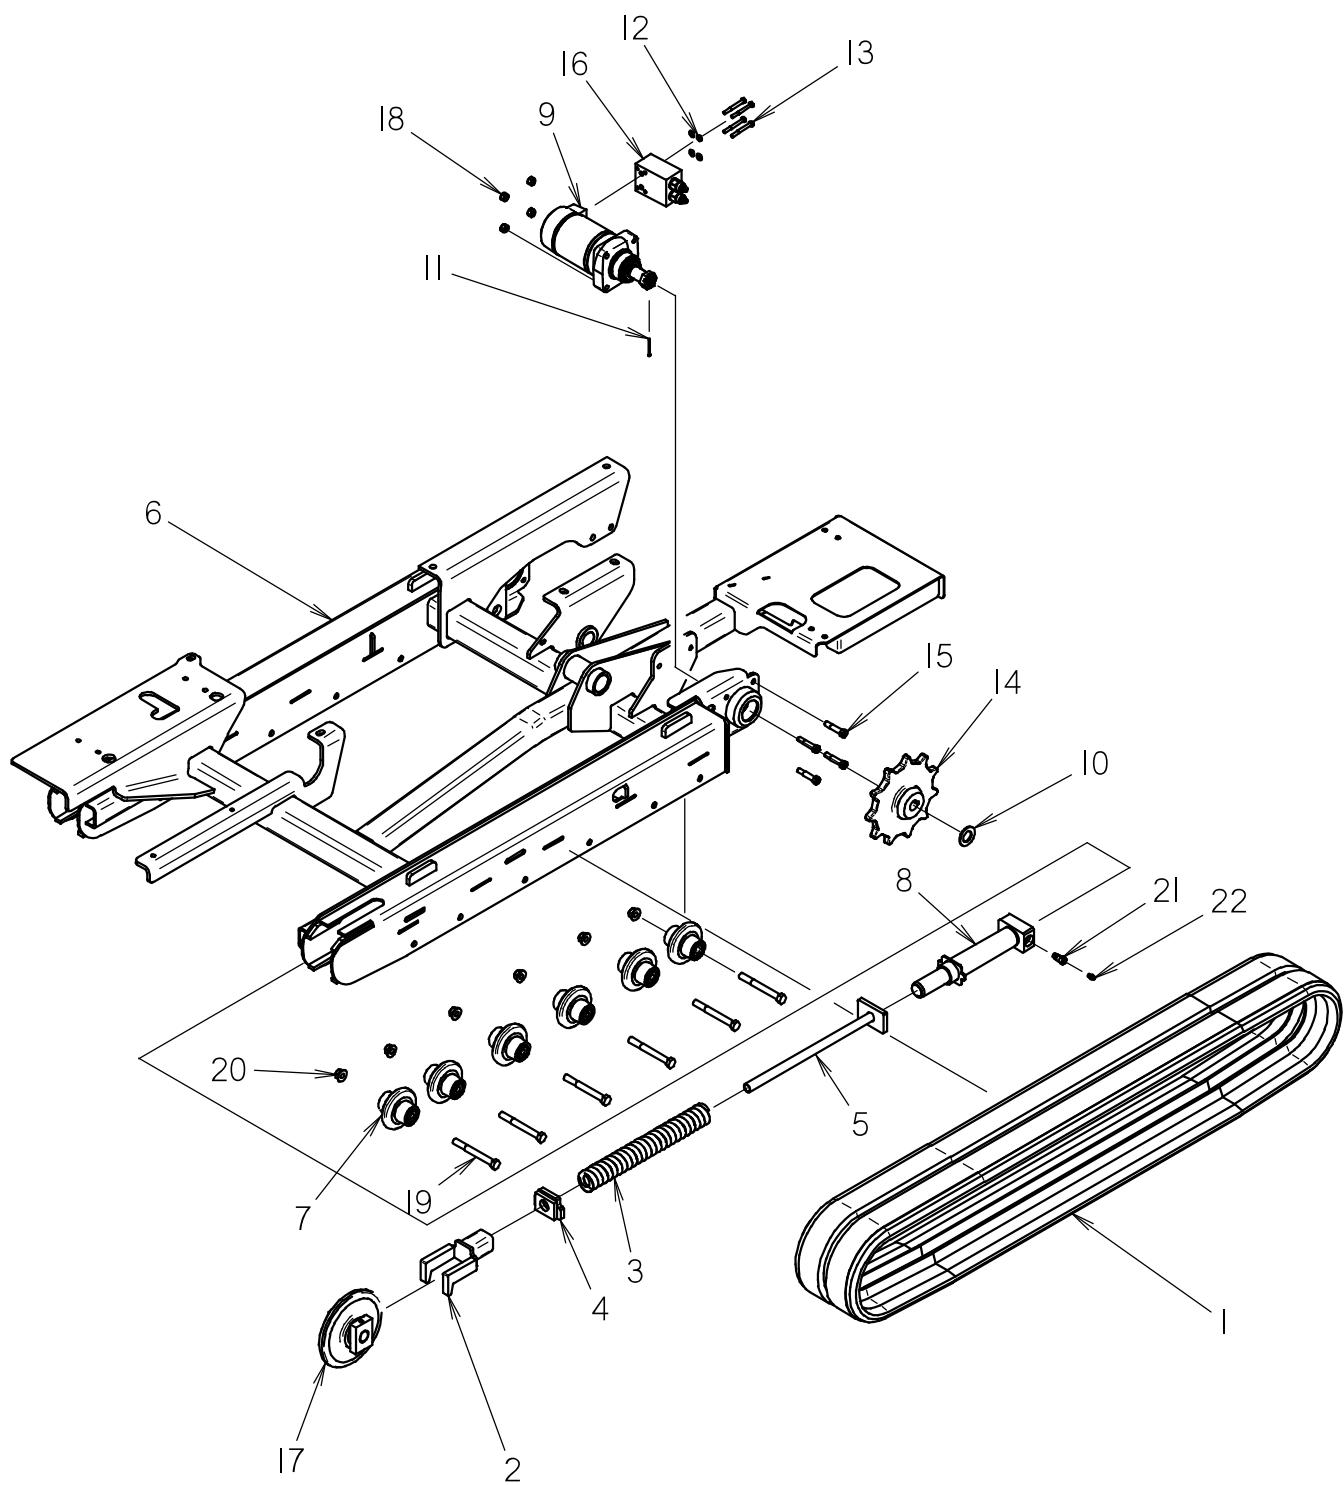

TRACKS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	362-I036	2	RUBBER TRACK (230MM,56P,72MM)	
2	353-403	2	YOKE WELDMENT	
3	II7-057	2	COMPRESSION SPRING	
4	300-3245	2	SPRING PLATE	
5	300-3248	2	STOP TUBE	
6	300-3219	1	TRACK FRAME	
7	I70-335	12	IDLER ROLLER	
8	I51-I61	2	GREASE CYLINDER	
9	I50-I314	2	GEROLER MOTOR	TIGHTEN CASTLE NUT 300-400 FT-LBS
I0	I05-I352	2	WASHER (I.265)	
II	I05-501	2	COTTER PIN (125" X 2.0")	
I2	I05-095	8	WASHER (I/4")	
I3	I05-I70	8	BOLT I5/I6-NC X 3"	
I4	I40-I086	2	MOTOR SPROCKET	
I5	I06-I97	8	BOLT (I/2-NC X 2-1/2", GD8)	
I6	I50-I488	2	COUNTERBALANCE VALVE	
I7	I70-336	2	FRONT IDLER ROLLER	
I8	I05-065	8	LOCKNUT (I/2-NC)	
I9	I07-337	II	SCREW (M16-2.00 X 150MM, I0.9)	
20	I06-442	12	FLG LKNUT (M16-2.0, PRVTRQ I0.9)	
21	I59-093	2	RELIEF VALVE (5/8-NF, 02N)	
22	II5-019	2	ZERK (02N)	

NOT SHOWN:


FOOTNOTES:

NOTE:

FRONT IDLER

ENDS WITH S/N: CMWSK350P60000600
ENDS WITH S/N: CMWSK650A60000427

ENDS WITH S/N: CMWSK500H60000254
ENDS WITH S/N: CMWXT850C60000125

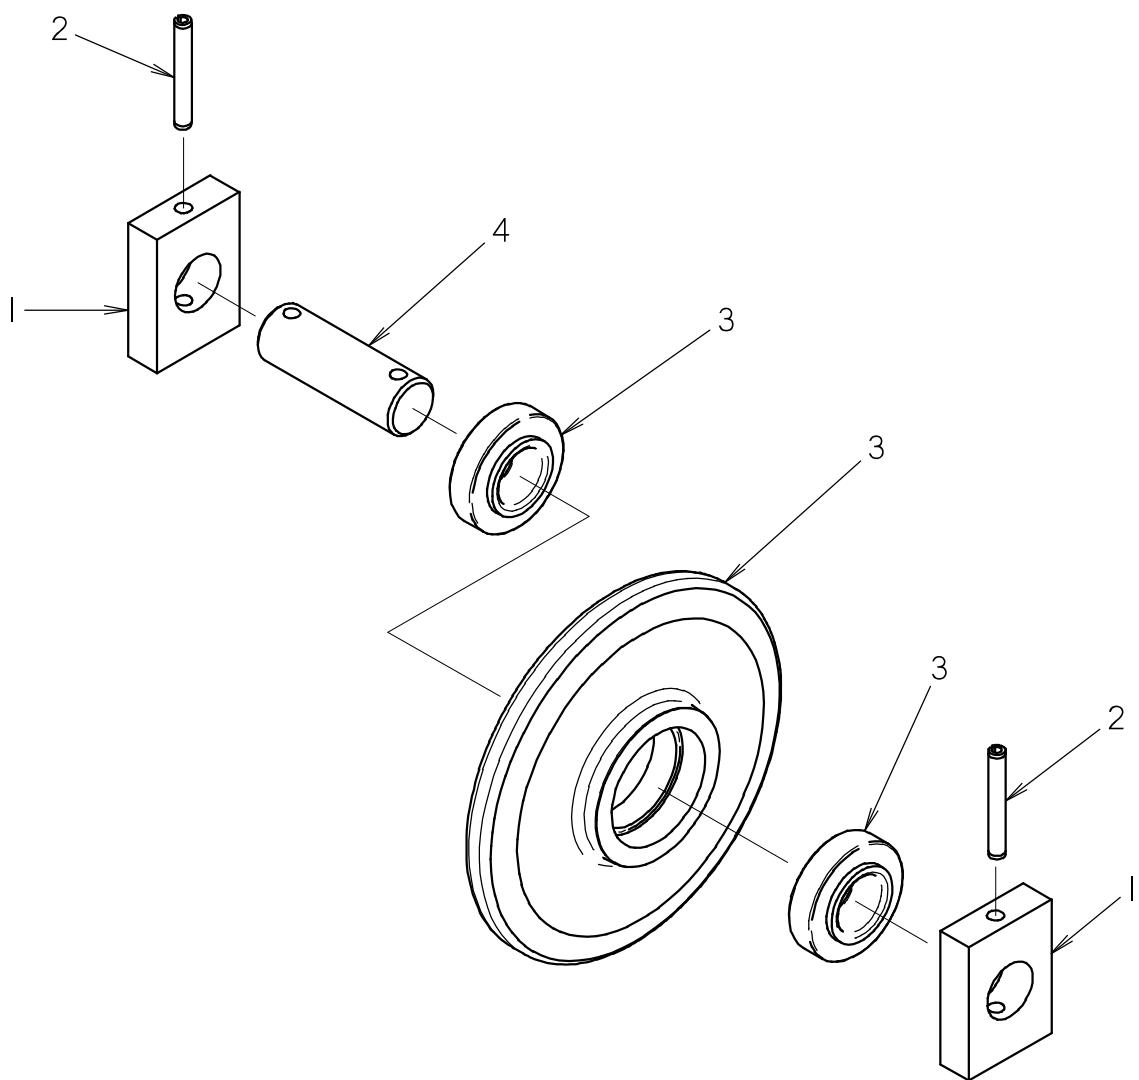

FRONT IDLER

ENDS WITH S/N: CMWSK350P60000600
 ENDS WITH S/N: CMWSK650A60000427

ENDS WITH S/N: CMWSK500H60000254
 ENDS WITH S/N: CMWXT850C60000125

REF	PART	NO.	NUMBER	QTY	DESCRIPTION	REMARKS
I	170-336	-			FRONT IDLER ROLLER	INCLUDES REF NO'S I-4
I	353-477	2			BLOCK, PUSH	
2	105-56I	2			ROLL PIN (3/8" X 2-3/4")	
3	170-342	I			IDLER ROLLER SUB	SEE FOOTNOTE I
4	167-307	I			SHAFT, IDLER	


NOT SHOWN:

FOOTNOTES:

- I. FOR REPLACEMENT BEARINGS, USE PART NUMBER I25-005.

NOTE:

GREASE CYLINDER

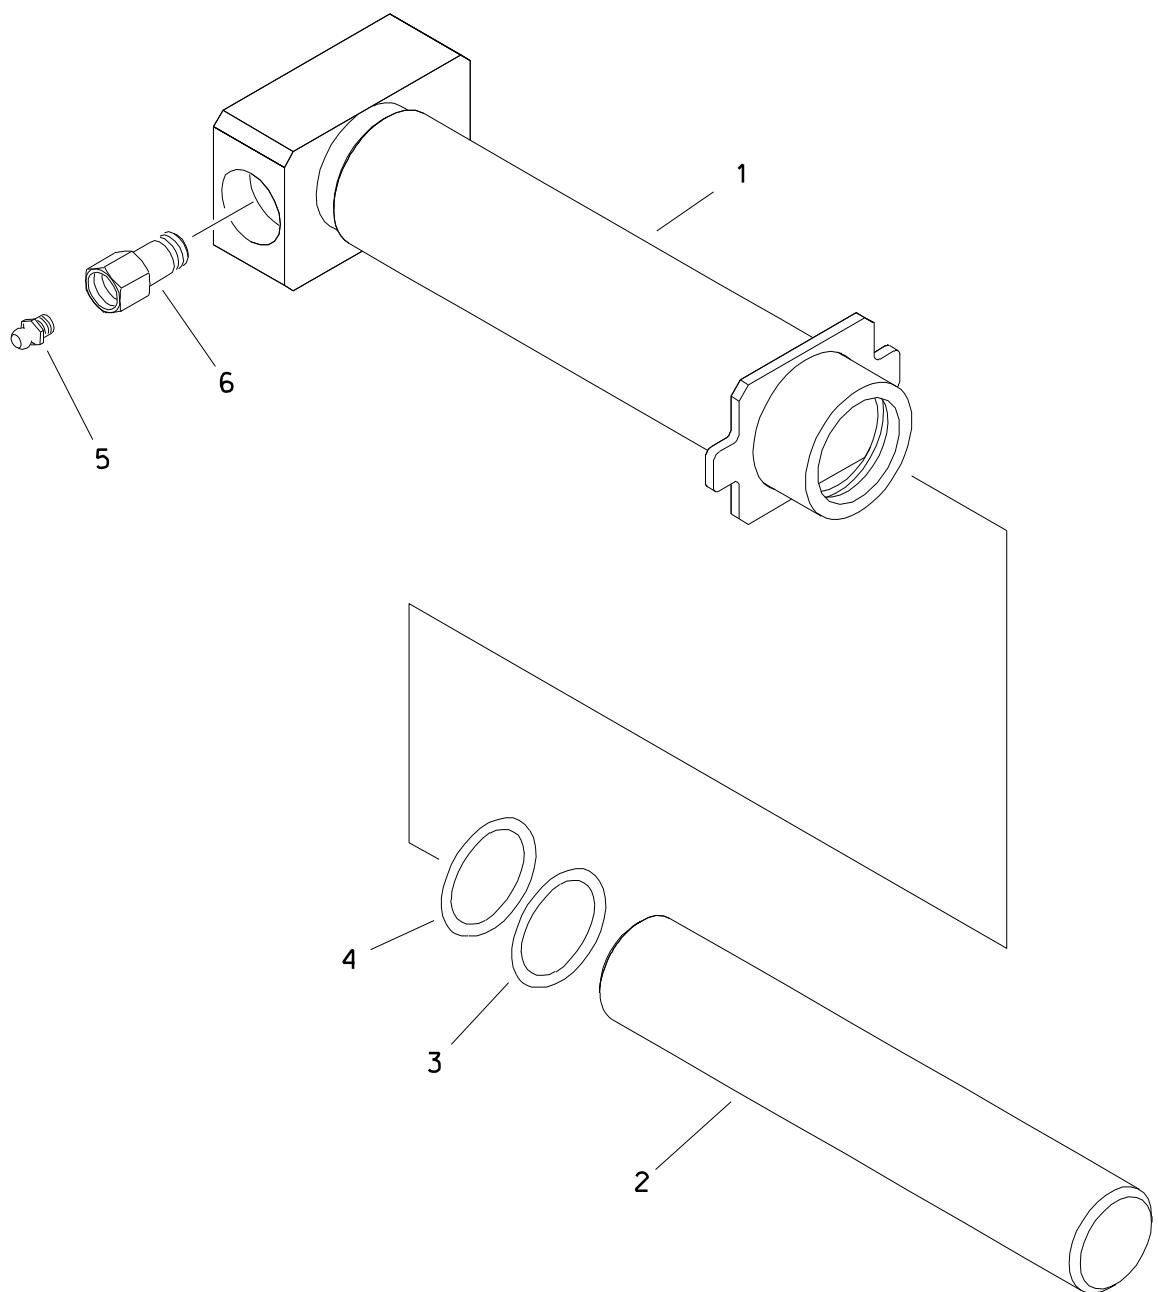


GREASE CYLINDER

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	151-161	1	GREASE CYLINDER	
1.	353-404	1	GREASE CYLINDER	INCL REF NO.'S 1 - 4
2.	153-501	1	CYLINDER ROD	
3.	155-732	1	BACKUP RING (224 D90)	
4.	155-704	1	O-RING (224 D70)	
5.	115-019	1	ZERK (O2N)	
6.	159-093	1	RELIEF VALVE (5/8-NF, O2N)	

FOOTNOTES

DRILL FRAME

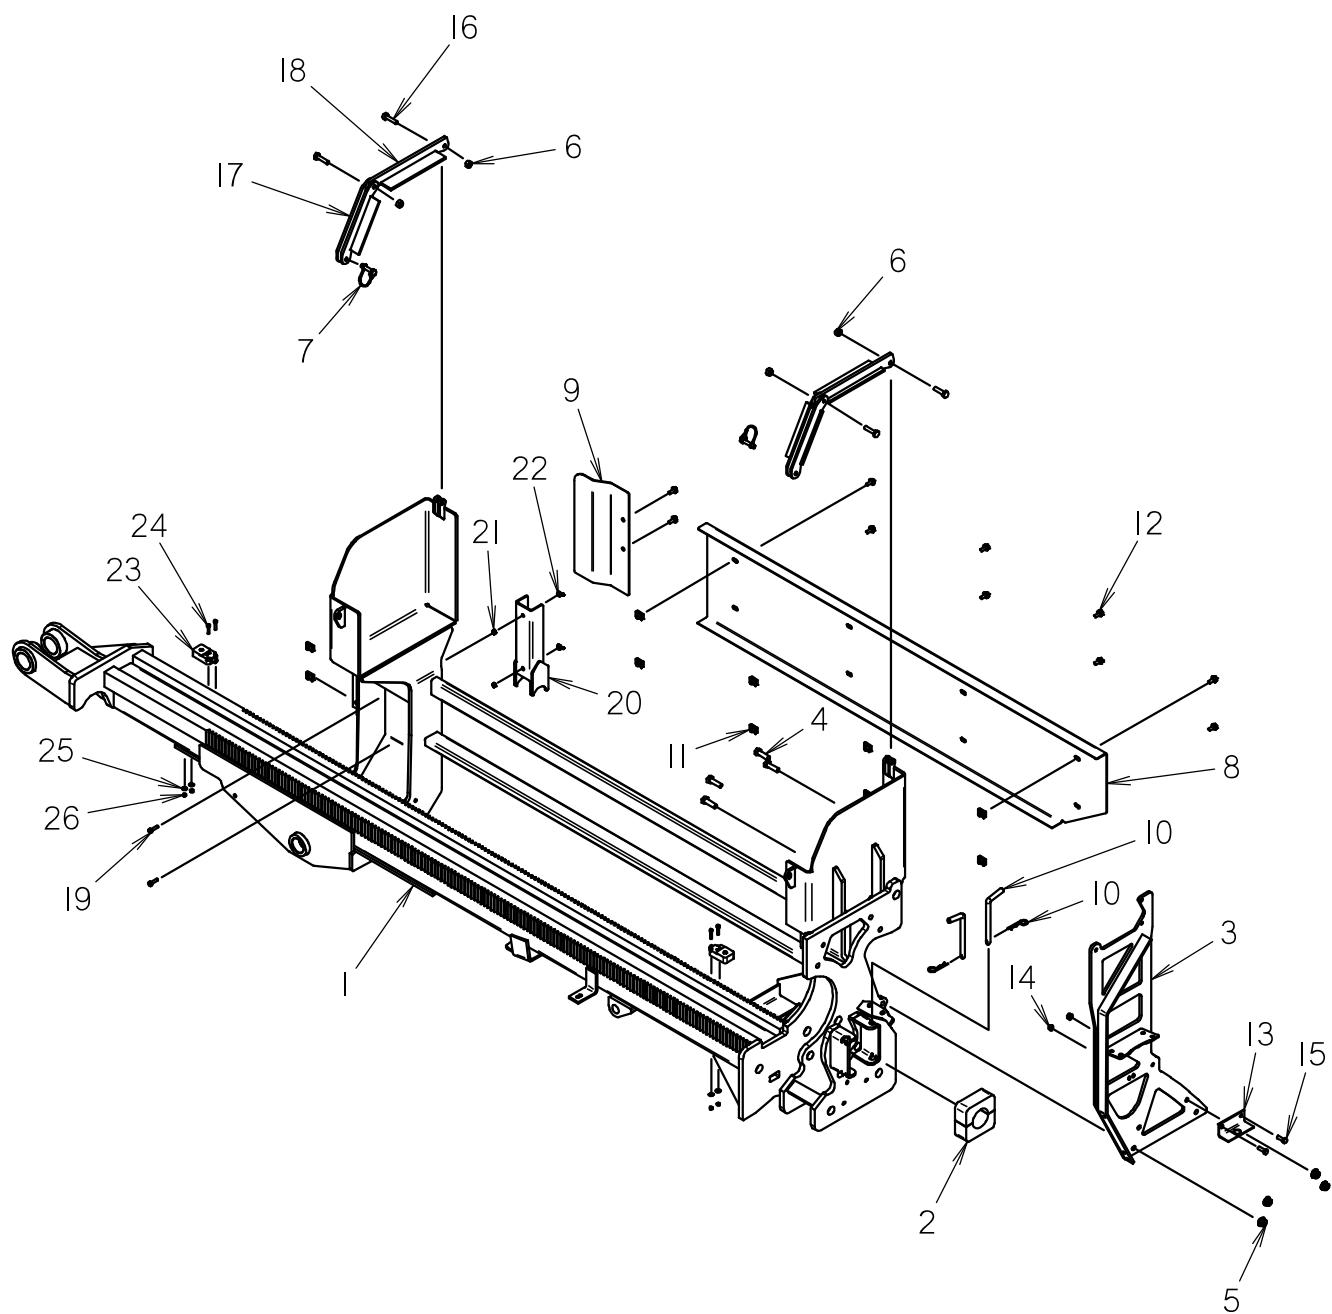

DRILL FRAME


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	30I-II54	1	DRILL FRAME	
2	362-1060	2	PIPE GUIDE	BEGINS WITH S/N CMWJT922EB0000488, SEE FOOTNOTE I
3	316-86I	1	MOUNT	
4	106-333	4	SCREW (M12-I.75 X 40MM, 8.8)	
5	106-709	4	FLG LK NUT (M12-I.75)	
6	105-894	4	LOCKNUT(M10-I.50,PRV TRQ,I0.9)	
7	110-368	2	SNAPPER PIN (3/8" X 1-I/2")	
8	300-4489	1	COVER	
9	300-449I	1	COVER	
10	107-870	2	PULL PIN (5 X 5")	
11	106-55I	10	CLIP NUT (M8-I.25)	
12	106-99I	10	FLG LK SCREW (M8-I.25 X 20MM)	
13	300-408I	1	BULKHEAD BRACKET	
14	106-386	2	FLG LOCKNUT (M8-I.25)	
15	105-806	2	SCREW (M8-I.25 X 25MM)	
16	105-27I	4	SCREW (M10-I.50 X 40MM)	
17	30I-II45	2	RETAINER LINK	
18	30I-II48	2	RETAINER LINK	
19	105-I97	2	BOLT (1/4-NC X 1")	
20	300-4092	1	CYLINDER LOCK	
21	105-078	2	NUT (1/4-NC)	
22	195-339	2	WING NUT (1/4-NC)	
23	215-II75	2	PROXIMITY SWITCH	
24	106-426	4	SCREW (M5-0.80 X 25MM, SOC)	
25	105-2 4	4	WASHER (3/16")	
26	106-850	4	LOCKNUT (M5-0.80)	

NOT SHOWN:

FOOTNOTES:

- I. USE 362-1057 FOR FINE THREADED PIPE.

NOTE:

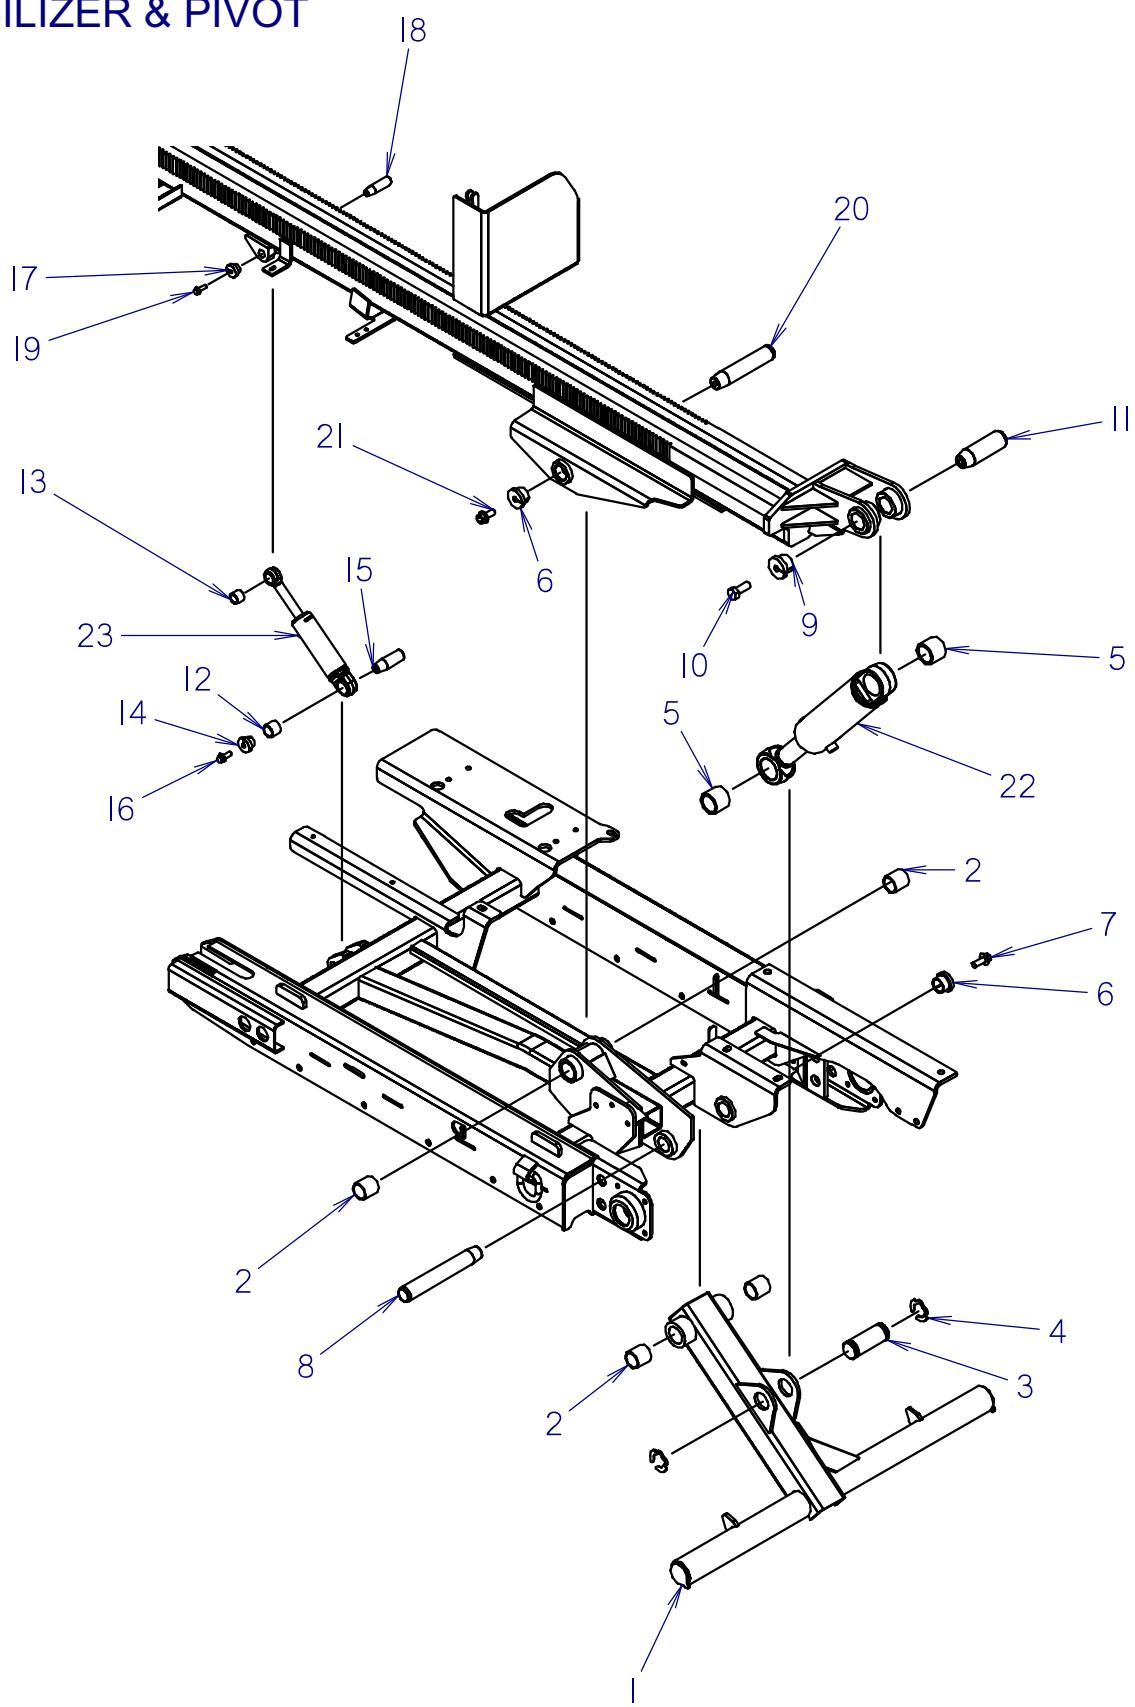STABILIZER & PIVOT

STABILIZER & PIVOT

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	300-3422	1	STABILIZER	
2	I25-438	4	COMPOSITION BUSHING (I.75")	
3	300-3381	1	PIN	
4	I15-781	2	KLIP RING (2.000")	
5	I25-754	2	COMPOSITION BUSHING (2")	
6	I8I-975	2	TAPERED INSERT (I.75")	
7	I06-470	1	FLG SCREW (M6-2.0 X 40MM)	
8	I79-239	1	TAPERED PIN (44.4MM X 288MM)	
9	I84-064	1	TAPERED INSERT (2")	
I0	I06-607	1	SCREW (M20-2.50 X 50MM, I0.9)	
I1	I79-I88	1	TAPERED PIN (50.8mm X 158mm)	
I2	I25-771	1	COMPOSITION BUSHING (I.25")	
I3	I25-770	1	COMPOSITION BUSHING (I")	
I4	I8I-982	1	TAPERED INSERT (I.25")	
I5	I83-938	1	TAPERED PIN (31.7MM X 95MM)	
I6	I06-469	1	FLG SCREW (M12-I.75 X 30MM)	
I7	I8I-981	1	TAPERED INSERT (I")	
I8	I83-820	1	25.4 X 86 TAPERED PIN	
I9	I06-383	1	FLG LK SCREW (M10-I.50 X 30MM)	
I0	I78-I90	1	BAR, I.75 X 8 TPRD PIN W/CMFR	
I1	I05-969	1	FLG BOLT (5/8-NC X I-I/2",GD8)	
I2	I5I-II6	1	CYL (3.5 X 2.00 X I.0)	
I3	I5I-038	1	CYL (2.0 X I.0 X 4.0)	

NOT SHOWN:


300-3986 - STABILIZER PAD

OPTIONAL EQUIPMENT

FOOTNOTES:

NOTE:

STATIONARY WRENCH

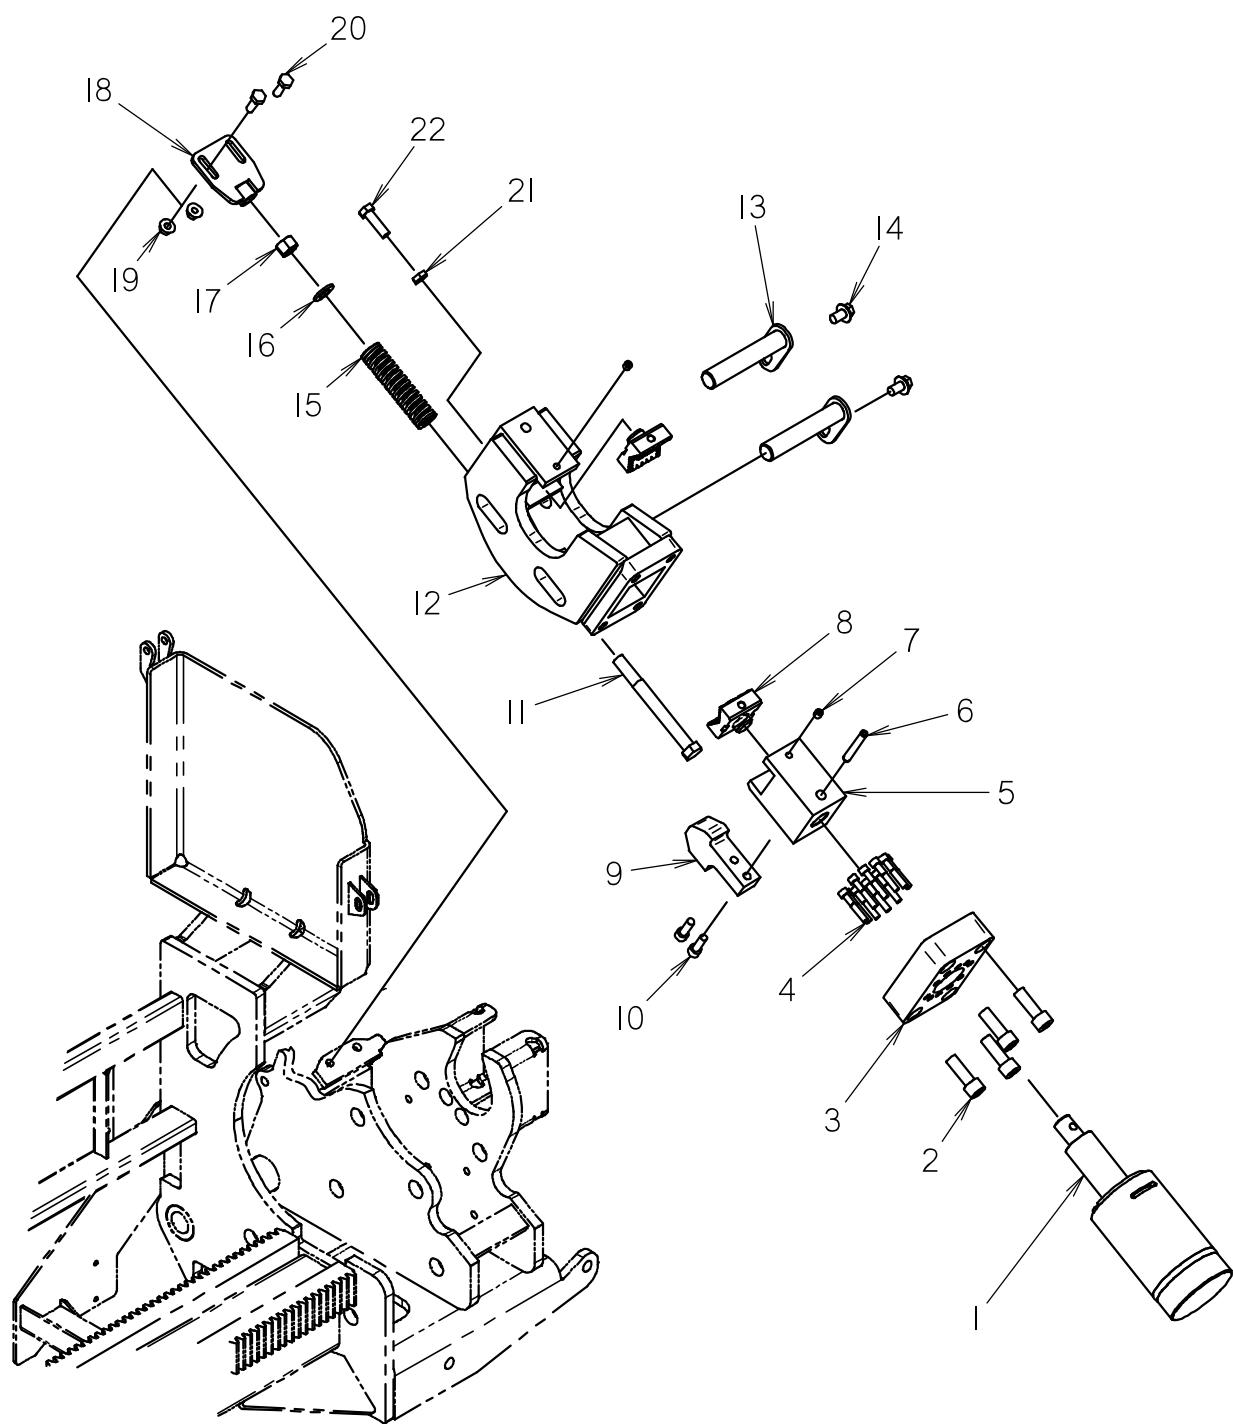

STATIONARY WRENCH

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	I5I-2I3	I	CYL (3.5" X I.75" X 2.0")	
2	I07-884	4	SCREW (M16-2.00 X 45MM, SOC)	USE LOCTITE 242 OR EQUIVALENT
3	3I6-545	I	CYLINDER HEAD PLATE	
4	I07-894	10	SCREW (M8-I.25 X 45MM, SOC)	TORQUE TO 28 FT-LBS, USE LOCTITE 277 OR EQUIVALENT
5	300-I927	I	JAW	
6	I05-56I	I	ROLL PIN (3/8" X 2-3/4")	
7	I06-529	2	SET SCREW (M10-I.50 X 10MM)	USE LOCTITE 242 OR EQUIVALENT
8	357-222	2	JAW INSERT	BEGINS WITH S/N CMWJT922EB0000488. SEE FOOTNOTE I
9	362-I083	I	STOP	
I0	I06-755	2	SCREW (M10-I.50 X 30MM, SOC)	
I1	I07-II8	I	SCREW (M16-2.00 X 160MM, I0.9)	
I2	300-3256	I	WRENCH	
I3	3I8-5II	2	WRENCH PIN - SHORT	
I4	I05-I0I2	2	FLG LK SCREW (M12-I.75 X 20MM)	
I5	II8-II5	I	COMPRESSION SPRING	
I6	I06-392	I	WASHER (M16)	
I7	I06-545	I	LOCKNUT (M16-2.0, PRV TRQ, I0.9)	
I8	300-I947	I	SPRING STOP	
I9	I06-387	2	FLG LOCKNUT (M10-I.50)	
I0	I07-6I2	2	SCREW (M10-I.50 X 30MM, CL I0.9)	
I1	I07-669	I	JAM NUT (M12-I.75)	
I2	I06-333	I	SCREW (M12-I.75 X 40MM, 8.8)	


NOT SHOWN:

FOOTNOTES:

- I. FOR FINE THREAD PIPE, USE 300-I995

NOTE:

ROTATING WRENCH

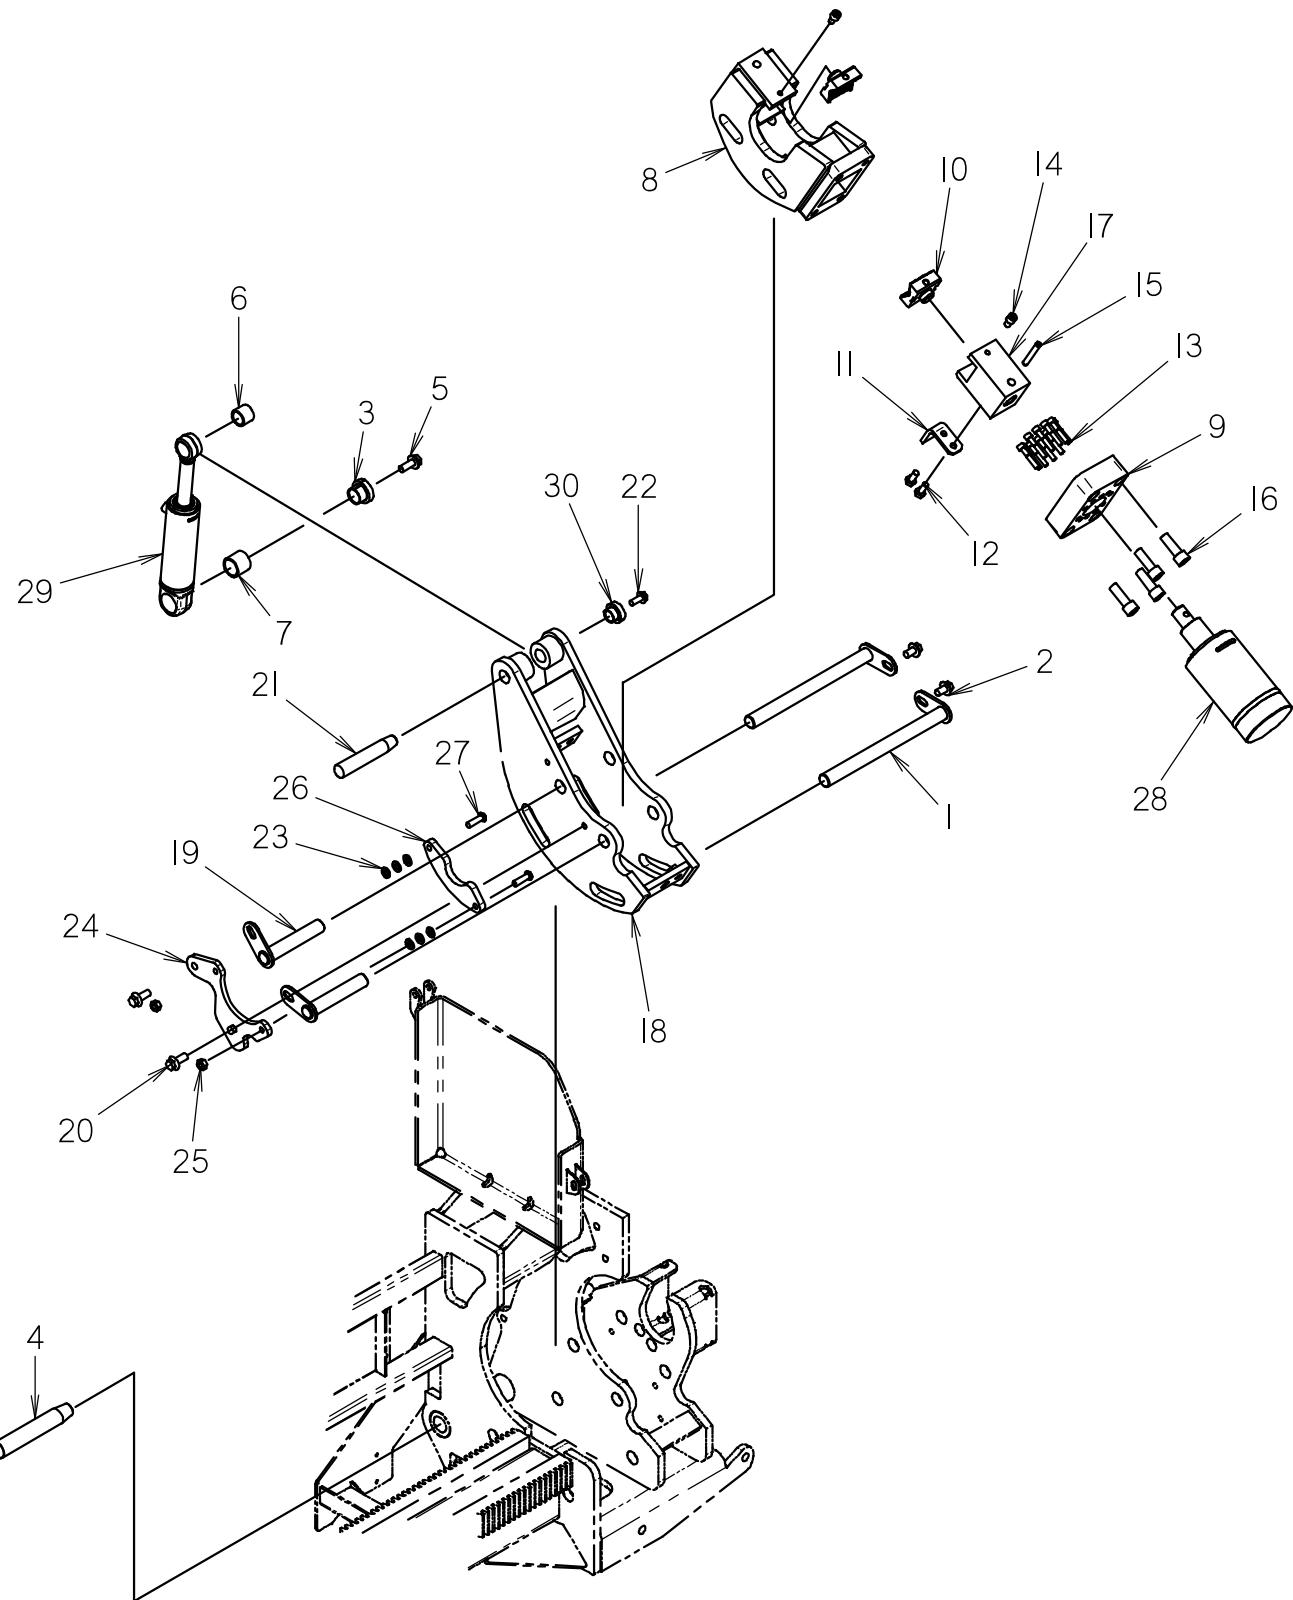

ROTATING WRENCH

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	3I8-5I2	2	WRENCH PIN - LONG	
2	I05-I0I2	2	FLG LK SCREW (M12-I.75 X 20MM)	
3	I8I-982	1	TAPERED INSERT (I.25")	
4	I78-225	1	TAPERED PIN, I.25 x 7.15	
5	I06-469	1	FLG SCREW (M12-I.75 X 30MM)	
6	I25-770	1	COMPOSITION BUSHING (I.000")	
7	I25-77I	1	COMPOSITION BUSHING (I.25")	
8	300-3256	1	WRENCH	
9	3I6-545	1	CYLINDER HEAD PLATE	
I0	357-222	2	JAW INSERT	BEGINS WITH S/N CMWJT922EB0000488. SEE FOOTNOTE I
I1	300-3276	1	STOP	
I2	I05-245	2	SCREW (M10-I.50 X 25MM)	
I3	I07-894	10	SCREW (M8-I.25 X 45MM, SOCI)	TORQUE TO 28 FT-LBS, USE LOCTITE 277 OR EQUIVALENT
I4	I06-847	2	SCREW (M10-I.50 X I6MM, SOCI)	USE LOCTITE 242 OR EQUIVALENT
I5	I05-56I	1	ROLL PIN (3/8" X 2-3/4")	
I6	I07-884	4	SCREW (M16-2.00 X 45MM, SOCI)	USE LOCTITE 242 OR EQUIVALENT
I7	300-I927	1	JAW	
I8	324-9I8	1	ROTATING WRENCH	
I9	3I8-5II	2	WRENCH PIN - SHORT	
20	I07-0I0	2	FLG LK SCREW (M12-I.75 X 30MM)	
21	I79-987	1	TAPERED PIN (I" X 5.50")	
22	I06-724	1	FLG SCREW (M10-I.50 X 25MM)	
23	I06-390	6	WASHER (M10)	
24	300-2905	1	PIPE REST MOUNT	
25	I05-894	2	LOCKNUT(M10-I.50,PRV TRQ,I0.9)	
26	362-I220	1	PIPE REST	
27	I07-42I	2	SCREW (M10-I.50 X 35MM,BUT SOCI)	
28	I5I-2I3	1	CYL (3.5" X I.75" X 2.0")	
29	I5I-038	1	CYL (2.0 X I.0 X 4.0)	
30	I8I-98I	1	TAPERED INSERT (I")	


NOT SHOWN:

FOOTNOTES:

- I. USE 300-I995 FOR FINE THREADED PIPE.

NOTE:

THRUST DRIVE

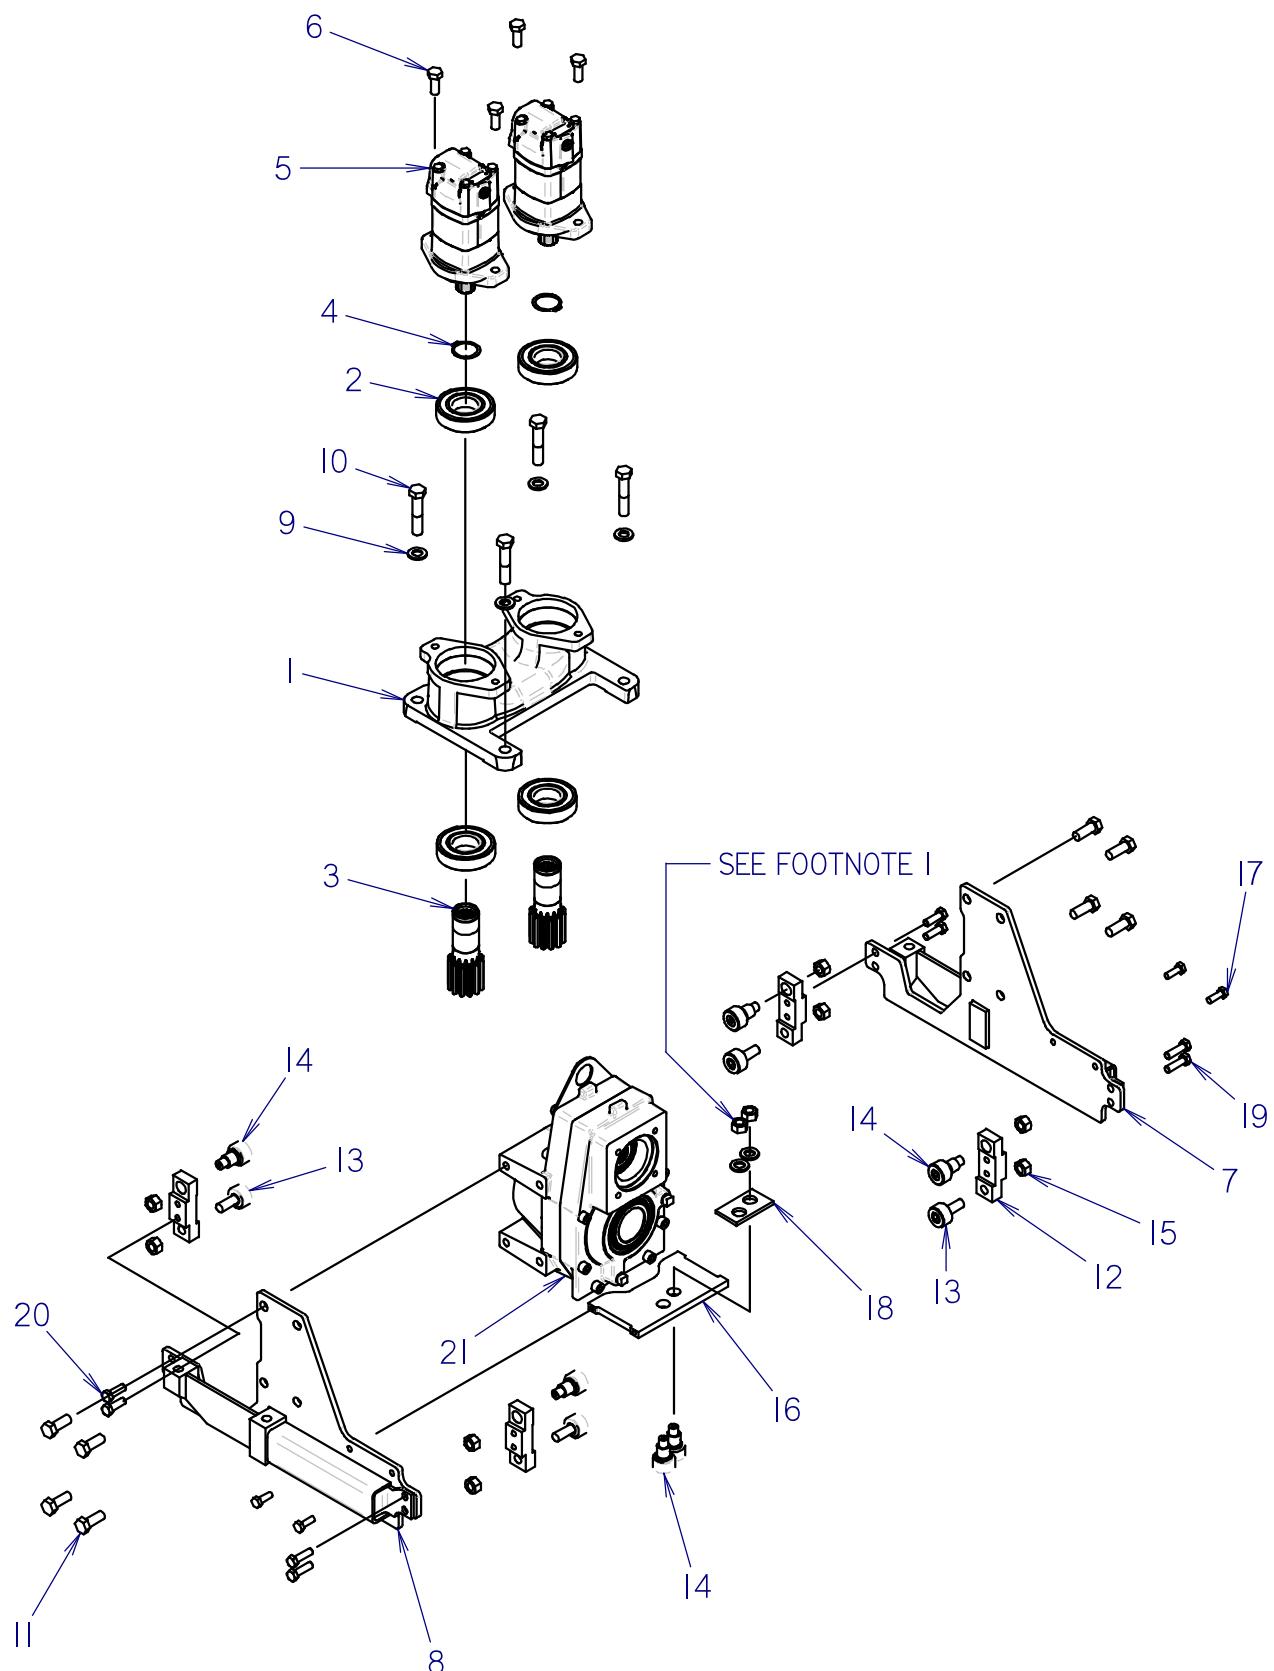

THRUST DRIVE

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	300-1771	1	MOTOR PLATE	
2	I25-044	4	BEARING (AFNIR 309PP)	
3	I60-I038	2	PINION	
4	I15-456	2	SNAP RING	
5	I50-I395	2	GEROLER MOTOR	
6	I06-472	4	SCREW (M14-2.0 X 35MM)	TORQUE TO 88 FT-LBS, USE LOCTITE 242 OR EQUIVALENT
7	300-2943	1	RIGHT SIDE PLATE	
8	300-2944	1	LEFT SIDE PLATE	
9	I06-398	6	WASHER (M16, HARDENED)	
I0	I07-I97	4	SCREW (M16-2.00 X 80MM, I0.9)	TORQUE TO 200 FT-LBS, USE LOCTITE 242 OR EQUIVALENT
I1	I05-998	8	SCREW (M16-2.00 X 40MM)	TORQUE TO 140 FT-LBS, USE LOCTITE 242 OR EQUIVALENT
I2	300-3185	4	ROLLER MOUNT BAR	
I3	I40-I042	4	ROLLER (I.50")	
I4	I40-I053	6	ROLLER EC (I.50")	
I5	I05-390	10	NUT (5/8-NF)	TORQUE TO 100 FT-LBS EXCEPT AS NOTED IN FOOTNOTE I
I6	300-3186	1	ROLLER MOUNT PLATE	
I7	I06-079	4	SCREW (M10-I.50 X 30MM)	TORQUE TO 32 FT-LBS, USE LOCTITE 242 OR EQUIVALENT
I8	300-3281	1	SPACER PLATE	
I9	I06-547	4	SCREW (M12-I.75 X 40MM,I0.9)	TORQUE TO 80 FT-LBS, USE LOCTITE 242 OR EQUIVALENT
I20	I07-206	4	HHCS M12-I.75 X 35MM,I0.9 ZP	TORQUE TO 80 FT-LBS, USE LOCTITE 242 OR EQUIVALENT
I21	I66-I006	1	GEAR BOX (I.78:I, ROTATION)	


NOT SHOWN:

FOOTNOTES:

- I. TORQUE TO 45 FT-LBS TWO NUTS NOTED ON GRAPHIC PAGE.

NOTE:

SPINDLE DRIVE

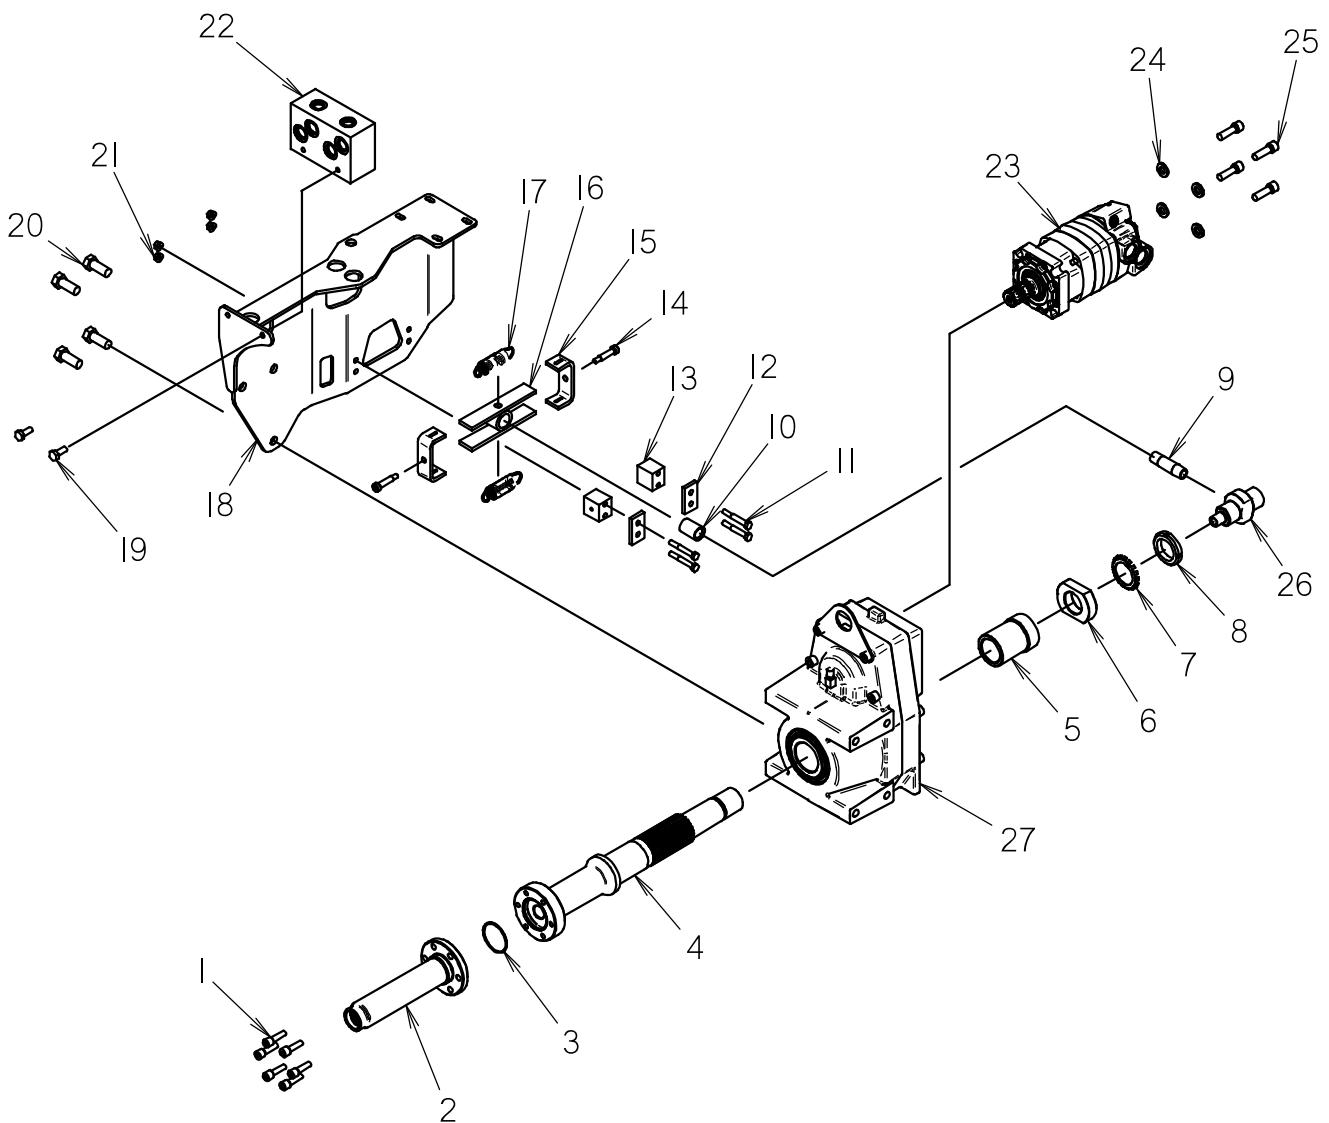

SPINDLE DRIVE

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	106-08I	6	SCREW (M10-I.50 X 35MM, SOC)	TORQUE TO 55 FT-LBS, USE LOCTITE 242 OR EQUIVALENT
2	300-2340	1	SAVER SUB	FINE THREAD. SEE FOOTNOTE I FOR COARSE THREAD
3	157-019	1	O-RING (I.39 D90)	
4	300-2342	1	SLIDING SPINDLE SHAFT	APPLY 256-666 GREASE TO SPLINES
5	177-034	1	SHAFT SPACER	
6	106-865	1	NUT	
7	185-074	1	TANG LOCK WASHER (I.792')	
8	185-067	1	THRUST LOCKNUT (I.767-NF-I8)	
9	I15-I24	1	PIPE NIPPLE (I/2-NPT X 3" LG)	
I0	I15-I55	1	COLLAR (O8NF)	
I1	106-570	4	SCREW (M8-I.25 X 60MM)	
I2	300-3832	2	CAP PLATE	
I3	300-3825	2	MOUNT BLOCK	
I4	107-223	2	SHLD BLT (M10 X 35MM, M8-I.25)	USE LOCTITE 242 OR EQUIVALENT
I5	300-3823	2	EXTENSION BRACKET	
I6	300-3826	1	SLIDE	
I7	I05-II5I	2	EXTENSION SPRING	
I8	300-3284	1	HOSE CARRIER MOUNT	
I9	I05-245	2	SCREW (M10-I.50 X 25MM)	
I0	I05-998	4	SCREW (M16-2.00 X 40MM)	TORQUE TO 140 FT-LBS, USE LOCTITE 242 OR EQUIVALENT
I1	106-386	4	FLG LOCKNUT (M8-I.25)	
I2	300-3280	1	MANIFOLD BLOCK	
I3	I58-88I	1	MOTOR	
I4	106-397	4	WASHER (M12, HARDENED)	
I5	I07-044	4	SCREW (M12-I.75 X 40MM, SOC)	USE LOCTITE 242 OR EQUIVALENT
I6	I50-I462	1	WATER SWIVEL (I-08)	
I7	I66-I006	1	GEAR BOX (I.78,I, ROTATION)	



NOT SHOWN:

FOOTNOTES:

I. 300-7767 SAVER SUB (COARSE THREAD)

NOTE:

ROTATION GEARBOX

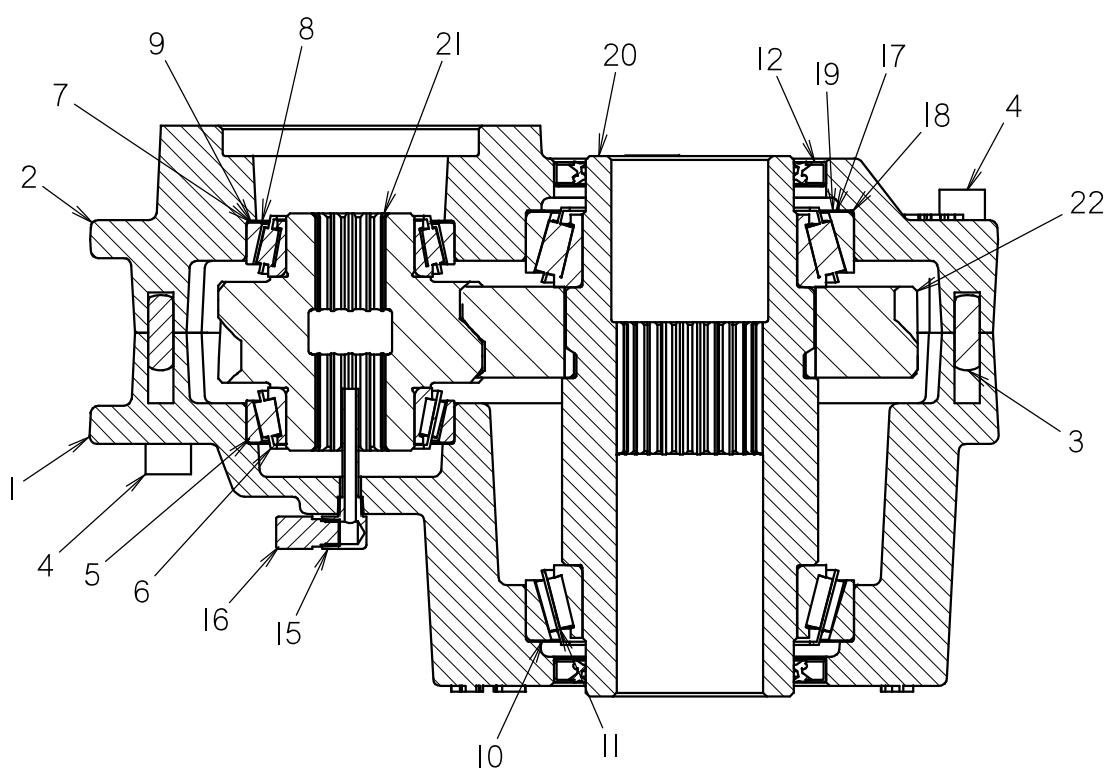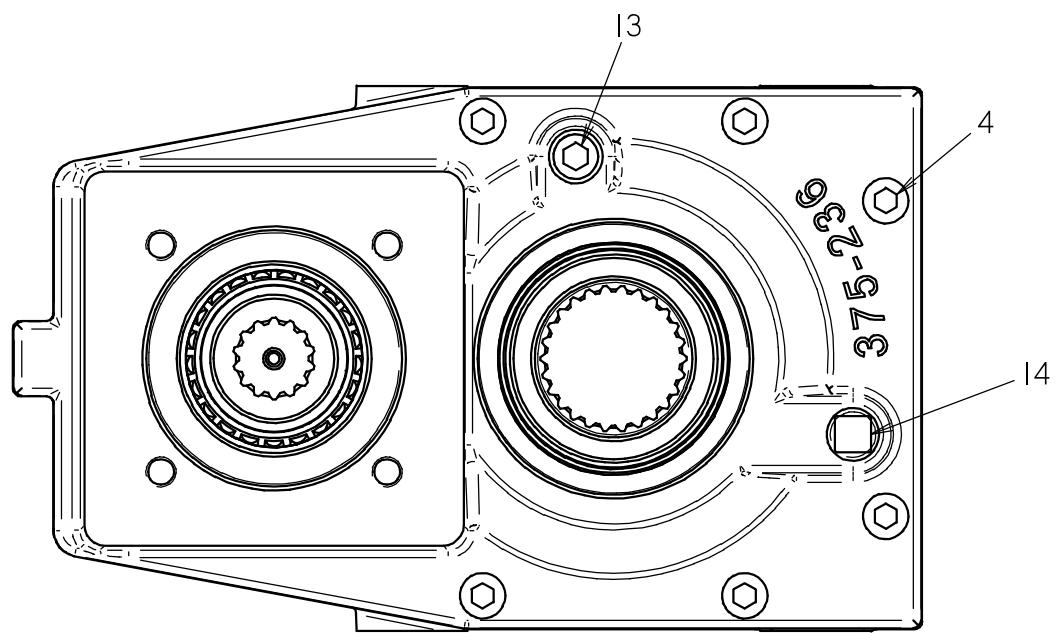

ROTATION GEARBOX


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	I66-I13	1	GEAR BOX (I.781, ROTATION)	
I	I62-002	1	GEARBOX HOUSING	
2	I62-001	1	COVER "B"	
3	I06-866	2	DOWEL PIN (M10 X 30MM)	
4	I06-771	10	SCREW (M2-1.75 X 60MM, SOC)	
5	I26-099	2	TAPERED RACE (3.25")	
6	I26-100	2	BEARING CONE	
7	I65-800	5	SHIM (.002")	
8	I65-801	5	SHIM (.003")	
9	I65-802	5	SHIM (.007")	
I0	I26-076	2	TAPERED RACE (5.118")	
I1	I26-075	2	TAPERED BEARING (3.346")	
I2	I55-869	2	INTERNAL SEAL (3.250")	
I3	I15-I65	1	PLUG (08N, SOC)	
I4	I15-211	1	PLUG (08N, SQ, MAG)	
I5	I54-I23	1	PICKUP TUBE (02N-02NF90-2")	
I6	I59-003	1	AIR VENT (02N)	
I7	I65-828	5	SHIM	
I8	I65-829	5	SHIM	
I9	I65-830	5	SHIM	
20	I62-003	1	OUTPUT SHAFT	
21	I65-I87	1	INPUT PINION	
22	I65-I88	1	OUTPUT GEAR	

NOT SHOWN:

FOOTNOTES:

NOTE:

HOSE CARRIER

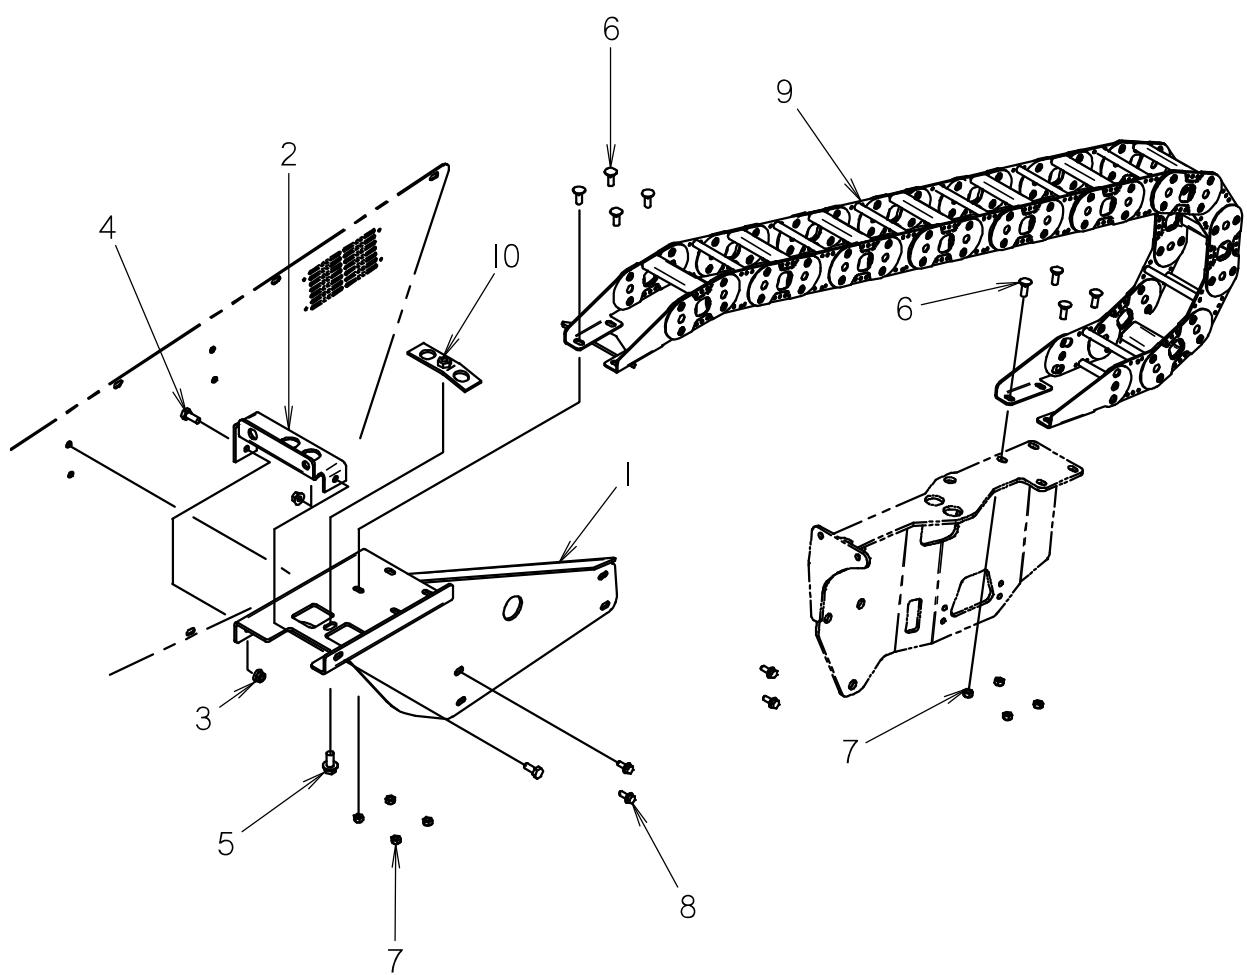

HOSE CARRIER

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	300-3364	1	UPPER HOSE CARRIER MOUNT	
2	300-3363	1	BULKHEAD BRACKET	
3	106-387	2	FLG LOCKNUT (M10-I.50)	
4	105-245	2	SCREW (M10-I.50 X 25MM)	
5	106-806	1	FLG LK SCREW (M12-I.75 X 25MM)	
6	105-600	8	CARRIAGE BOLT (3/8-NC X 1")	
7	105-047	8	LOCKNUT (3/8-NC)	
8	106-162	4	FLG SCREW (M8-I.25 X 20MM, GD8)	
9	300-2025	1	HOSE CARRIER	SEE FOOTNOTE I FOR SERVICE PARTS
10	300-3361	1	BULKHEAD PLATE	

NOT SHOWN:

FOOTNOTES:


I. REPAIR LINK 500-I908, EZ OUT 500-I909, ROUND BAR 500-I917, FLAT BAR 500-I918

NOTE:

NOTES:

OPERATOR'S STATION

OPERATOR STATION

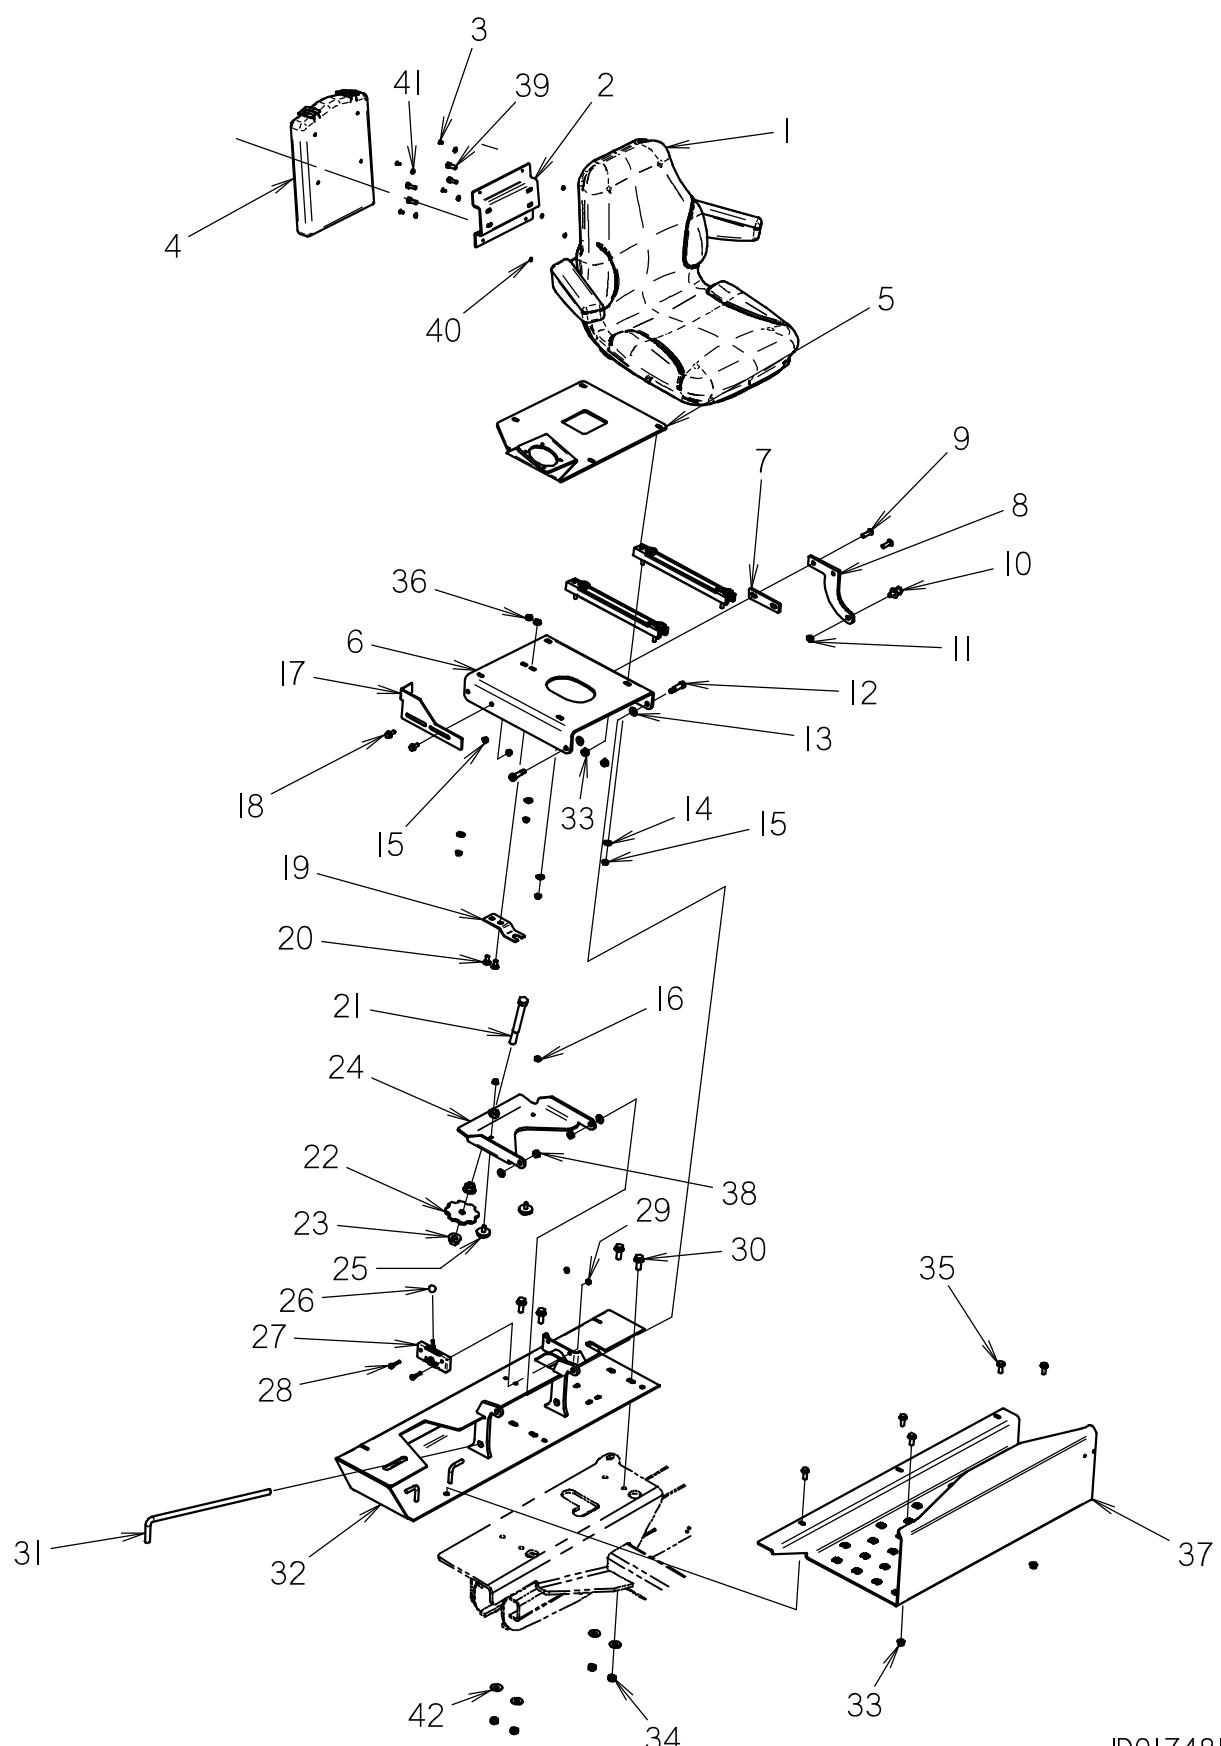

OPERATOR STATION

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	I05-I062	1	SEAT ASSEMBLY	SEE FOOTNOTE I
2	300-2673	1	MANUAL BOX MOUNT	
3	II0-560	4	POP RIVET (3/16" X 1/2", ALUM)	
4	3I8-588	1	MANUAL COMPARTMENT	
5	300-3I80	1	JOYSTICK MOUNT	
6	300-2672	1	SEAT MOUNT PLATE	
7	300-3737	1	SPACER	
8	300-3733	1	STRIKER MOUNT	
9	I06-674	2	BOLT (M10-1.50 X 30MM,BUT SOC)	
I0	I06-223	1	SHLD BLT (675"X700",7/16-NC)	
II	I05-I51	1	LOCKNUT (7/16-NC)	
I2	I06-535	2	SHLD BLT (M12 X 30MM,M10-1.50)	
I3	I06-39I	4	WASHER (M12)	
I4	I05-II7	4	WASHER (5/16")	
I5	I06-386	6	FLG LOCKNUT (M8-1.25)	
I6	I05-003	2	FLG LOCKNUT (5/16-NC)	
I7	300-4007	1	SLIDE STOP	
I8	I06-I62	2	FLG SCREW (M8-1.25 X 20MM, CD8)	
I9	300-403I	1	BRACKET	
20	I05-835	2	CARRIAGE BOLT (3/8-NC X 3/4")	
21	I06-983	1	SCREW (M16-2.00 X 150MM, I0.9)	
22	300-2676	1	ADJUSTMENT WHEEL	
23	I06-355	2	FLG NUT (M16-2.00, I0.9)	
24	300-4029	1	SEAT BASE	
25	II6-525	2	BUMPER	
26	362-II60	1	KNOB	
27	II0-564	1	HOOD LATCH	
28	I05-856	2	BOLT (1/4-NC X 1 1/4")	
29	I05-832	2	FLG LOCKNUT (1/4-NC)	
30	I06-469	4	FLG SCREW (M12-L75 X 30MM)	
3I	2I5-799	1	VOLTAGE STAKE	
32	300-3325	1	OPERATOR STATION MOUNT	
33	I06-387	4	FLG LOCKNUT (M10-1.50)	
34	I06-685	4	LOCKNUT(M12-L75,PRV TRQ,I0.9)	
35	I05-799	5	FLG LK SCREW (M10-1.50 X 25MM)	
36	I05-834	2	FLG LOCKNUT (3/8-NC)	
37	300-3I79	1	FLOOR PLATE	
38	I05-894	2	LOCKNUT(M10-1.50,PRV TRQ,I0.9)	
39	I05-806	4	SCREW (M8-1.25 X 25MM)	
40	I06-205	4	WASHER (191")	
4I	I07-3I0	4	WASHER (#10)	
42	I05-059	4	WASHER (7/16")	


NOT SHOWN:

FOOTNOTES:

- I. REPLACEMENT PART I05-II38 SEAT SLIDE (2X)

NOTE:

RIGHT CONSOLE

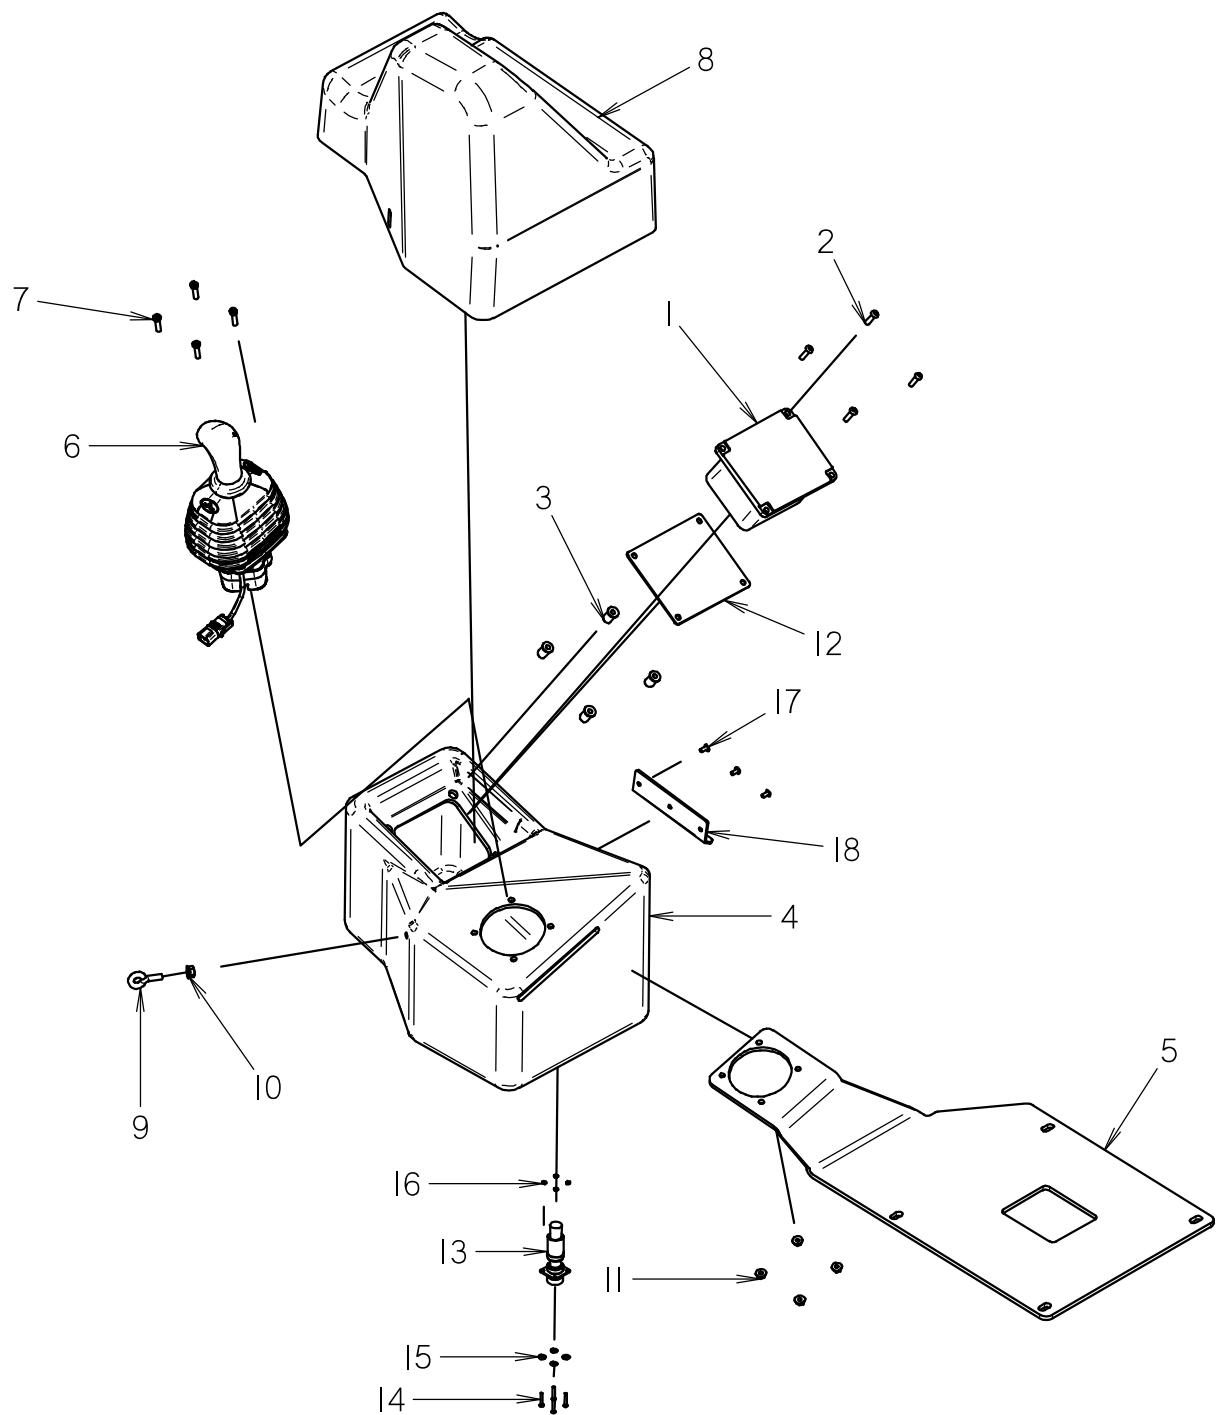

RIGHT CONSOLE


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	N/A	1	REMOTE DISPLAY	
2	I07-3I2	4	SCREW (M6-I.00 X 25MM, BUT SOC)	
3	I07-87I	4	WELLNUT (M6-I.00 X 20.35MM LG)	
4	362-I046	1	RIGHT CONSOLE	
5	300-3I80	1	JOYSTICK MOUNT	
6	I50-II79	1	JOYSTICK	
7	I07-322	4	SCREW (M6-I.00X25MM,SOC,I2.9I)	
8	362-I093	1	WEATHER COVER	
9	I07-570	1	EYE BOLT (M8-I.25 X 20MM)	
I0	I06-386	1	FLG LOCKNUT (M8-I.25)	
I1	I06-385	4	FLG LOCKNUT (M6-I.00)	
I2	348-896	1	COVER PLATE	
I3	214-4I5	1	90D MODULE TO RIG CABLE	
I4	I07-269	4	SCREW (#4-40 X 3/4", PAN)	
I5	I06-0I3	4	WASHER (3/16")	
I6	I05-662	4	NUT (#4-40)	
I7	II0-560	3	POP RIVET (3/16" X I/2", ALUM)	
I8	300-3538	1	BRACKET	

NOT SHOWN:

FOOTNOTES:

NOTE:

LEFT CONSOLE

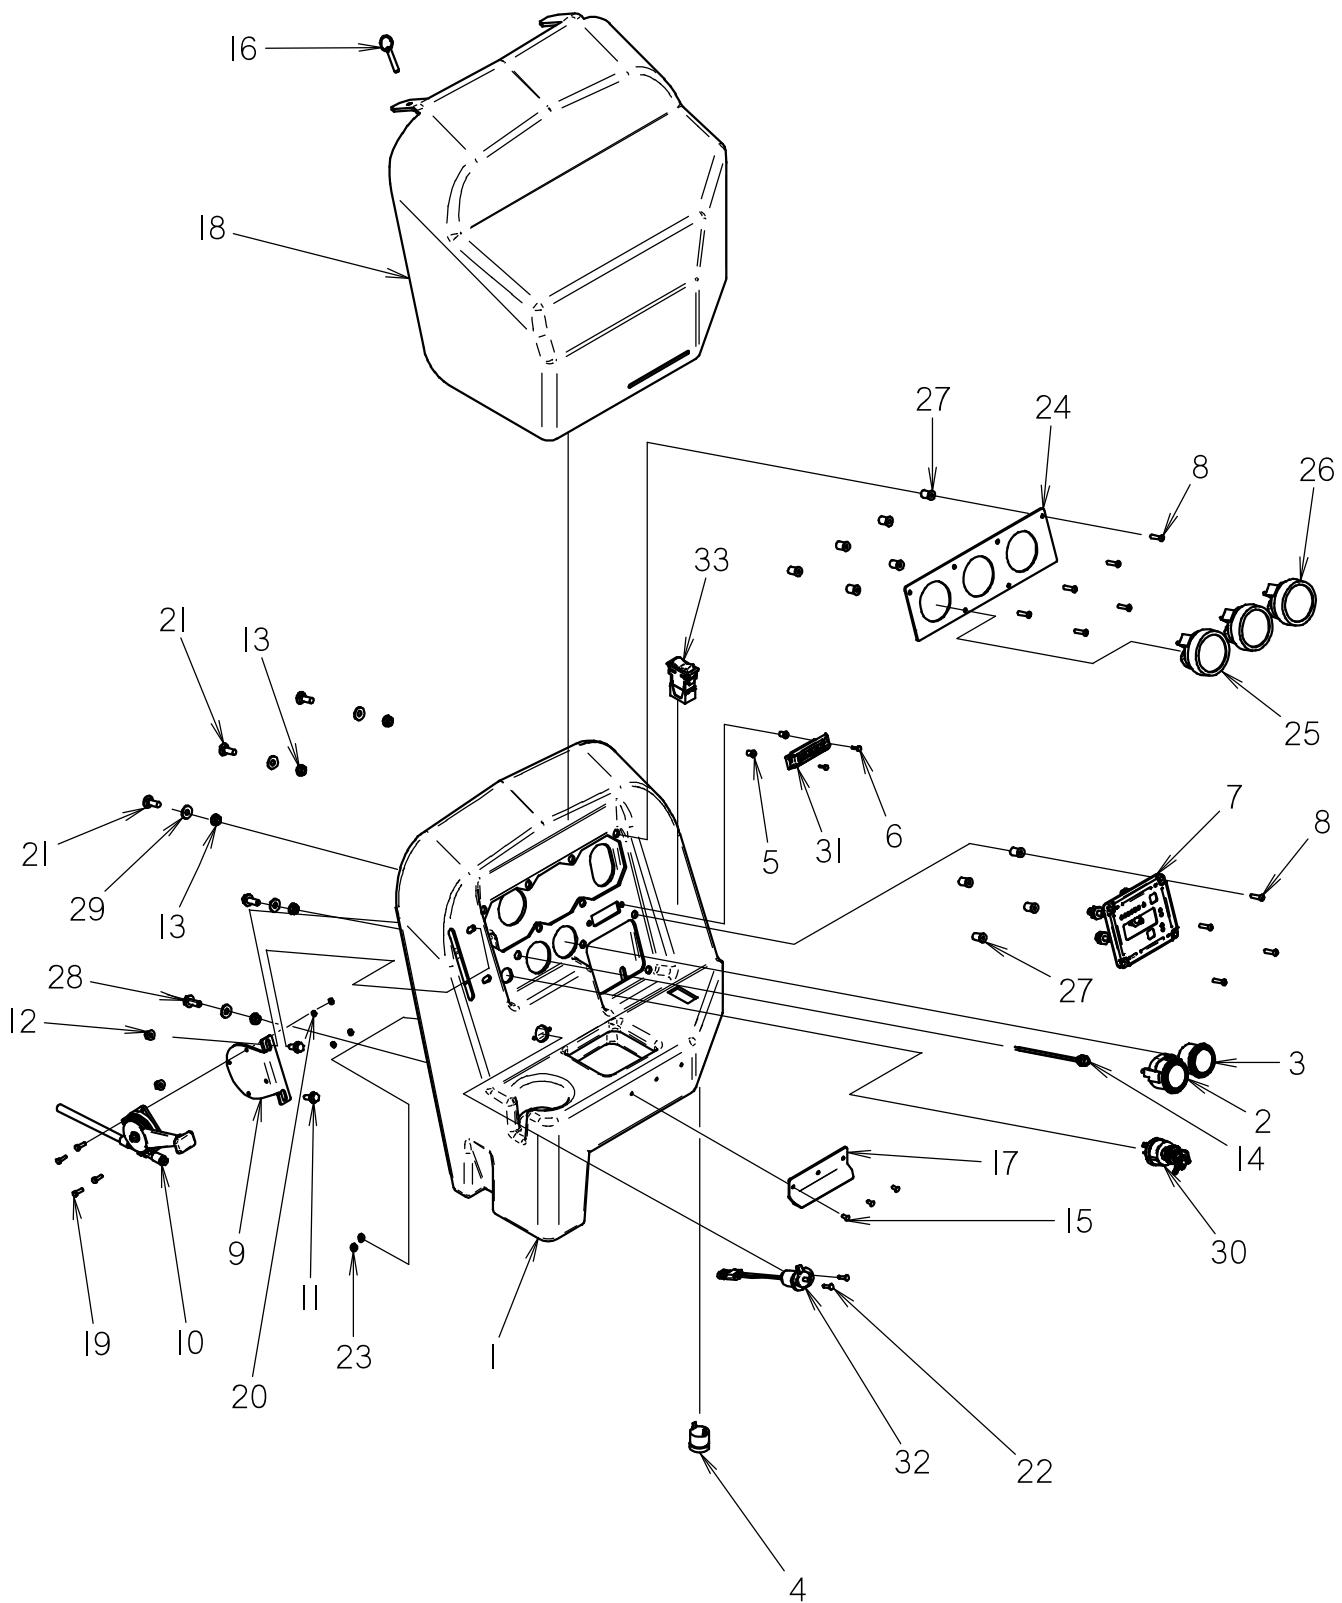

LEFT CONSOLE


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	362-I045	1	LEFT CONSOLE	
2	215-I33	1	FUEL GAUGE	
3	215-I28	1	HOUR METER	
4	306-603	1	AUDIO ALARM	
5	I07-358	2	WELLNUT (M4-0.7 X 12.67MM LG)	
6	I07-393	2	SCREW (M4-0.70 X 16MM, BX)	
7	220-I024	1	ESID MODULE	
8	I07-312	10	SCREW (M6-1.00 X 25MM, BUT SOCI)	
9	300-4725	1	THROTTLE BRACKET	
I0	I95-I501	1	THROTTLE CONTROL CABLE	SEE FOOTNOTE 2
I1	I06-I62	2	FLG SCREW (M8-1.25 X 20MM, GD8)	
I2	I06-386	2	FLG LOCKNUT (M8-1.25)	
I3	I05-834	5	FLG LOCKNUT (3/8-NC)	
I4	214-563	1	RED LED (12V DC)	
I5	I10-560	3	POP RIVET (3/16" X 1/2", ALUM)	
I6	I10-737	1	PULL PIN (5/16" X 2")	
I7	300-3538	1	BRACKET	
I8	362-I094	1	WEATHER COVER	
I9	I07-781	4	HEX SCREW (#I0-24 X 5/8")	
I0	I05-I86	4	NUT (#I0-24)	
I1	I05-600	3	CARRIAGE BOLT (3/8-NC X 1")	
I2	I10-449	2	POP RIVET (3/16" X .690")	
I3	I07-310	2	WASHER (#I0)	
I4	300-3252	1	GAUGE MOUNT PANEL	SEE FOOTNOTE 1
I5	258-062	1	PRESSURE GAUGE (1500 PSI)	FLUID GAUGE
I6	258-045	2	PRESSURE GAUGE (4000 PSI)	
I7	I07-871	10	WELLNUT (M6-1.00 X 20.35MM LG)	
I8	I05-826	2	FLG LK BOLT (3/8-NC X 1")	
I9	I05-I17	5	WASHER (5/16")	
I0	214-852	1	IGNITION SWITCH	
I1	220-664	1	INDICATOR ASSEMBLY	
I2	214-301	1	ACCESSORY SOCKET	
I3	I17-907	1	ROCKER SWITCH (DPDT) ON-ON	BEGINS WITH S/N: CMWJT922JA0000402

NOT SHOWN:

FOOTNOTES:

- I. CENTER GAUGE, THRUST, RIGHT GAUGE, ROTATION
2. IF REPLACING THROTTLE CABLE, ORDER KIT I90-I467, WHICH INCLUDES THROTTLE CABLE I95-I501, SPRING I15-615, AND WASHERS I07-310. SEE PARTS PAGE ID0205412 FOR LOCATION OF THE SPRING AND WASHERS, AND INSTALLATION INSTRUCTIONS ID0230528 FOR DETAILS.

NOTE:

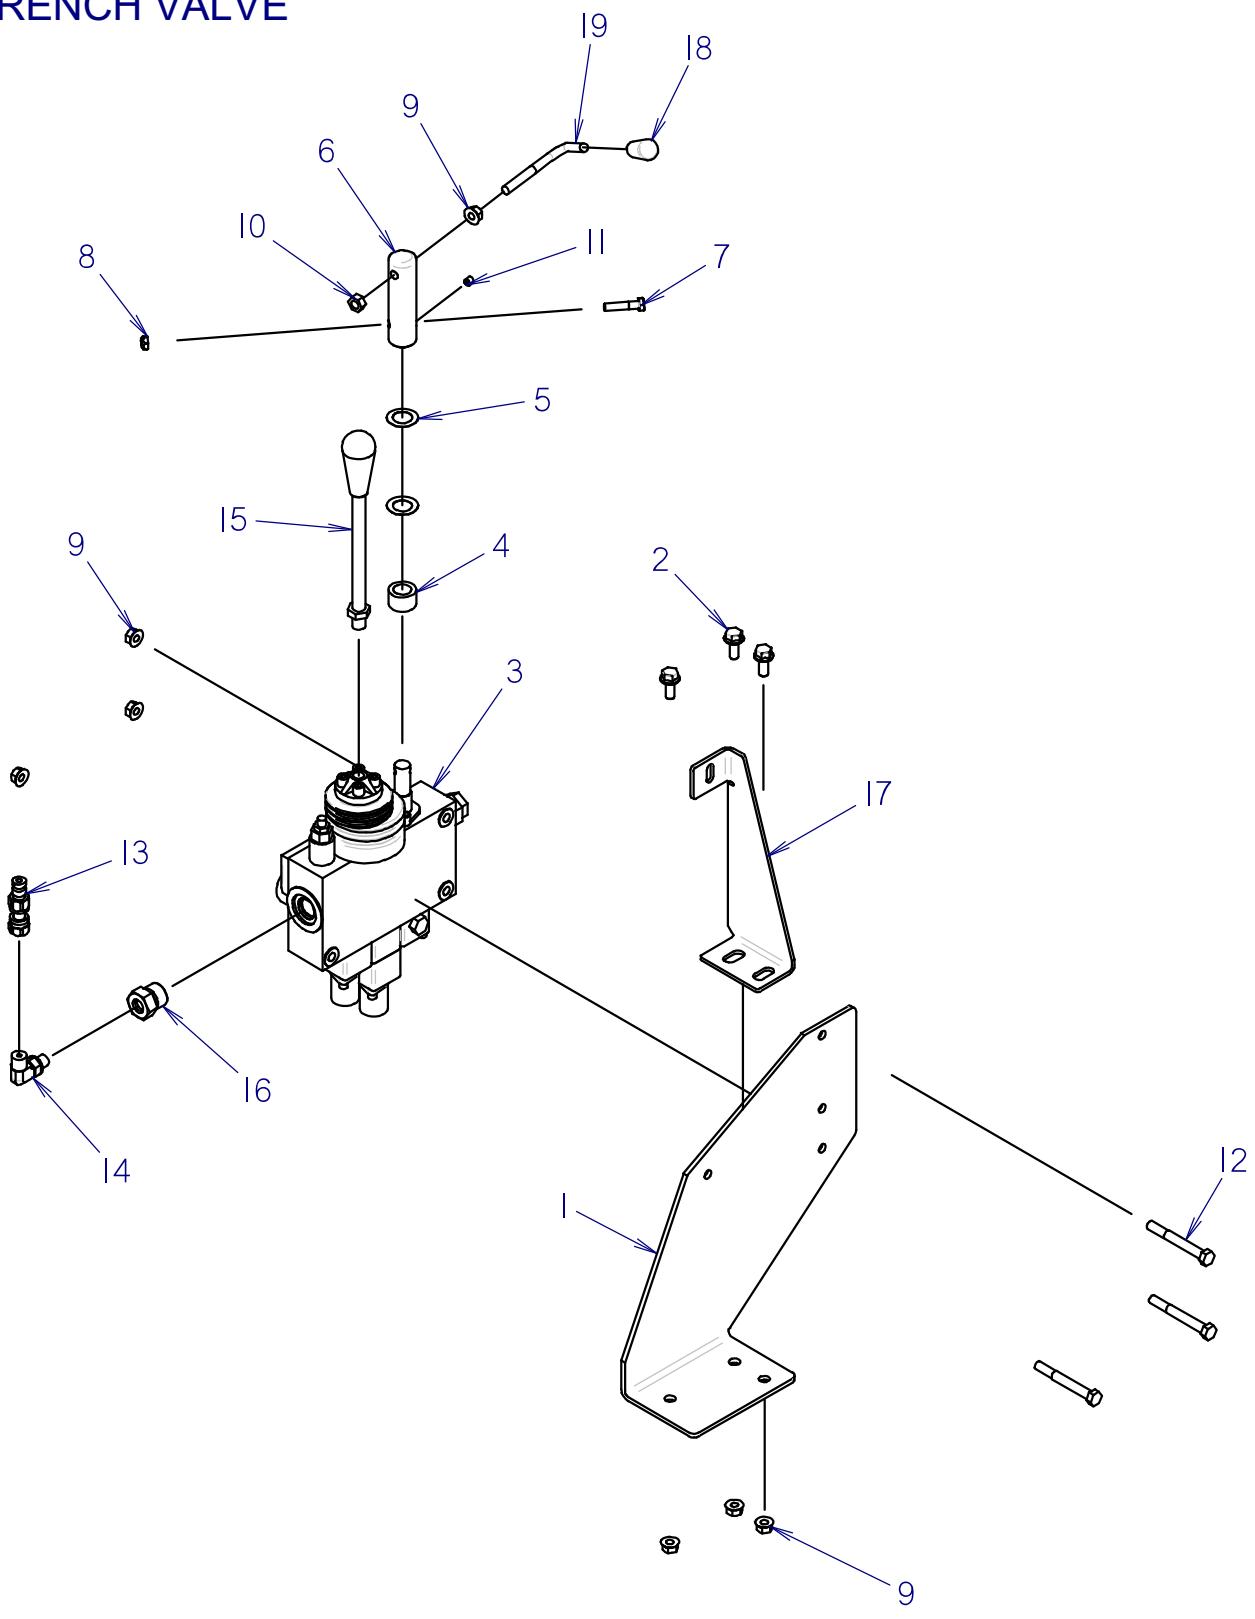WRENCH VALVE

WRENCH VALVE

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	300-3177	1	CONTROL VALVE MOUNT	
2	106-162	3	FLG SCREW (M8-1.25 X 20MM, GD8)	
3	150-1981	1	WRENCH VALVE	
4	178-266	1	SPACER	
5	110-085	2	SPRING WASHER	
6	302-767	1	TUBE	
7	105-856	1	BOLT (1/4-NC X 1 1/4")	
8	105-085	1	LOCKNUT (1/4"-NC)	
9	106-386	7	FLG LOCKNUT (M8-1.25)	
I0	106-561	1	LOCKNUT (M8-1.25, PRV TRQ, 10.9)	
I1	105-712	1	SET SCREW (1/4-NC X 1/4", CUP)	
I2	106-330	3	SCREW (M8-1.25 X 70MM)	
I3	159-156	1	QDC ADAPTER (02-040F)	
I4	154-252	1	CONNECTOR (04S-04090)	
I5	500-I328	1	HANDLEVER	
I6	155-181	1	REDUCER (10S-04SF)	
I7	300-3629	1	GUSSET	
I8	116-906	1	KNOB (5/16" NC, BLACK)	
I9	150-1926	1	LEVER (5/16")	

NOT SHOWN:

FOOTNOTES:


NOTE:

NOTES:

HYDRAULICS

ID0135071

HYDRAULIC PUMP

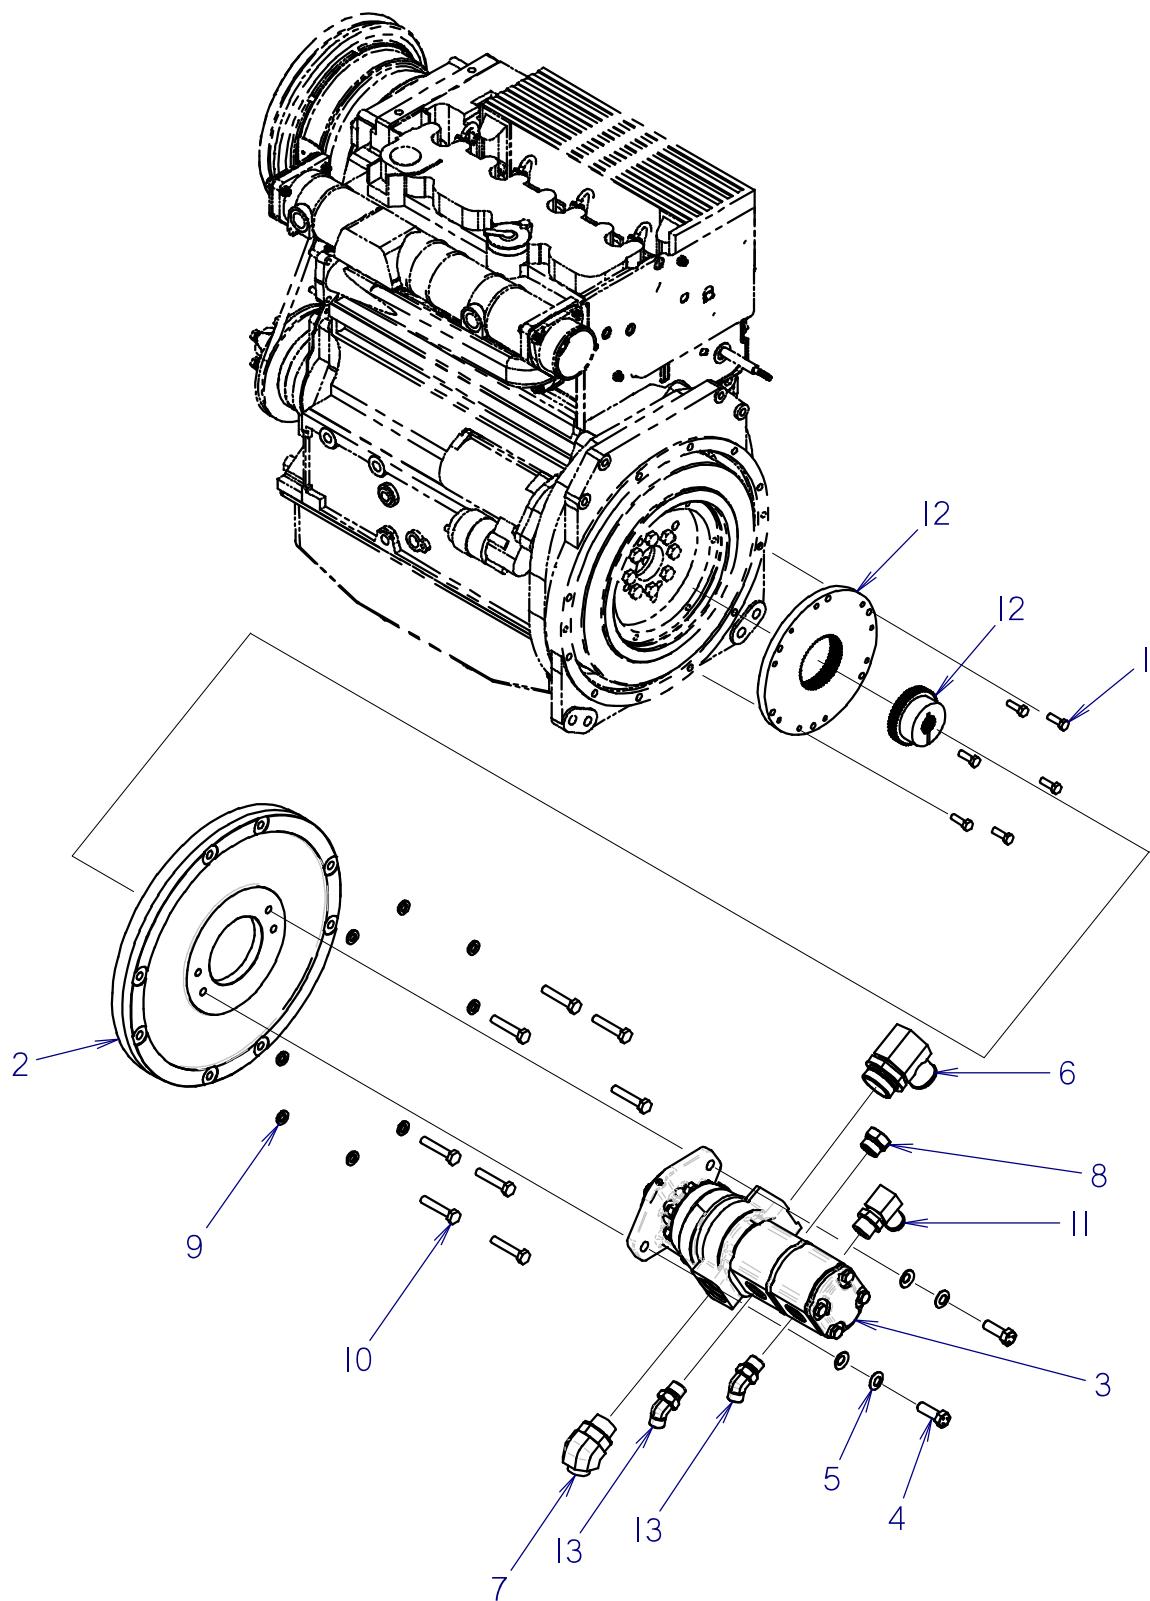

HYDRAULIC PUMP

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	105-806	6	SCREW (M8-1.25 X 25MM)	TORQUE TO 16 FT-LBS, USE LOCTITE 242 OR EQUIVALENT
2	194-763	1	MOUNT PLATE	
3	150-I436	1	TRIPLE GEAR HYDRAULIC PUMP	SEE FOOTNOTE I
4	105-062	2	BOLT (1/2-NC X 1-1/2", FER)	
5	105-058	4	BELLEVILLE WASHER (1/2")	
6	514-135	1	S/O COUPLER (24S-24H90)	
7	154-358	1	CONNECTOR (120-16S45)	
8	500-302	1	PLUG (12 S)	
9	105-073	8	LOCK WASHER (7/16")	
I0	105-839	8	SCREW (M10-1.50 X 55MM)	
I1	155-I46	1	S/O COUPLER (12S-16H90)	
I2	195-I031	1	FLYWHEEL/PUMP COUPLING	TORQUE SOCKET HEAD SCREW TO 45 FT-LBS
I3	154-264	2	CONNECTOR (080-10S45)	


NOT SHOWN:

FOOTNOTES:

- I. SEAL REPAIR KIT P/N: 500-I367

NOTE:

HYDRAULIC RESERVOIR

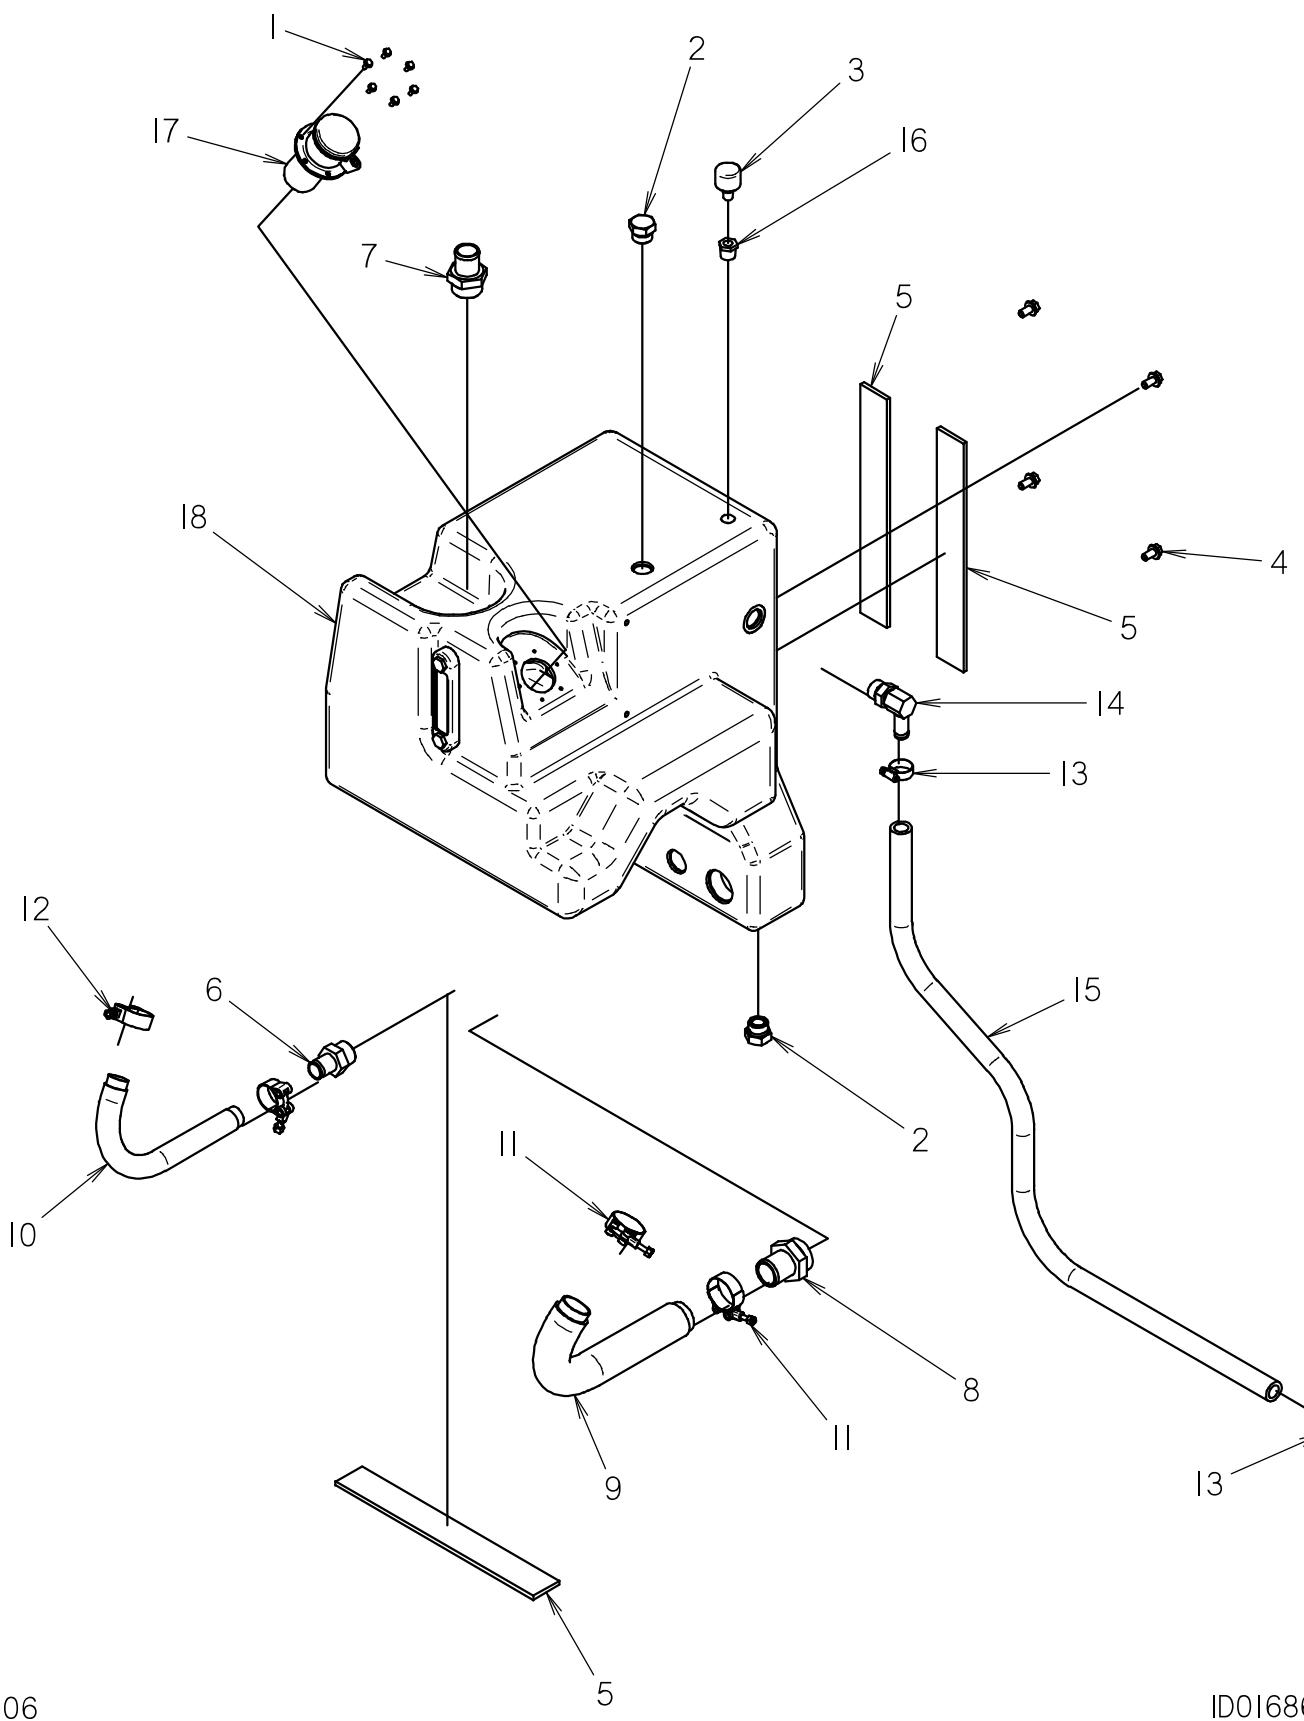

ID0168605

HYDRAULIC RESERVOIR


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	105-214	6	FLG SCREW (#10-24 X .5")	
2	500-302	2	PLUG (I2 S)	
3	III-021	1	BREATHER CAP (TANK)	
4	105-825	4	FLG LK BOLT (3/8-NC X 3/4")	
5	I17-I009	3	SUPPORT MAT	
6	514-088	1	S/O COUPLER (I6S-I6H)	
7	I55-004	1	S/O COUPLER (20S-20H)	
8	514-I38	1	-24 SAE -24H STRAIGHT	
9	II6-588	20	BULK HOSE, II-1/2", SOLD PER FT)	I @ 20"
I0	II6-460	15	BULK HOSE	I @ 15"
II	III-028	2	T-BOLT CLAMP (1.75"-2.00")	
I2	III-027	2	T-BOLT CLAMP (1.25" - 1.50")	
I3	II0-026	2	WORM CLAMP (1/2" TO I-I/4")	
I4	I55-I74	1	S/O COUPLER (I2S-I2H90)	
I5	II6-636	42	BULK HOSE (3/4", SOLD PER FT)	I @ 42"
I6	I15-I35	1	REDUCER (08N-04NF)	
I7	364-567	1	FILL NECK	
I8	362-I048	1	HYDRAULIC RESERVOIR	

NOT SHOWN:
I50-I570 SIGHT GAUGE

FOOTNOTES:

NOTE:

HYDRAULIC FILTER

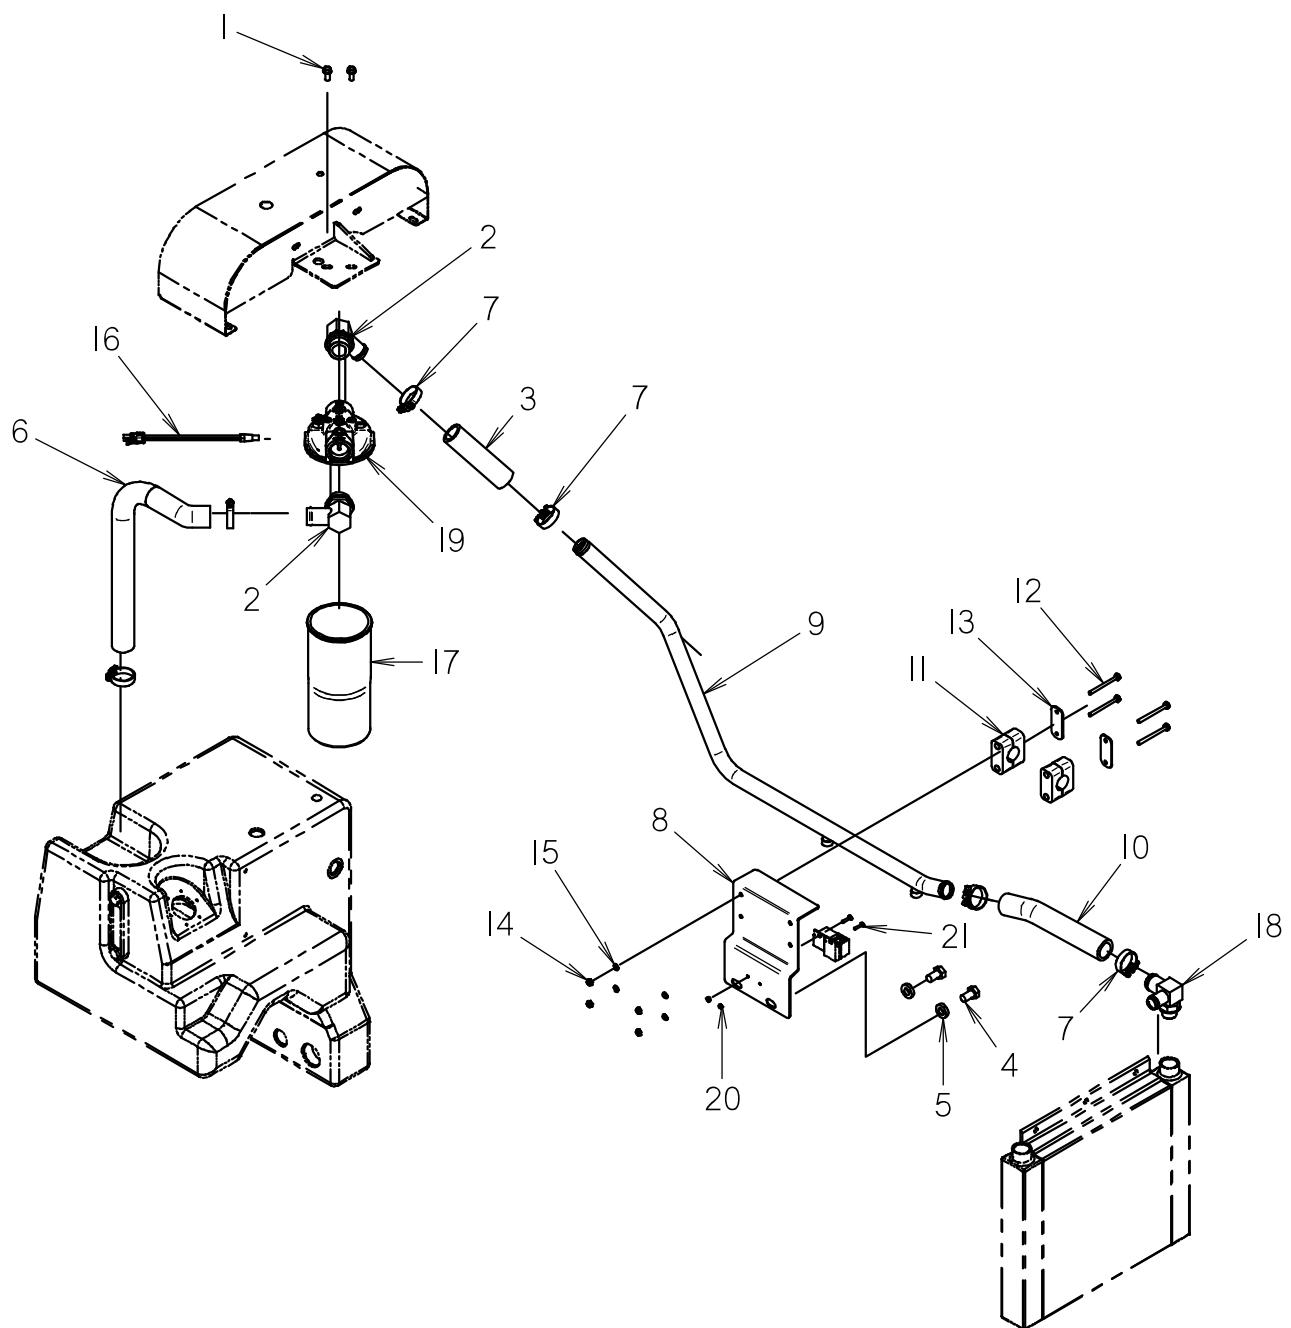

HYDRAULIC FILTER

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	105-823	2	FLG LK BOLT (5/16-NC X 3/4")	
2	155-168	2	S/O COUPLER (20S-20H90)	
3	I16-587	6	BULK HOSE (I-I/4", SOLD PER FT)	I @ 6"
4	I06-I18	2	SCREW (M14-2.0 X 25MM)	
5	105-244	2	WASHER	
6	I16-587	20	BULK HOSE (I I/4", SOLD PER FT.)	I @ 20"
7	149-342	6	T-BOLT CLAMP (I.687")	
8	300-3299	1	BRACKET	
9	I50-I510	1	HARDLINE	
I0	I16-587	I1	BULK HOSE (I-I/4", SOLD PER FT)	I @ I1"
I1	I10-852	2	BLT-ON CLP(I.25", SOLD PER SET)	
I2	I07-283	4	BOLT (I/4-NC X 3")	
I3	322-362	2	BACKUP SPACER	
I4	I05-085	4	LOCKNUT (I/4"-NC)	
I5	I05-079	4	LOCK WASHER (I/4)	
I6	214-854	I	TEMPERATURE SWITCH(I/4NPT,MALE)	
I7	I53-792	I	FILTER ELEMENT (I0 MICRON)	
I8	I50-I53I	I	S/O BR TEE (I6S-20H-I6H)	
I9	I57-458	I	FILTER HEAD	INCLUDES 500-I6I3, OIL TEMP INDICATOR
20	I06-350	2	NUT, HEX, #8-32	
21	I06-349	2	SCREW (8-32 X 3/4" PAN)	


NOT SHOWN:

FOOTNOTES:

NOTE:

HYDRAULIC COOLER BYPASS

ENDS WITH S/N: CMWJT922A70000153

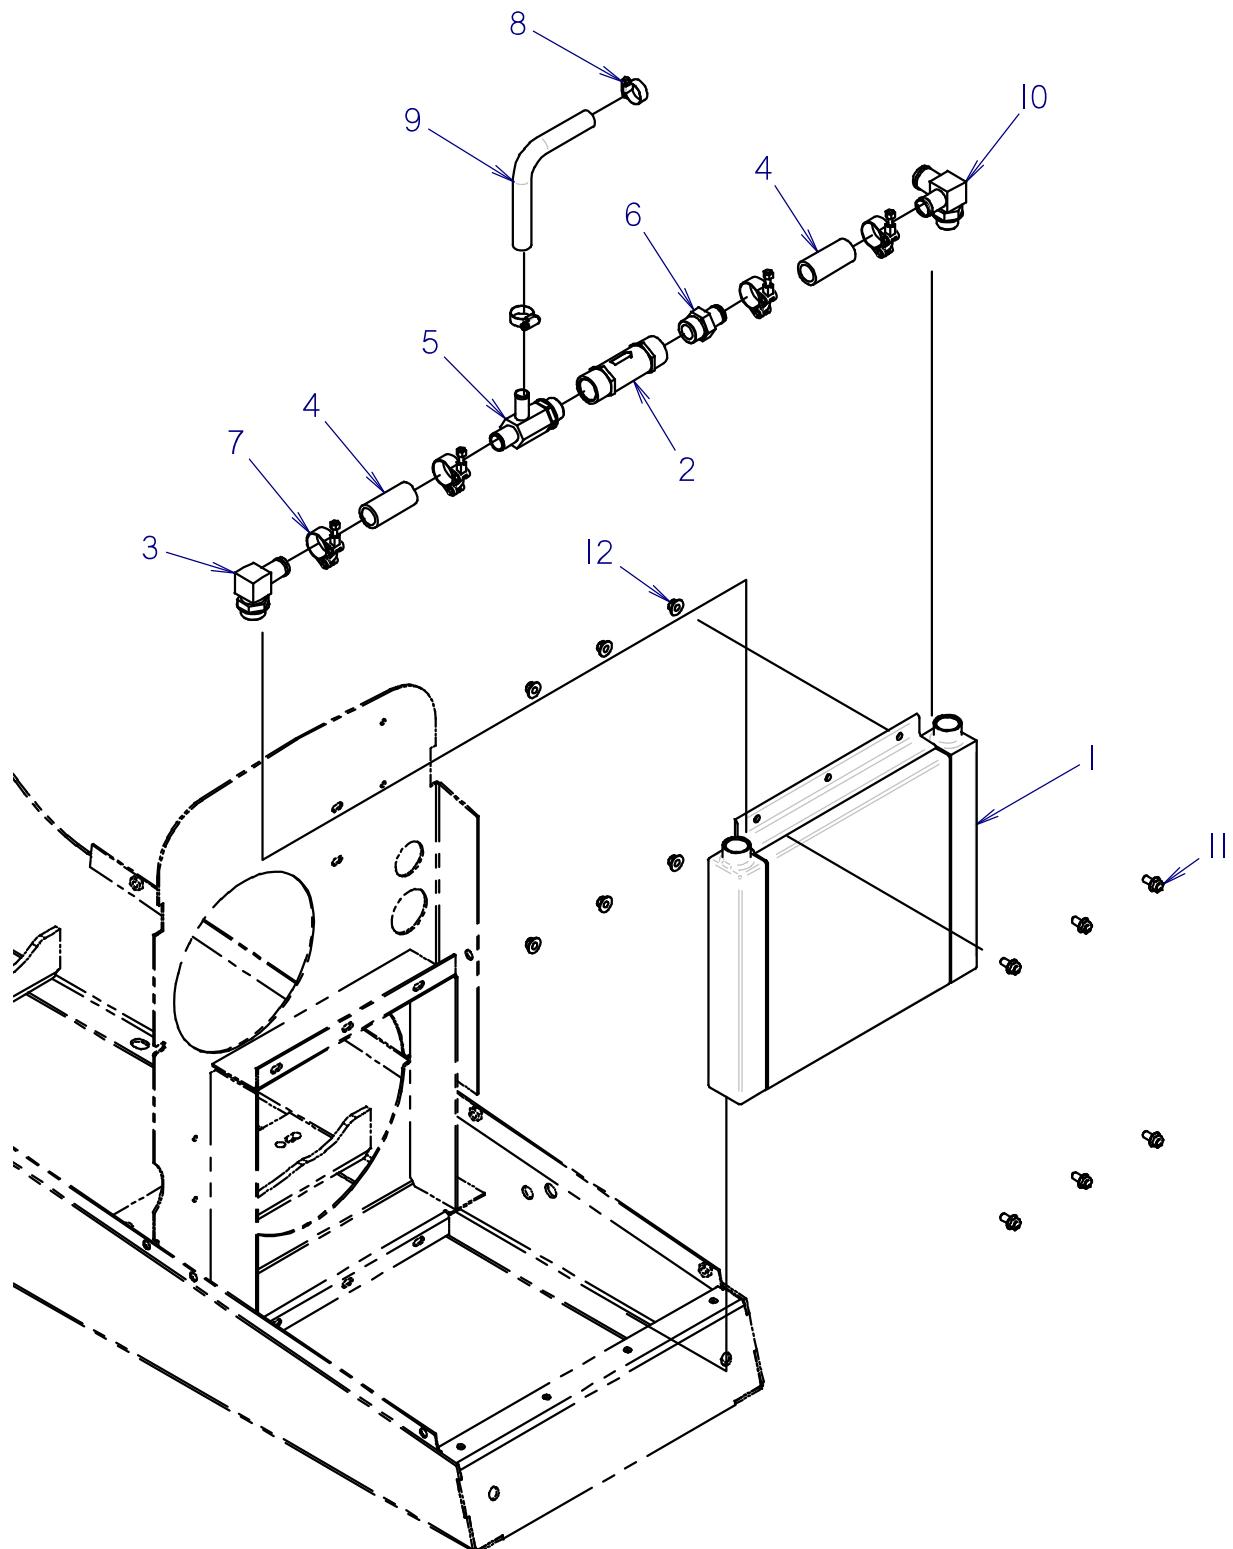

HYDRAULIC COOLER BYPASS

ENDS WITH S/N: CMWJT922A70000153

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	150-I282	1	HYDRAULIC OIL COOLER	
2	153-436	1	FLOW CHECK (I6SF-I6SF)	
3	154-188	1	S/O COUPLER (I6S-I6H90)	
4	I16-460	6	BULK HOSE, (1", SOLD PER 1")	2 @ 3"
5	159-637	1	S/O RUN TEE (I6S-I6H-I2H)	
6	514-088	1	S/O COUPLER (I6S-I6H)	
7	III-027	4	T-BOLT CLAMP (I.25" - I.50")	
8	II0-026	2	WORM CLAMP (I/2" TO I-I/4")	
9	I16-636	10	BULK HOSE, (3/4", SOLD PER 1")	I @ 10"
I0	150-1531	1	S/O BR TEE (I6S-20H-I6H)	
I1	105-825	6	FLG LK BOLT (3/8-NC X 3/4)	
I2	105-814	6	FLG LOCKNUT (3/8-NC)	


NOT SHOWN:

FOOTNOTES:

NOTE:

HYDRAULIC COOLER BYPASS

BEGINS WITH S/N: CMWJT922A70000154

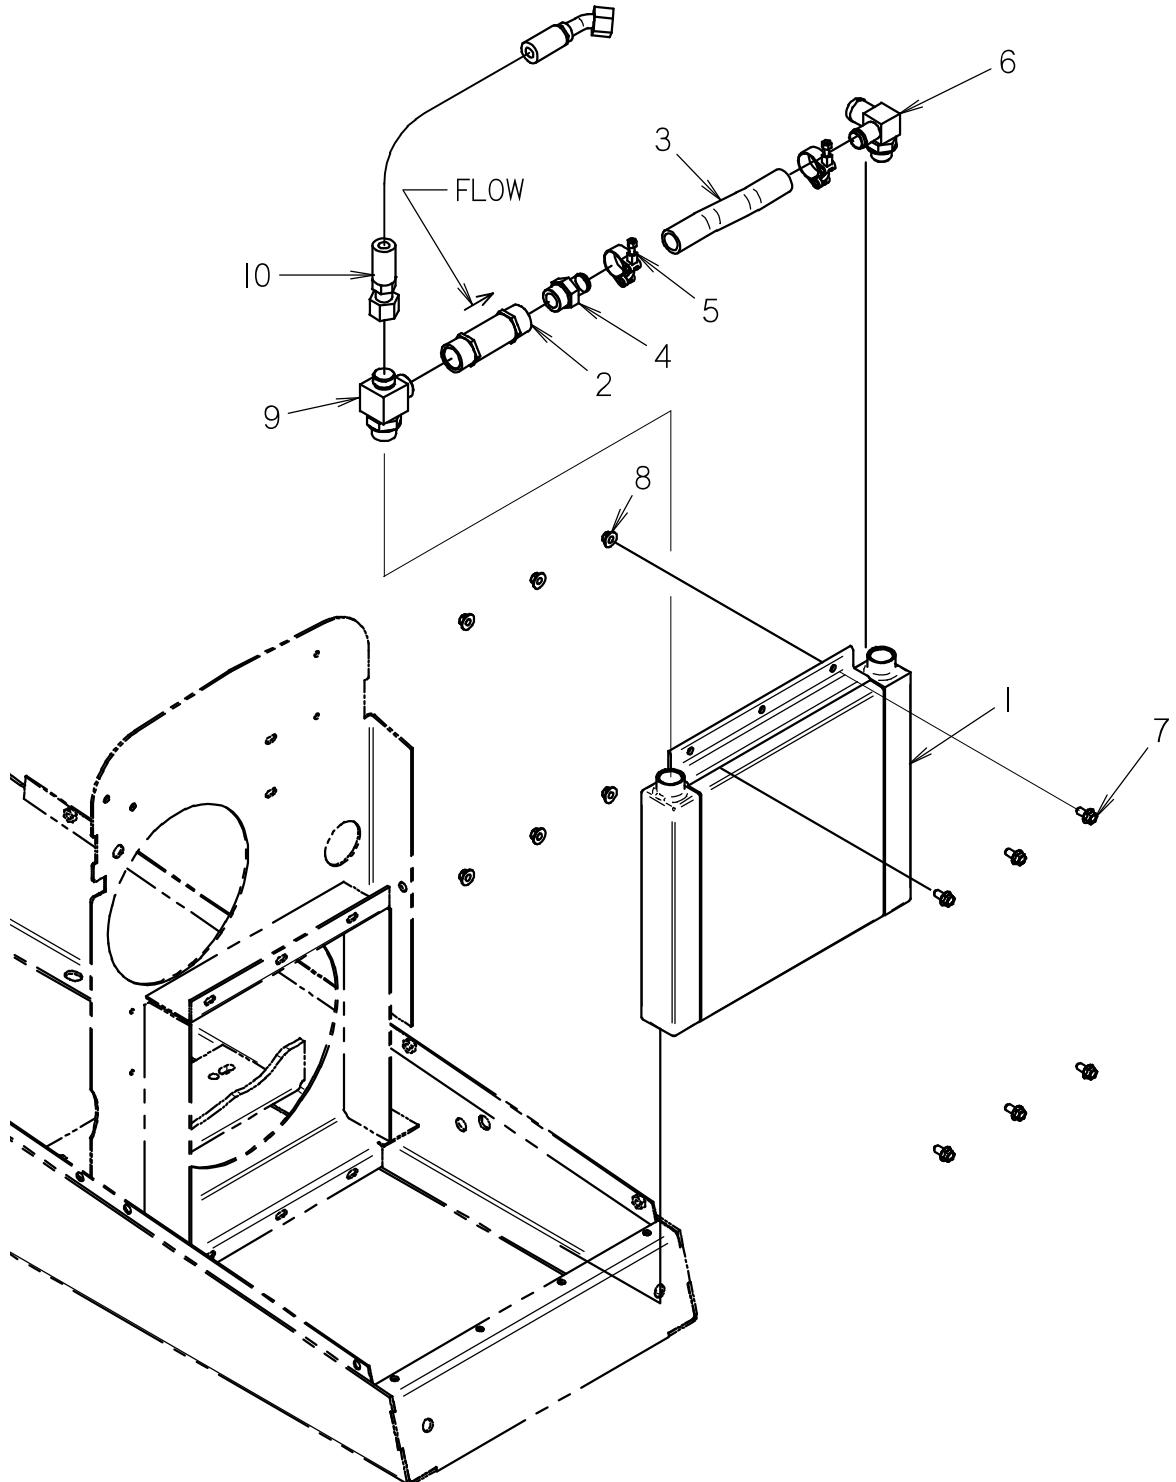

HYDRAULIC COOLER BYPASS


BEGINS WITH S/N: CMWJT922A70000154

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	150-I282	1	HYDRAULIC OIL COOLER	
2	153-436	1	FLOW CHECK (I6SF-I6SF)	
3	I16-460	9	BULK HOSE, (1", SOLD PER 1")	I @ 9"
4	514-088	1	S/O COUPLER (I6S-I6H)	
5	I11-027	2	T-BOLT CLAMP (1.25" - 1.50")	
6	150-I531	1	S/O BR TEE (I6S-20H-I6H)	
7	105-825	6	FLG LK BOLT (3/8-NC X 3/4)	
8	105-814	6	FLG LOCKNUT (3/8-NC)	
9	150-I970	1	RUN TEE (I6S-I6S-I20)	
10	150-I975	1	HOSE (I20FX45-22-3000)	

NOT SHOWN:

FOOTNOTES:

NOTE:

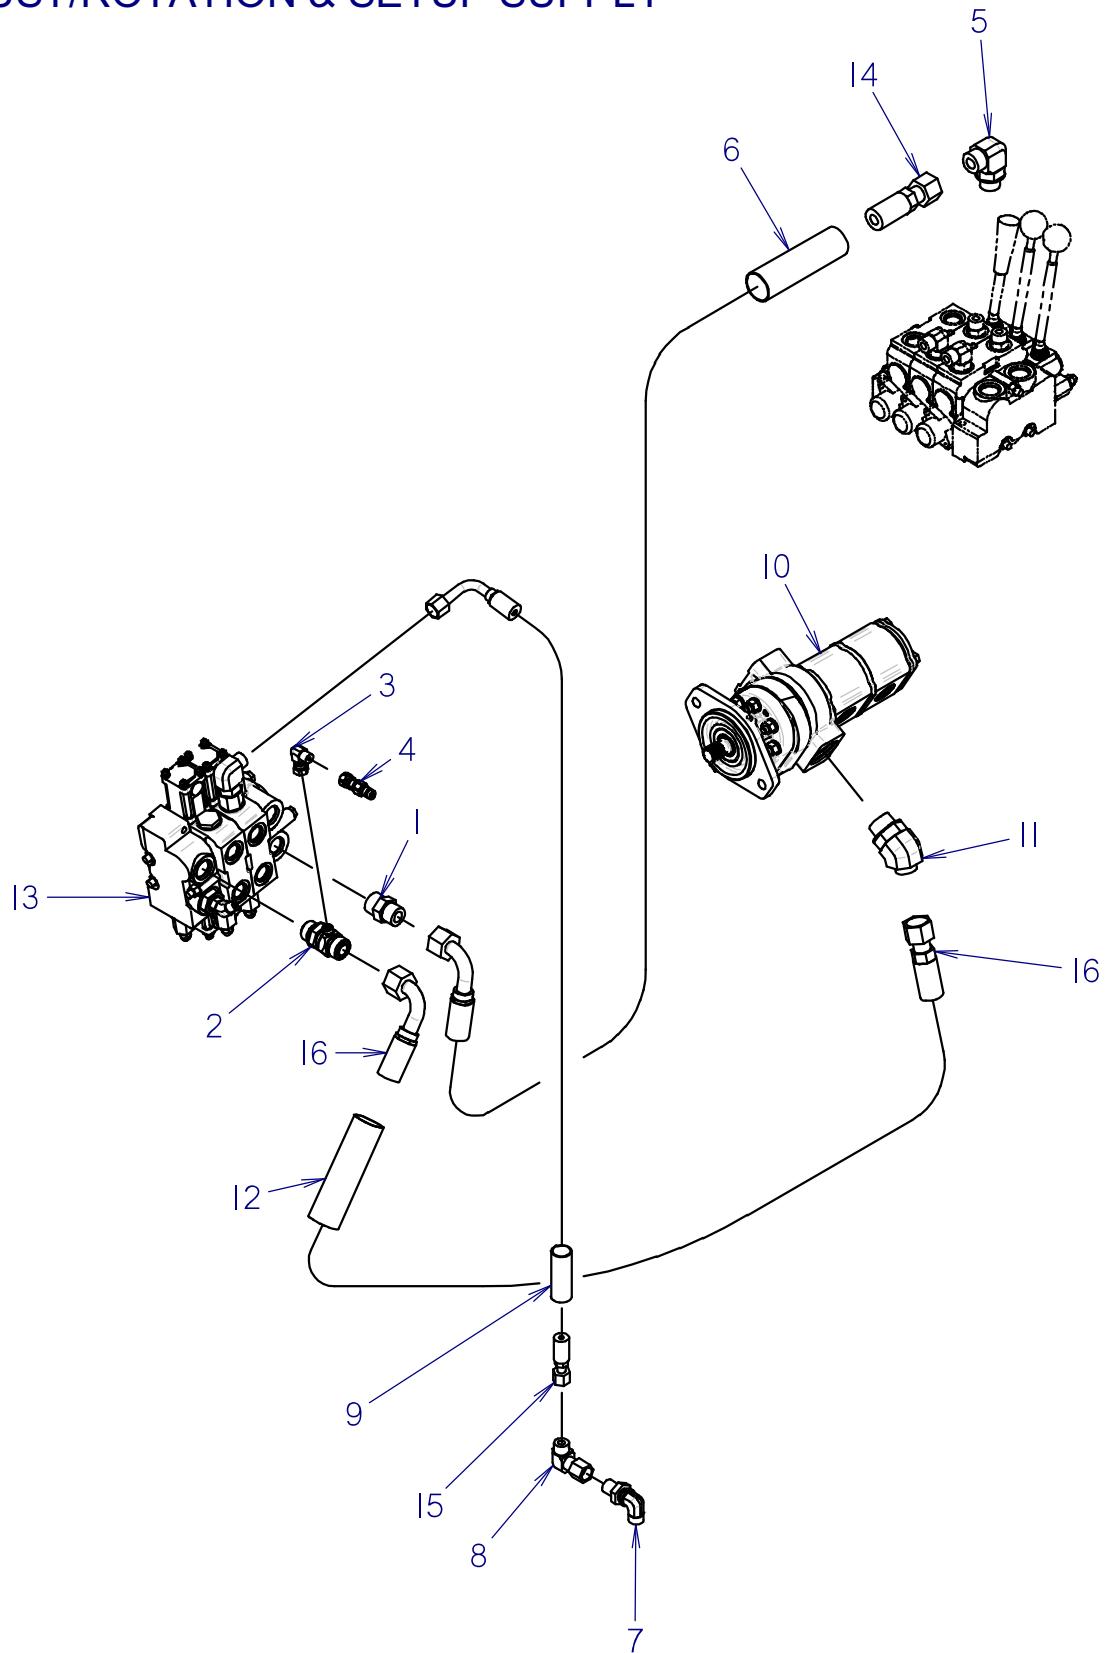THRUST/ROTATION & SETUP SUPPLY

THRUST/ROTATION & SETUP SUPPLY


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	154-269	I	CONNECTOR (I2S-I20)	
2	149-815	I	TEE (I2S-I20-040, SPECIAL)	
3	154-255	I	UNION (040-040FX90)	
4	I59-156	I	QDC ADAPTER (02-040F)	
5	154-270	I	CONNECTOR (I2S-I2090)	
6	II7-312	I	ABRASION SLEEVE (.59" X 80")	
7	154-396	I	BK CONNECTOR (080-08090BK)	
8	154-256	I	UNION (080-080FX90)	
9	II7-684	I	ABRASION SLEEVE (.00" X 26")	
I0	150-I436	I	TRIPLE GEAR HYDRAULIC PUMP	
II	154-358	I	CONNECTOR (I20-I6S45)	
I2	II5-938	I	ABRASION SLEEVE (.59" X 66")	
I3	150-II74	I	VALVE	
I4	515-218	I	HOSE (I20FX90-80"-3000)	
I5	515-379	I	HOSE (080FX90L-28"-3000)	
I6	150-I641	I	HOSE (I20FX90-68"-3000)	

NOT SHOWN:

FOOTNOTES:

NOTE:

GROUND DRIVE HYDRAULICS

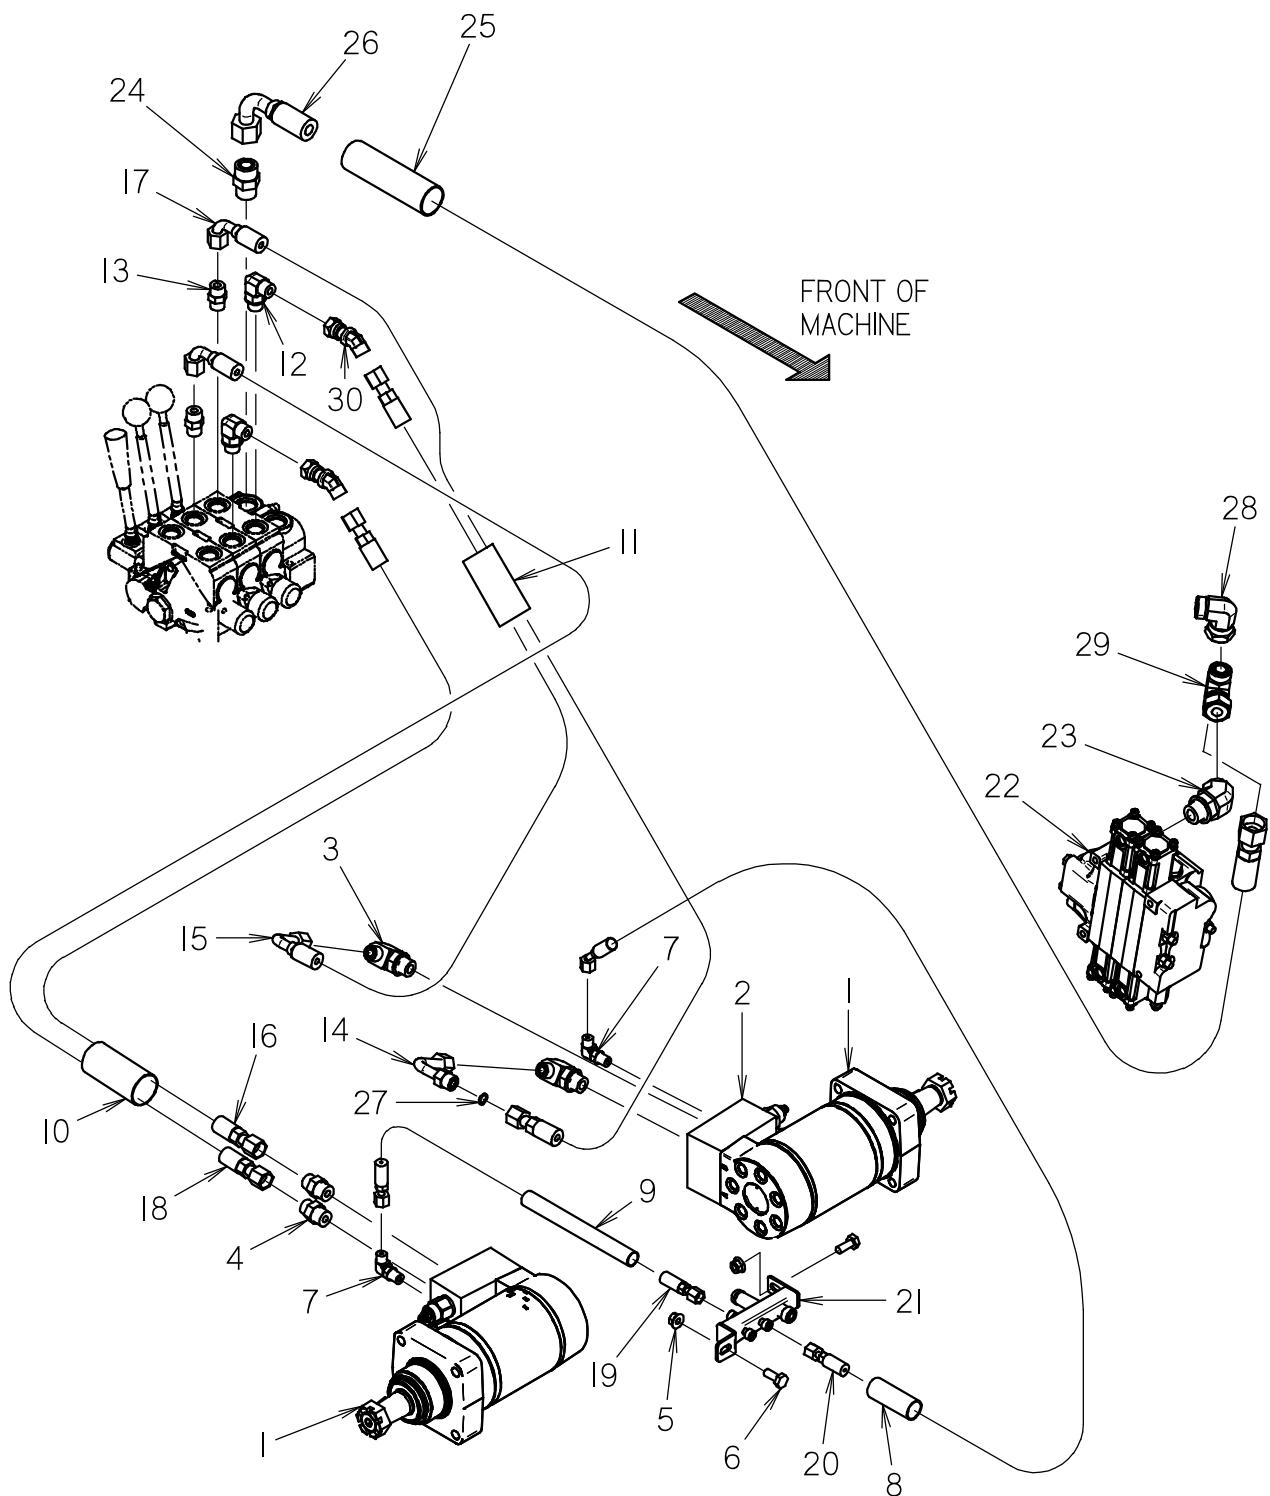

GROUND DRIVE HYDRAULICS


REF	PART NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	150-1314	2	GEROLER MOTOR		SEE FOOTNOTES 1 & 2
2	150-1488	2	COUNTERBALANCE VALVE		SEE FOOTNOTE 3
3	154-322	2	CONNECTOR I080-I0S90		
4	154-279	2	CONNECTOR I080-I0S1		
5	106-387	2	FLG LOCKNUT IMI0-I,50		
6	105-245	2	SCREW IMI0-I,50 X 25MMI		
7	154-226	2	CONNECTOR I040-06S90		
8	I17-714	1	ABRASION SLEEVE I1,00" X 54""		
9	I17-993	1	ABRASION SLEEVE I1,00" X 23"		
I0	I17-686	1	ABRASION SLEEVE I1,75" X 43"		
I1	I15-934	1	ABRASION SLEEVE I1,75" X 100""		
I2	154-235	2	CONNECTOR I08S-08090		
I3	154-233	2	CONNECTOR I08S-080		
I4	150-I800	1	HYD LINE I-08I		
I5	150-I344	1	HOSE I080FX90L-I08"-3000		
I6	150-I565	1	HOSE I080FX-54"-3000		
I7	153-30I	1	HOSE I080FX90S-I08"-3000		
I8	154-884	1	HOSE I080FX90-60"-3000		
I9	515-735	1	HOSE I040FX-22"-3000		
I0	154-898	1	HOSE I040FX45-54"-3000		
I1	150-I548	1	RETURN MANIFOLD		
I2	150-I174	1	VALVE		
I3	154-25I	1	CONNECTOR I12S-I2045		
I4	154-269	1	CONNECTOR I12S-I20		
I5	I17-312	1	ABRASION SLEEVE I1,59" X 80"		
I6	150-I945	1	HOSE I120FX90M-84"-3000		
I7	157-039	1	O-RING I014 D90		
I8	154-457	1	UNION I120-I20FX90		
I9	154-456	1	UN BR TEE I120FX-I20-I20	BEGINS WITH S/N: CMWJT922A70000I54	
I0	150-I789	2	CONNECTOR I080-080FX45	BEGINS WITH S/N:	

NOT SHOWN:

FOOTNOTES:

1. SEAL REPAIR KIT P/N: 500-510
2. DRIVE SHAFT ONLY P/N: 500-I39I
3. COUNTERBALANCE CARTRIDGE KIT (2 PER MANIFOLD) P/N: 500-I304

NOTE:

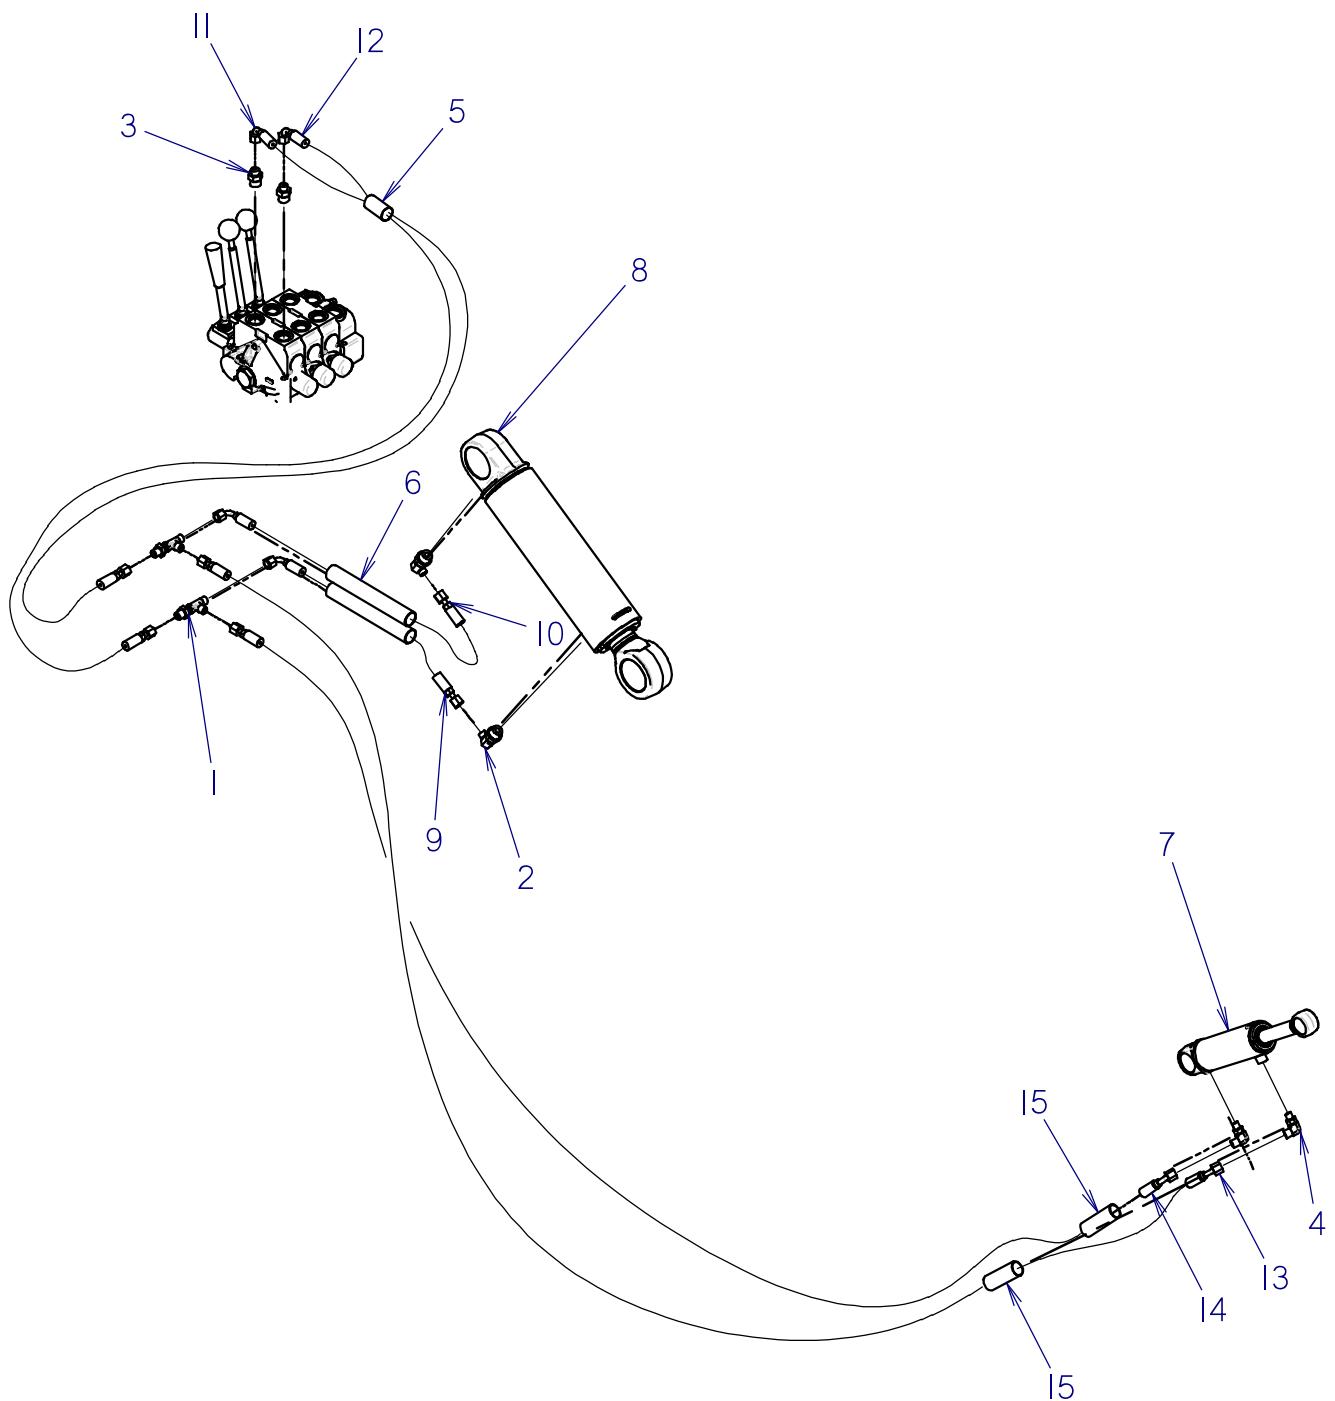STABILIZER/TILT HYDRAULICS

STABILIZER/TILT HYDRAULICS


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	154-424	2	BK RUN TEE I040-040-040BK	
2	154-276	2	CONNECTOR I040-08S90	
3	154-261	2	CONNECTOR I040-08S1	
4	154-252	2	CONNECTOR I04S-04090	
5	I17-612	1	ABRASION SLEEVE I1.00" X 46"	
6	I17-607	2	ABRASION SLEEVE I1.00" X 21"	
7	I51-038	1	CYL I2.0 X I.0 X 4.0	
8	I51-I16	1	CYL I3.5 X 2.00 X I0.0	
9	515-041	1	HOSE I040FX90-20"-3000	
I0	515-041	1	HOSE I040FX90-20"-3000	
I1	515-257	1	HOSE I040FX90S-54"-3000	
I2	515-729	1	HOSE I040FX90-52"-3000	
I3	150-I643	1	HOSE I040FX45-96"-3000	
I4	150-I642	1	HOSE I040FX45-92"-3000	
I5	I17-209	2	ABRASION SLEEVE I1.00" X 90"	

NOT SHOWN:

FOOTNOTES:

NOTE:

ANCHOR VALVE SERVICE PARTS

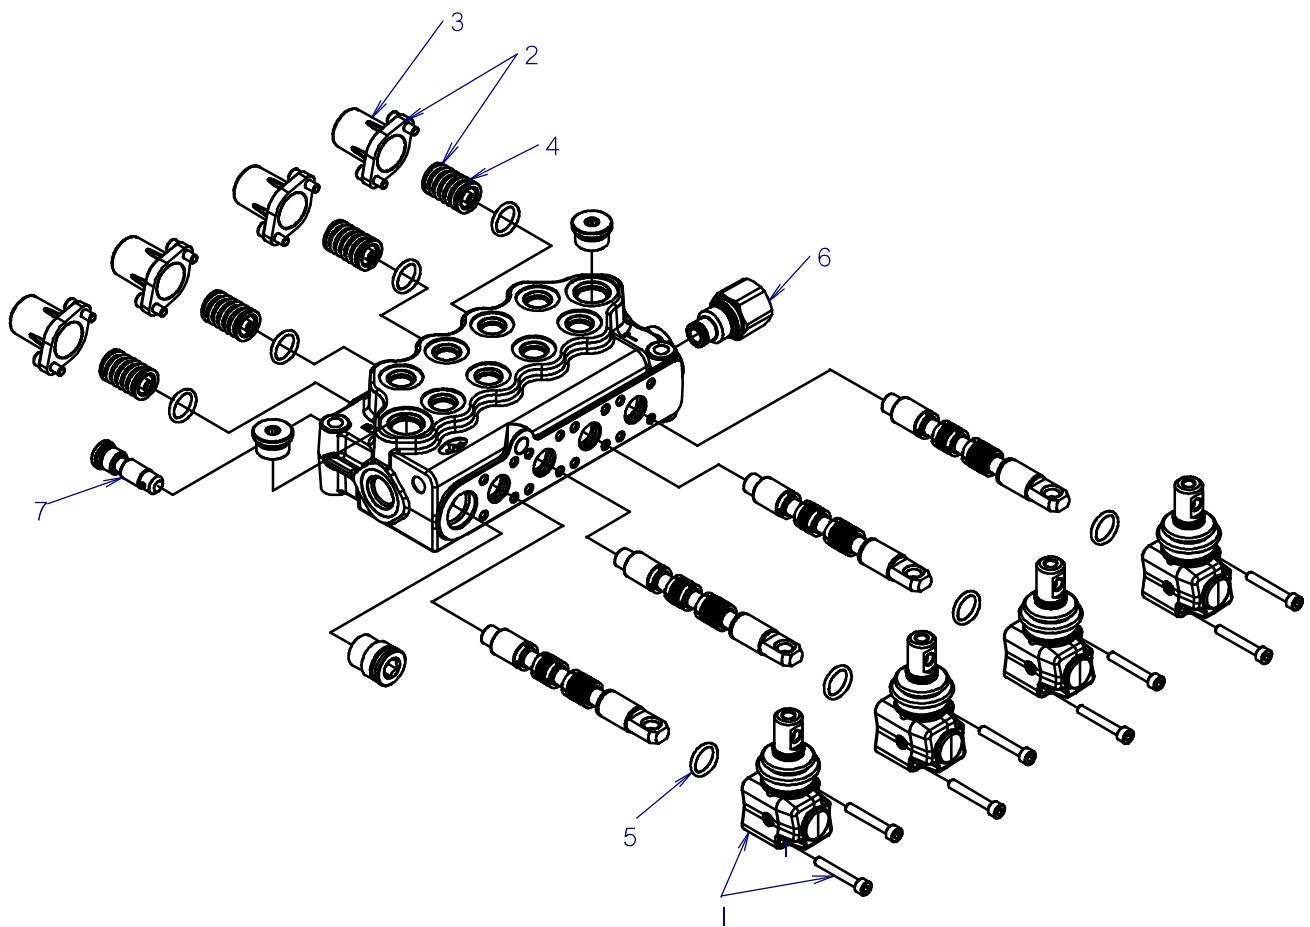

ANCHOR VALVE SERVICE PARTS


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	I50-I307	-	4 SPOOL MONOBLOCK DIRECTIONAL VALVE	
1	499-I43	4	LEVER BOX KIT	
2	153-063	4	SPOOL BONNET AND CONTROL KIT	INCLUDES REF NO. 3 & 4
3	500-I373	4	SPOOL BONNET	
4	499-I42	4	SPOOL CONTROL KIT	
5	157-218	8	O-RING (D70)	
6	500-969	1	POWER BEYOND SLEEVE	
7	I49-664	1	LOAD CHECK	

NOT SHOWN:

FOOTNOTES:

NOTE:

ANCHOR VALVE HYDRAULICS

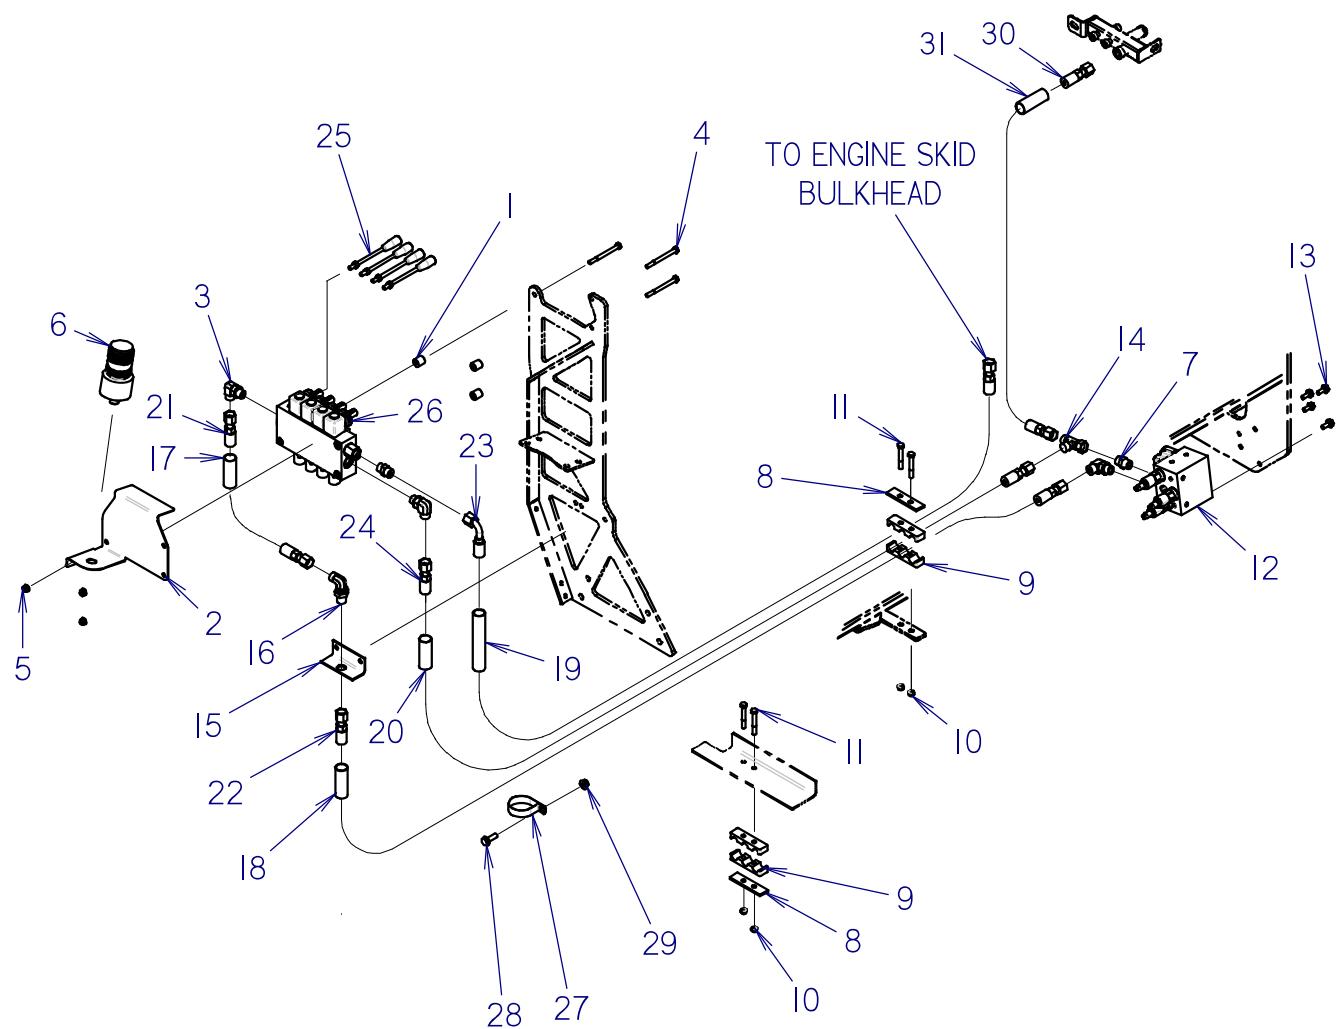

ANCHOR VALVE HYDRAULICS


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	I79-501	3	SPACER	
2	319-330	1	LIGHT MOUNT	
3	154-235	3	CONNECTOR I08S-08090	
4	107-078	3	SCREW (M8-I.25 X 90MM)	
5	106-386	3	FLG LOCKNUT (M8-I.25)	
6	217-297	1	STROBE LIGHT (GREEN)	
7	154-233	2	CONNECTOR I08S-080	
8	322-202	2	HOSE CLAMP BAR	
9	I10-323	4	HOSE CLAMP (3/4")	
I0	107-096	4	LOCKNUT (M8-I.25, NLK)	
I1	106-570	4	SCREW (M8-I.25 X 60MM)	
I2	150-1289	1	HYDRAULIC MANIFOLD - PILOT PRESSURE	
I3	106-162	4	FLG SCREW (M8-I.25 X 20MM, CD8)	
I4	154-266	1	UNION RUN TEE I080FX-080-080	
I5	300-408I	1	BULKHEAD BRACKET	
I6	154-396	1	BK CONNECTOR I080-08090BK	
I7	I17-409	1	ABRASION SLEEVE (1.00" X 28")	
I8	I17-213	1	ABRASION SLEEVE (1.00" X 96")	
I9	I17-399	1	ABRASION SLEEVE (1.00" X 130")	
I20	I17-986	1	ABRASION SLEEVE (1.00" X 120")	
I21	154-72I	1	HOSE I080FX-28"-3000	
I22	155-495	1	HOSE I080FX-96"-3000	
I23	150-I574	1	HOSE I080FX90-I28"-3000	
I24	154-778	1	HOSE I080FX-I20"-3000	
I25	500-908	4	LEVER (M8-I.25, BLACK)	
I26	150-I307	1	HYD CONTROL VALVE (4-SPPOOL)	
I27	I10-555	1	CLAMP (1-7/8")	
I28	106-383	1	FLG LK SCREW (M10-I.50 X 30MM)	
I29	106-387	1	FLG LOCKNUT (M10-I.50)	
I30	150-I645	1	HOSE I080FX-22"-3000	
I31	I17-607	1	ABRASION SLEEVE (1.00" X 21")	

NOT SHOWN:

FOOTNOTES:

NOTE:

ANCHOR HYDRAULICS

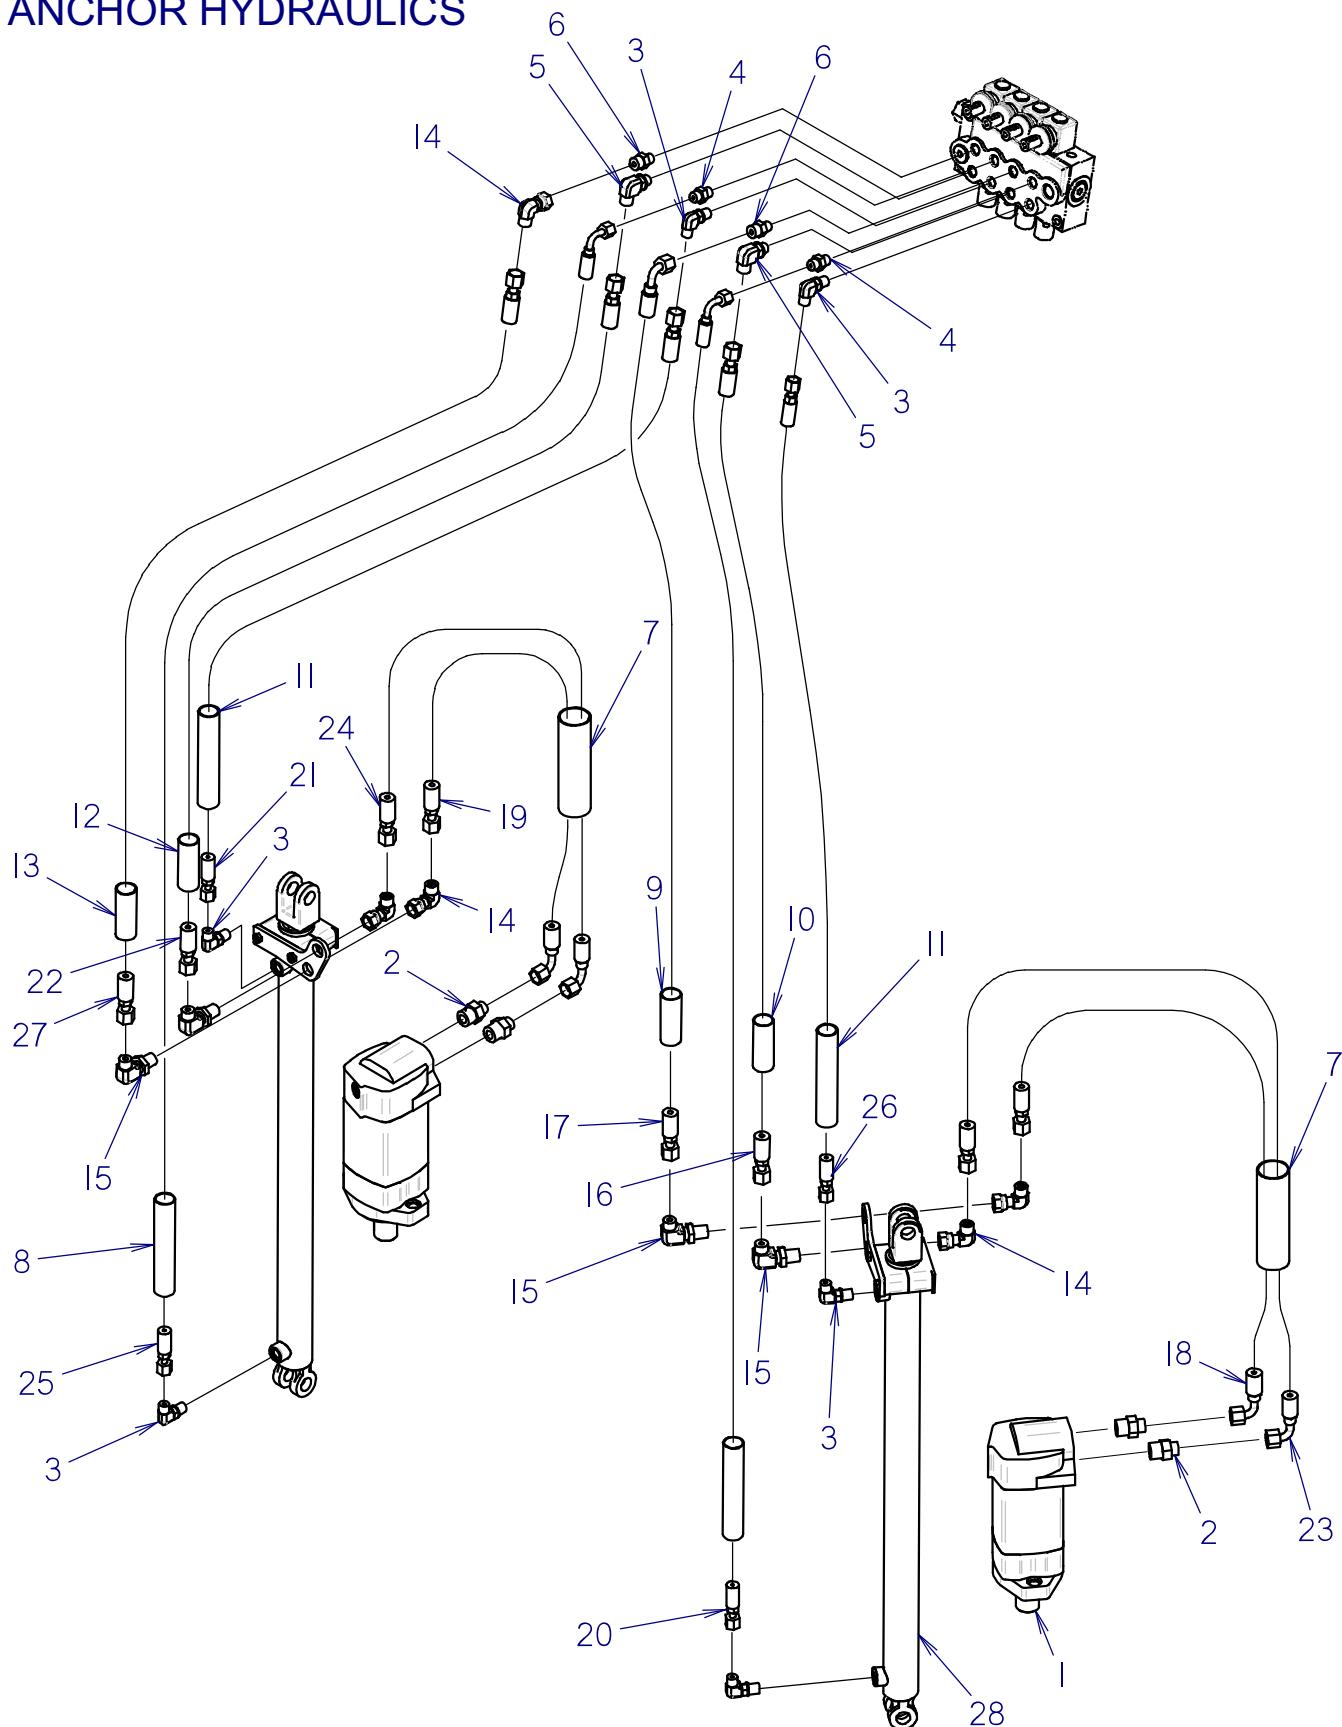

ANCHOR HYDRAULICS


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	158-700	2	HYD MOTOR	
2	154-369	4	CONNECTOR I060-I0S)	
3	154-226	6	CONNECTOR I040-06S90)	
4	154-220	2	CONNECTOR I040-06S)	
5	154-342	2	CONNECTOR I06S-06090)	
6	154-221	2	CONNECTOR I06S-060)	
7	I17-679	2	ABRASION SLEEVE (1.59" X 32")	
8	I17-994	2	ABRASION SLEEVE (1.00" X 53")	
9	I17-684	1	ABRASION SLEEVE (1.00" X 26")	
I0	I17-409	1	ABRASION SLEEVE (1.00" X 28")	
I1	I17-280	2	ABRASION SLEEVE (1.00" X 25")	
I2	I17-6II	1	ABRASION SLEEVE (1.00" X 22")	
I3	I17-989	1	ABRASION SLEEVE (1.00" X 24")	
I4	154-228	5	UNION I060-060FX90)	
I5	154-229	4	BK CONNECTOR I060-06090BK)	
I6	5I5-7II	1	HOSE I060FX-25"-3000)	
I7	I49-335	1	HOSE I060FX90M-26"-3000)	
I8	I57-822	1	HOSE I060FX90-30" -3000)	
I9	5I5-707	1	HOSE I040FX90-32" -3000)	
I0	I57-910	1	HOSE I040FX90M-53" -3000)	
I1	5I5-755	1	HOSE I040FX-25" -3000)	
I2	I57-936	1	HOSE I06DFX-22" -3000)	
I3	5I5-707	1	HOSE I060FX90-32"-3000)	
I4	5I5-707	1	HOSE I060FX90-32"-3000)	
I5	I57-910	1	HOSE I040FX90M-53"-3000)	
I6	5I5-755	1	HOSE I040FX-25"-3000)	
I7	154-807	1	HOSE I060FX-24"-3000)	
I8	15I-214	2	HYD CYL	

NOT SHOWN:

FOOTNOTES:

NOTE:

DRILLING FLUID MOTOR HYDRAULICS

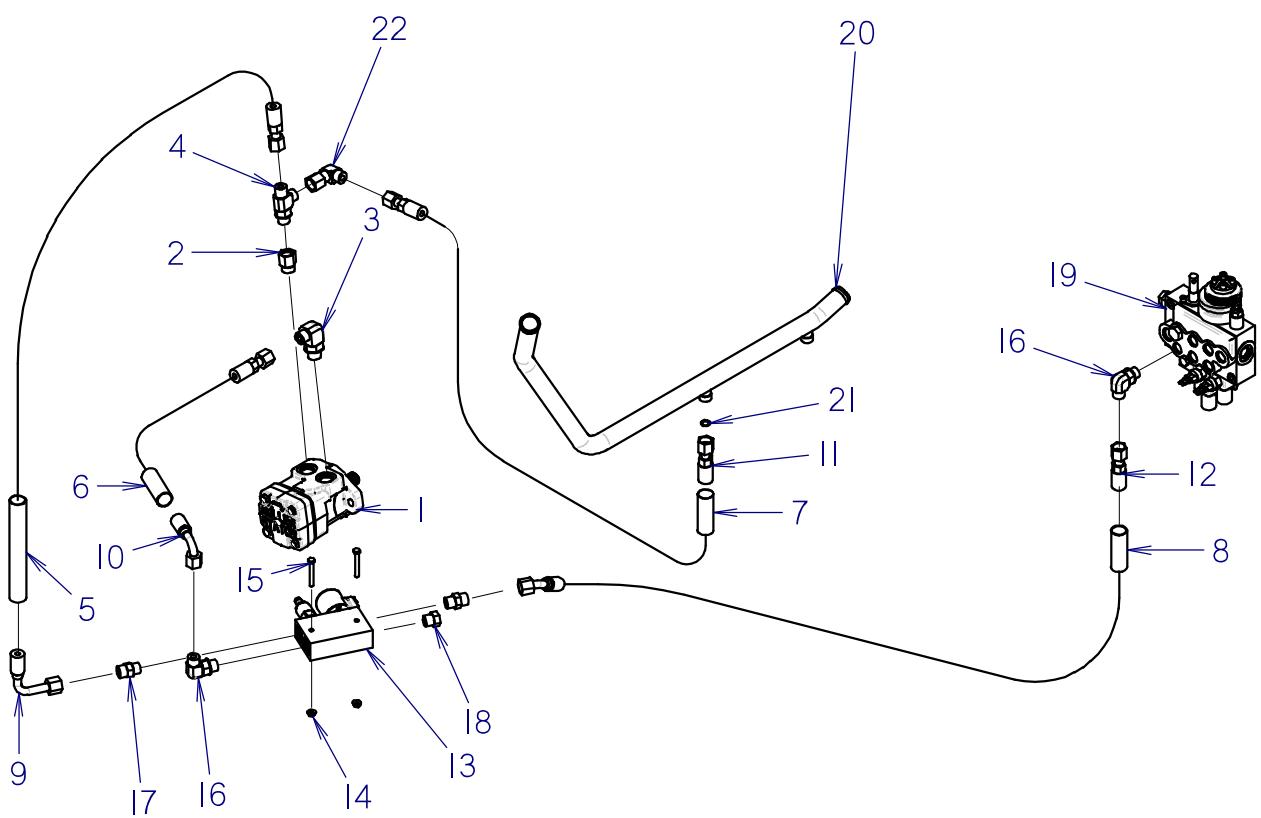

DRILLING FLUID MOTOR HYDRAULICS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	I50-I262	1	GEROLER GEAR MOTOR	SEE FOOTNOTE 1
2	I55-193	1	REDUCER (I0S-08SF)	
3	I54-322	1	CONNECTOR (I080-I0S90)	
4	I54-299	1	RUN TEE (08S-080-080)	
5	I17-676	1	ABRASION SLEEVE (1.00" X 30")	
6	I17-608	1	ABRASION SLEEVE (1.00" X 15")	
7	I17-413	1	ABRASION SLEEVE (1.00" X 84")	
8	I17-713	1	ABRASION SLEEVE (1.00" X 76")	
9	I54-907	1	HOSE (080FX90-32"-3000)	
10	I50-I656	1	HOSE (080FX90-14"-3000)	
11	I54-678	1	HOSE (080FX-86"-3000)	
12	I55-068	1	HOSE (080FX45-76"-3000)	
13	I50-I630	1	HYDRAULIC MANIFOLD - RELIEF AND SHUT-OFF	SEE FOOTNOTES 2, 3 & 4
14	I06-385	2	FLG LOCKNUT (M6-1.00)	
15	I07-025	2	SCREW (M6-1.00 X 50MM)	
16	I54-235	2	CONNECTOR (I08S-08090)	
17	I54-233	2	CONNECTOR (I08S-080)	
18	I54-381	1	PLUG (08S)	
19	I50-I981	1	WRENCH VALVE	
20	I50-I510	1	HARDLINE	
21	I57-039	1	O-RING (014 D90)	
22	I54-256	1	UNION (080-080FX90)	


NOT SHOWN:

FOOTNOTES:


1. USE WITH 9 GALLON PUMP, USE I50-I511 WITH 13 GALLON PUMP, SEAL REPAIR KIT P/N 500-I368 FOR BOTH MOTORS
2. SOLENOID VALVE CARTRIDGE ONLY P/N 500-I329
3. SOLENOID COIL ONLY (12VDC W/DIODE) P/N 500-I330
4. RELIEF VALVE CARTRIDGE P/N: 500-I331

NOTE:

MANIFOLD SERVICE PARTS

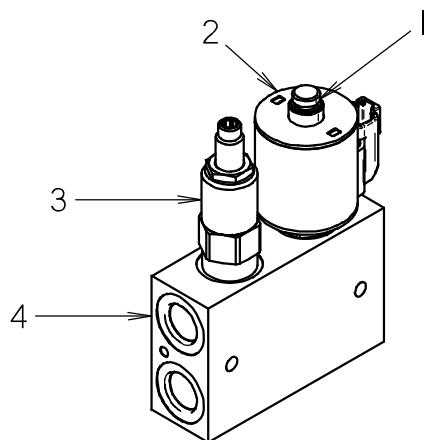


150-I630	HYDRAULIC MANIFOLD - RELIEF AND SHUT-OFF
1 500-I329	SOLENOID VALVE CARTRIDGE
2 500-I330	SOLENOID COIL, 12 VDC W/ZENER DIODE
3 500-I331	RELIEF VALVE CARTRIDGE
4 500-I336	MANIFOLD BODY

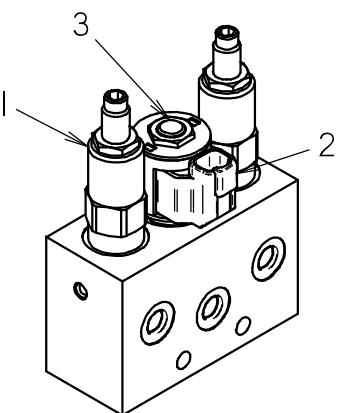

150-3072	HYDRAULIC MANIFOLD
1 500-I810	2 PRESSURE REDUCING VALVE
2 500-I811	1 SOLENOID COIL, 12 VDC W/ZENER DIODE
3 500-I311	1 SOLENOID VALVE, 2W-2P, NC

PILOT PRESSURE AND RETURN

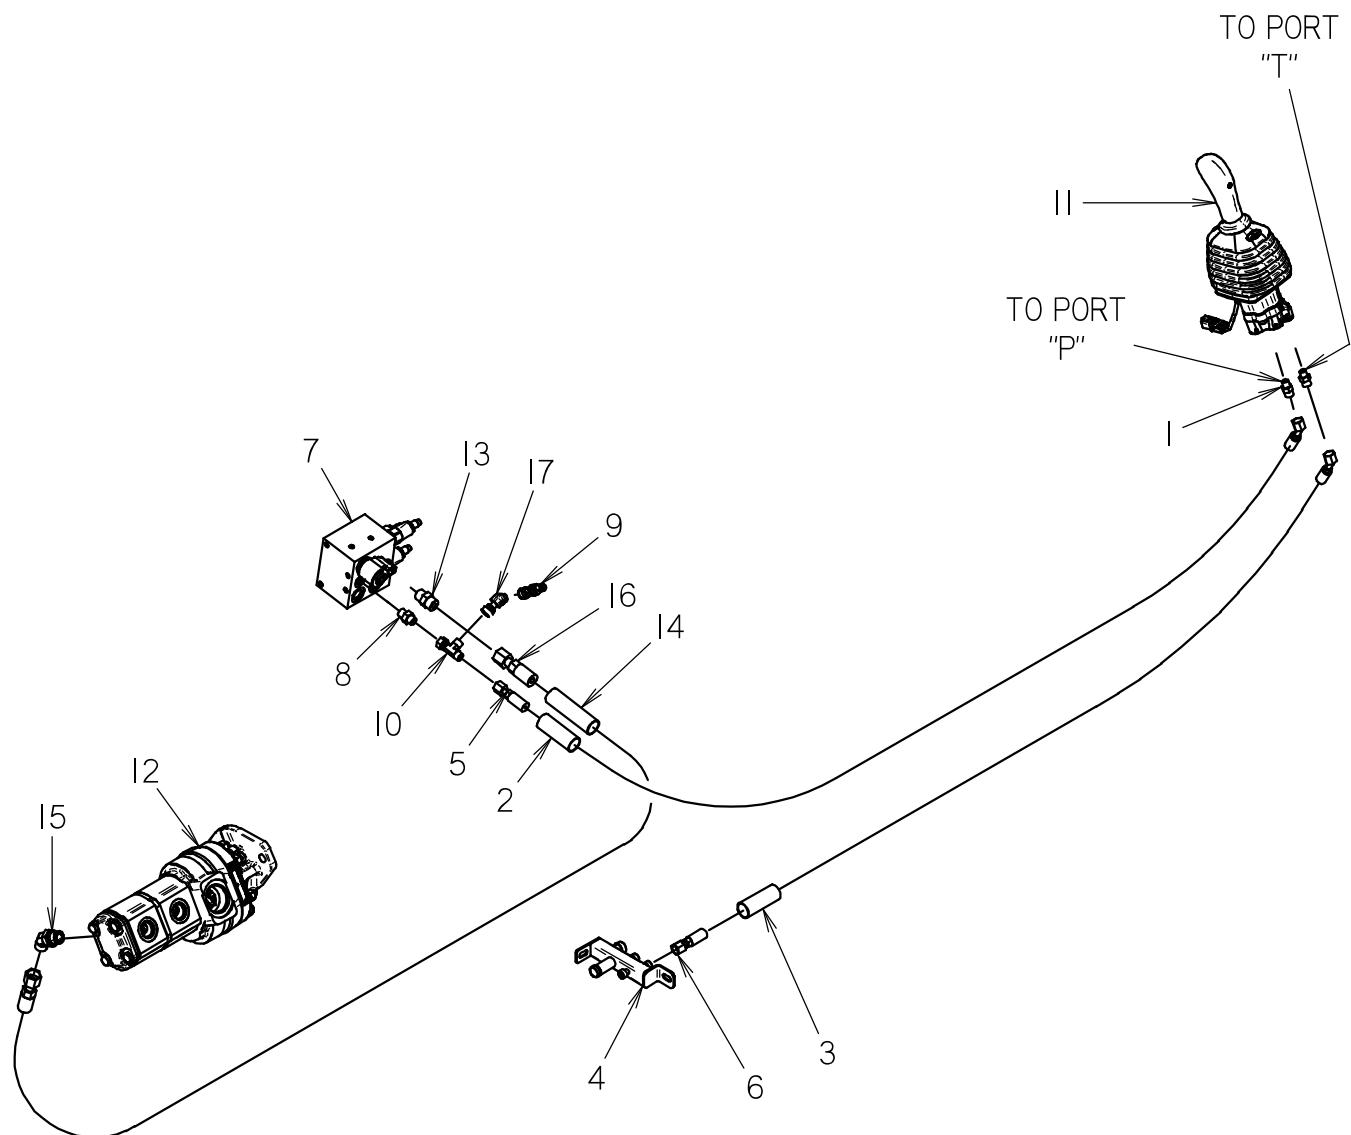

PILOT PRESSURE AND RETURN


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	154-278	2	CONNECTOR (04S-040)	
2	II7-209	1	ABRASION SLEEVE (1.00" X 90")	
3	II7-213	1	ABRASION SLEEVE (1.00" X 96")	
4	I50-I548	1	RETURN MANIFOLD	
5	I50-I636	1	HOSE (040FX45-90"-3000)	
6	I50-I637	1	HOSE (040FX45-98"-3000)	
7	I50-I289	1	HYDRAULIC MANIFOLD - PILOT PRESSURE	
8	I54-220	1	CONNECTOR (040-06S)	
9	I59-I56	1	QDC ADAPTER (02-040F)	
I0	I54-265	1	UNION RUN TEE (040FX-040-040)	
I1	I50-II79	1	JOYSTICK	
I2	I50-I436	1	TRIPLE GEAR HYDRAULIC PUMP	
I3	I54-233	1	CONNECTOR (08S-080)	
I4	II7-400	1	ABRASION SLEEVE (1.00" X 72")	
I5	I54-264	1	CONNECTOR (080-10S45)	
I6	I50-I644	1	HOSE (080FX-69"-3000)	
I7	I50-I959	1	CONNECTOR (040-040FX45)	

NOT SHOWN:

FOOTNOTES:

NOTE:

PILOT PRESSURE AND RETURN
BEGINS WITH S/N: CMWJT922JA0000402

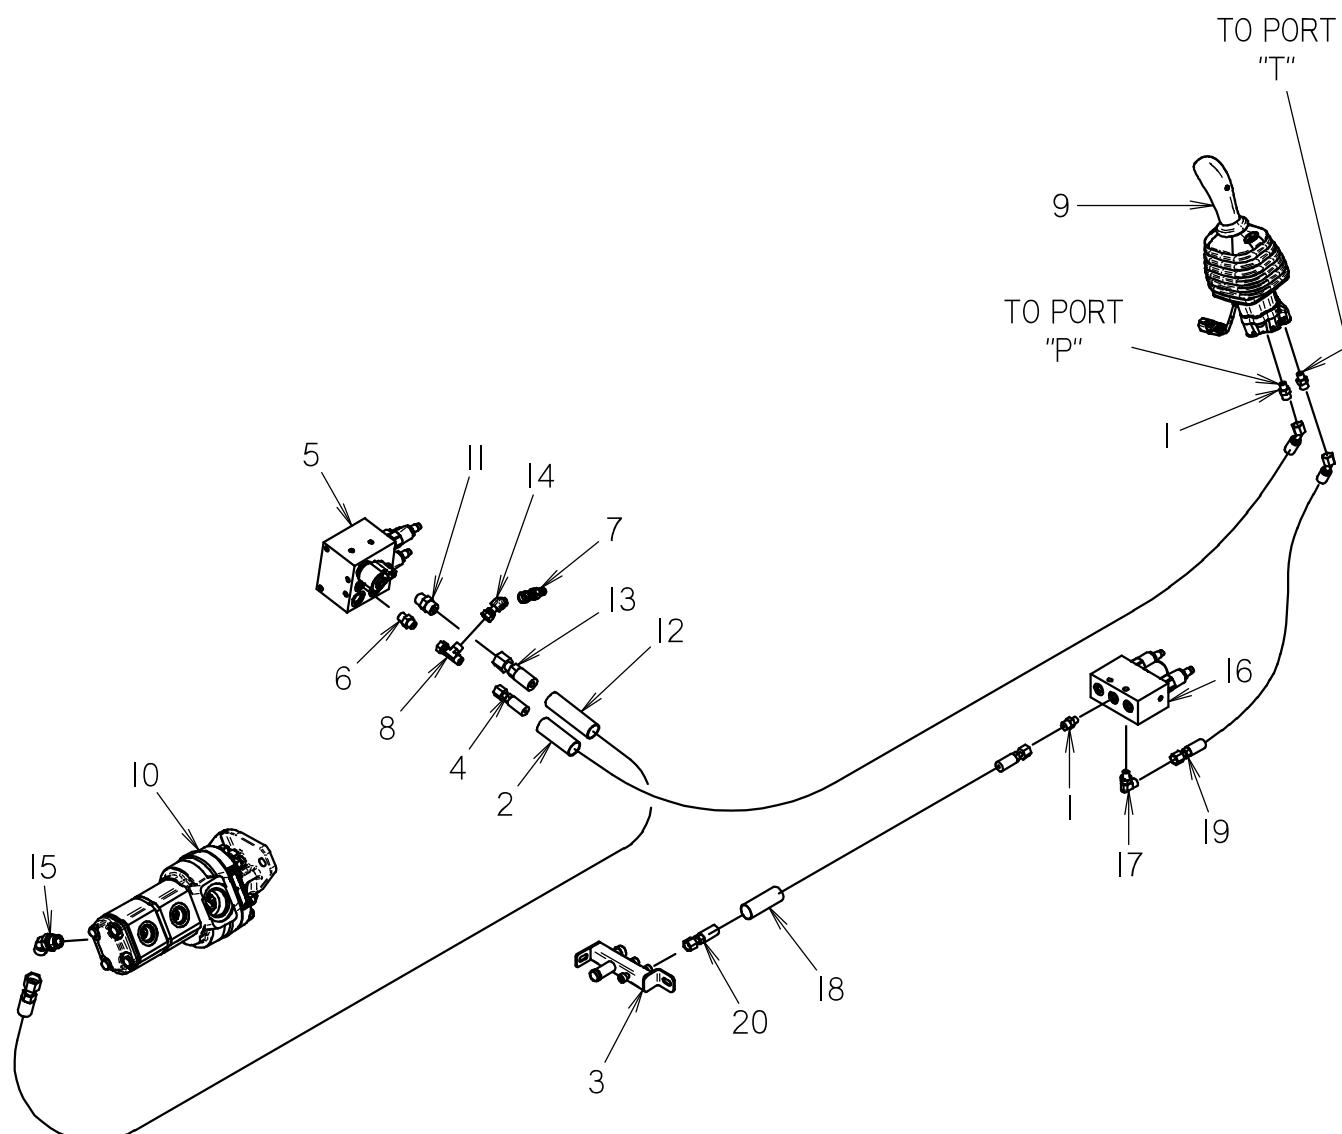

PILOT PRESSURE AND RETURN
BEGINS WITH S/N: CMWJT922JA0000402


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	154-278	3	CONNECTOR (04S-040)	
2	I17-209	1	ABRASION SLEEVE (1.00" X 90")	
3	I50-I548	1	RETURN MANIFOLD	
4	I50-I636	1	HOSE (040FX45-90"-3000)	
5	I50-I289	1	HYDRAULIC MANIFOLD - PILOT PRESSURE	
6	I54-220	1	CONNECTOR (040-06S)	
7	I59-I56	1	QDC ADAPTER (02-040F)	
8	I54-265	1	UNION RUN TEE (040FX-040-040)	
9	I50-I179	1	JOYSTICK	
I0	I50-I436	1	TRIPLE GEAR HYDRAULIC PUMP	
I1	I54-233	1	CONNECTOR (08S-080)	
I2	I17-400	1	ABRASION SLEEVE (1.00" X 72")	
I3	I50-I644	1	HOSE (080FX-69"-3000)	
I4	I50-I959	1	CONNECTOR (040-040FX45)	
I5	I54-264	1	CONNECTOR (080-10S45)	
I6	I50-3072	1	HYDRAULIC MANIFOLD	
I7	I54-252	1	CONNECTOR (04S-04090)	
I8	I17-702	1	ABRASION SLEEVE (1.00" X 68")	
I9	I54-963	1	HOSE (040FX45-24"-3000)	
I0	I54-670	1	HOSE (040FX-70"-3000)	

NOT SHOWN:

FOOTNOTES:

NOTE:

PILOT MANIFOLD SERVICE PARTS

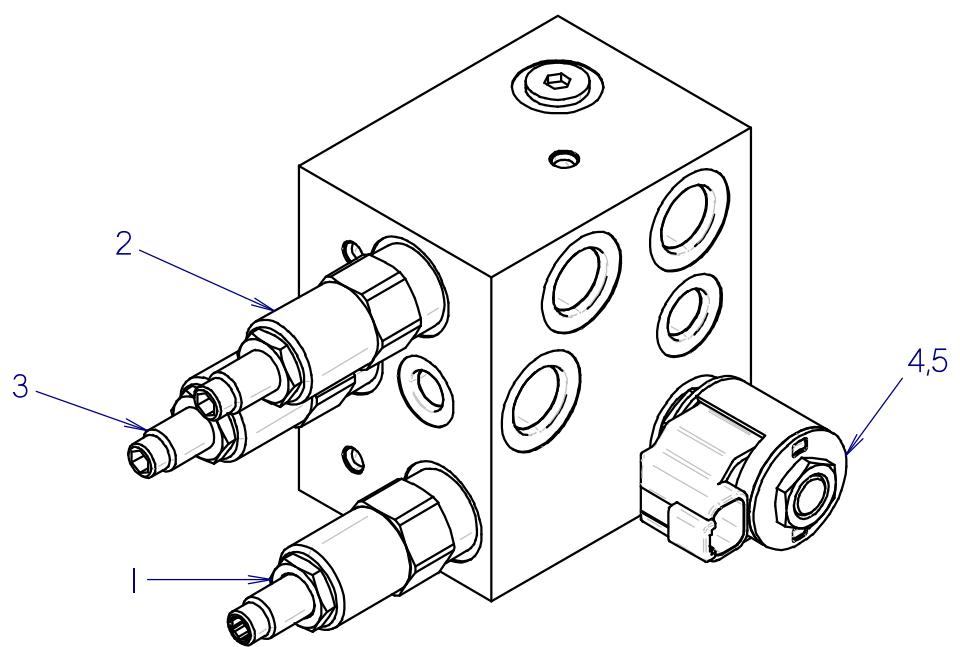

PILOT MANIFOLD SERVICE PARTS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	150-I289		HYDRAULIC MANIFOLD - PILOT PRESSURE	
1	500-II36	1	PRESSURE REDUCING RELIEF VALVE	
2	500-I306	1	SEQUENCE VALVE (40-400 PSI)	
3	500-I305	1	RELIEF VALVE CARTRIDGE	
4	500-I307	1	SOLENOID VALVE CARTRIDGE	
5	500-I3II	1	E-COIL W/ ZENER DIODE	

NOT SHOWN:


FOOTNOTES:

NOTE:

01

ID0181477

JOYSTICK SERVICE PARTS

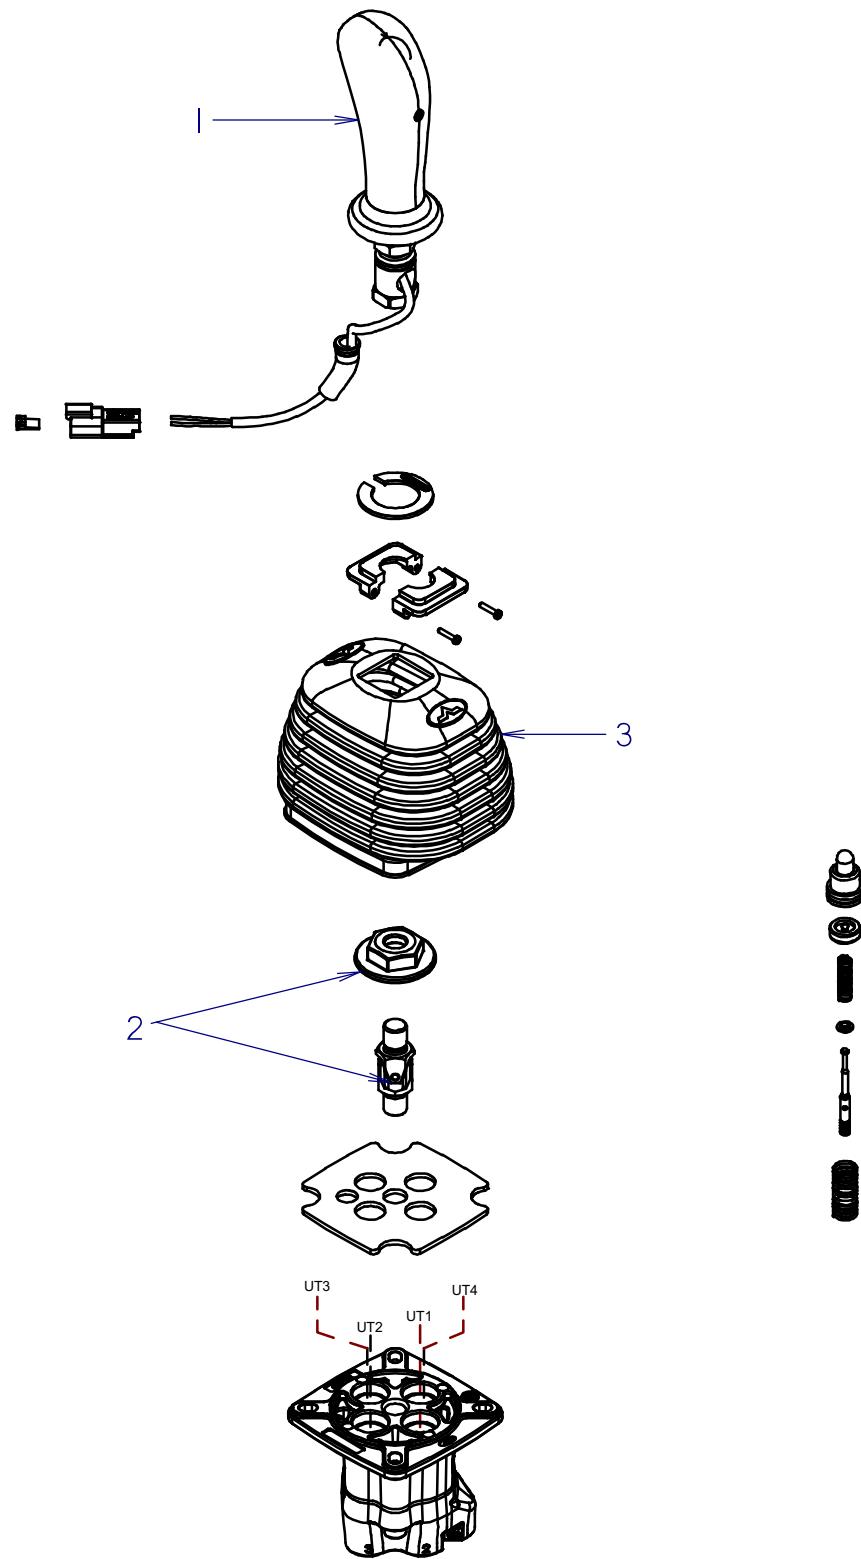

JOYSTICK SERVICE PARTS


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	150-II79		2 AXIS HYDRAULIC PILOT JOYSTICK & 1 SWITCH	
1	500-I375	1	JOYSTICK HANDLE W/ SWITCH	
2	500-I376	1	UNIVERSAL JOYSTICK JOINT KIT	
3	500-II02	1	JOYSTICK, RUBBER BOOT	

NOT SHOWN:

FOOTNOTES:

NOTE:

THRUST/ROTATION PILOT HYDRAULICS

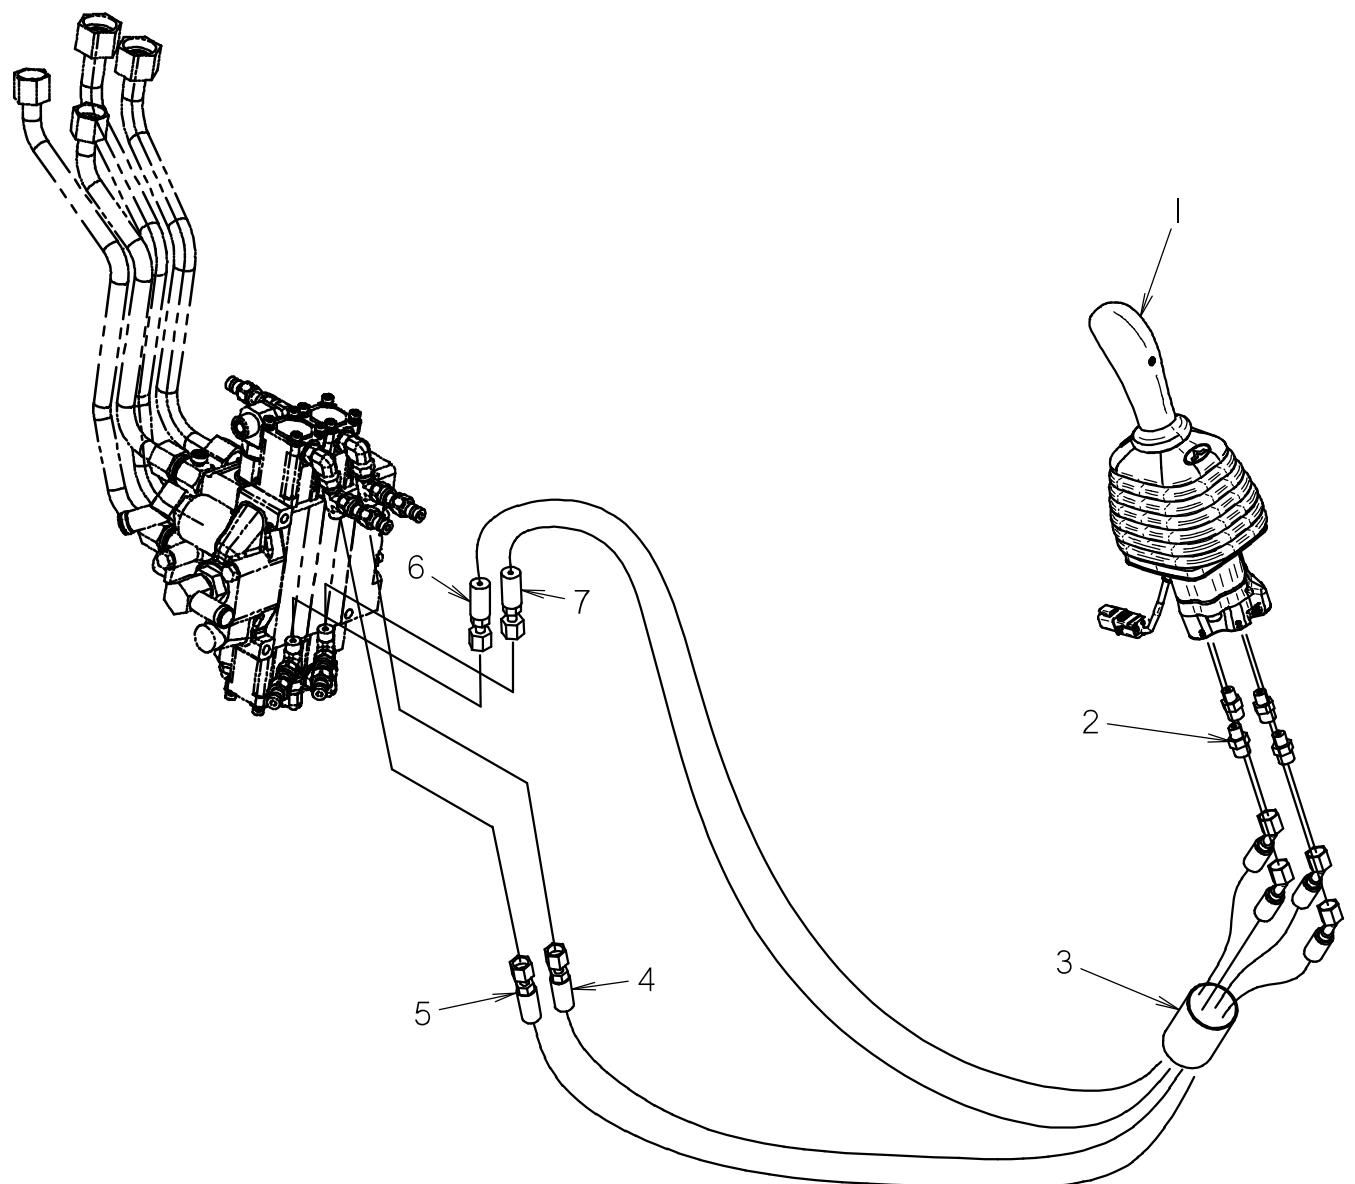

THRUST/ROTATION PILOT HYDRAULICS


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	150-II79	1	JOYSTICK	
2	154-278	4	CONNECTOR (04S-040)	
3	II5-935	1	ABRASION SLEEVE (1.75" X 70")	
4	154-965	1	HOSE (040FX45-84"-3000)	TO PORT #1 ON 150-II79
5	154-965	1	HOSE (040FX45-84"-3000)	TO PORT #2 ON 150-II79
6	150-1636	1	HOSE (040FX45-90"-3000)	TO PORT #4 ON 150-II79
7	150-1636	1	HOSE (040FX45-90"-3000)	TO PORT #3 ON 150-II79

NOT SHOWN:

FOOTNOTES:

NOTE:

THRUST/ROTATION PILOT HYDRAULICS
BEGINS WITH S/N: CMWJT922JA0000402

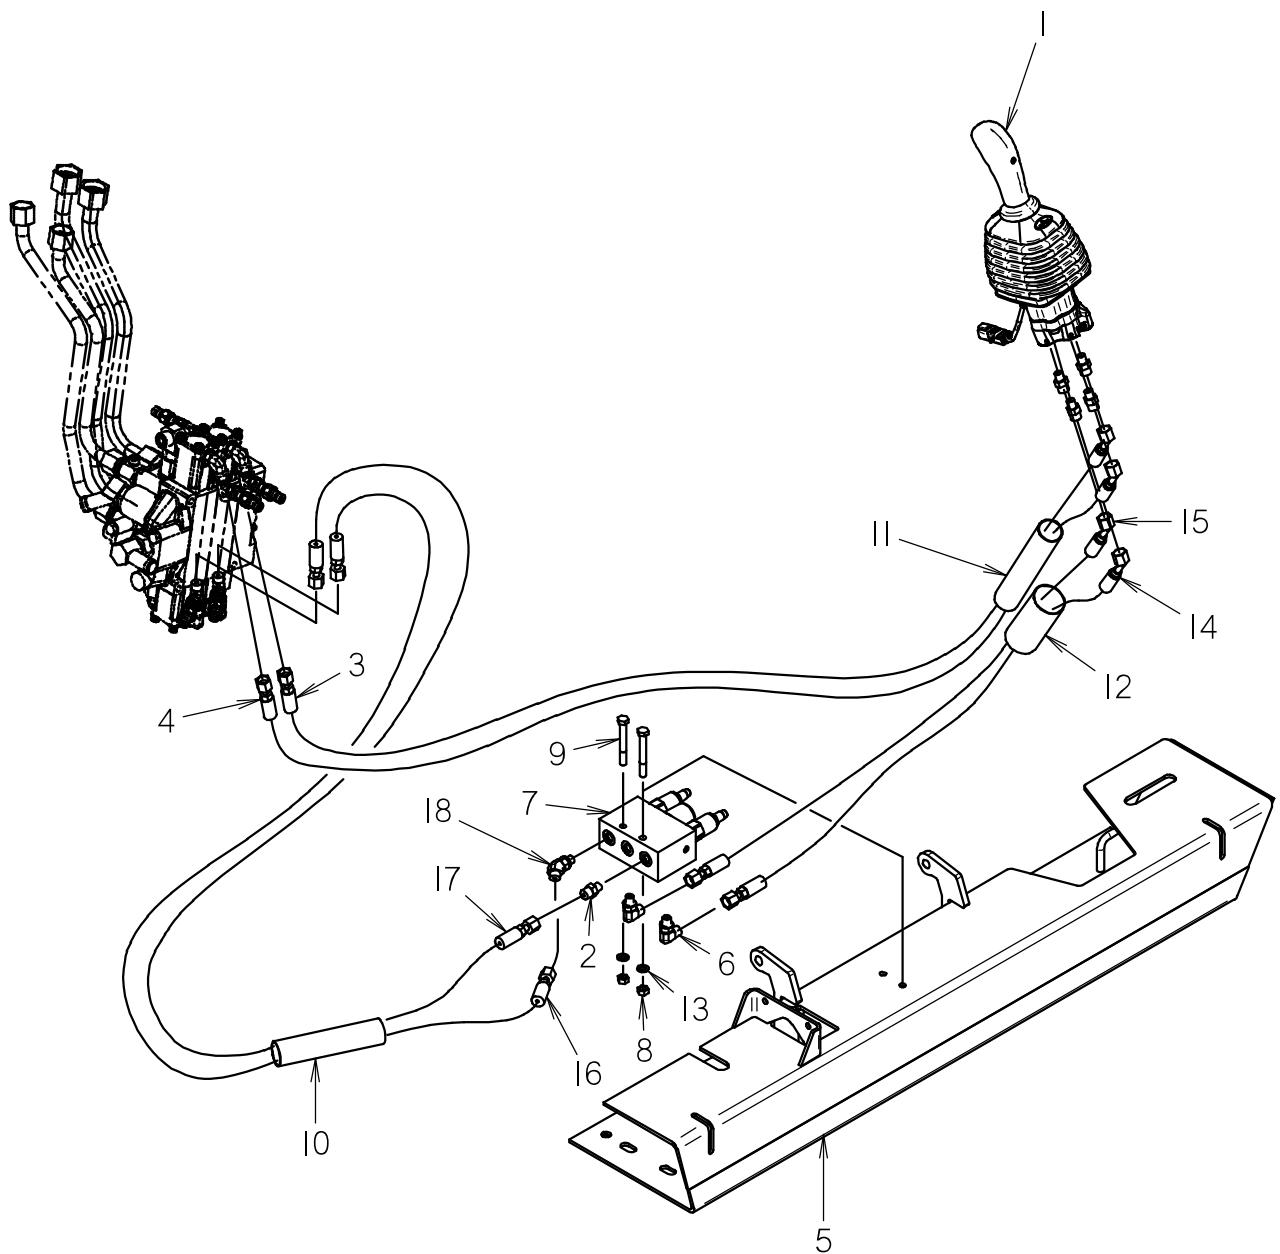

THRUST/ROTATION PILOT HYDRAULICS
BEGINS WITH S/N: CMWJT922JA0000402


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	150-II79	1	JOYSTICK	
2	154-278	5	CONNECTOR I04S-040)	
3	154-965	1	HOSE I040FX45-84"-3000)	TO PORT #1 ON 150-II79
4	154-965	1	HOSE I040FX45-84"-3000)	TO PORT #2 ON 150-II79
5	300-3325	1	OPERATOR STATION MOUNT	
6	154-252	2	CONNECTOR I04S-04090)	
7	150-3072	1	HYDRAULIC MANIFOLD	
8	106-561	2	LOCKNUT (M8-I.25,PRV TRQ,10.9)	
9	106-330	2	SCREW (M8-I.25 X 70MM)	
I0	I17-214	1	ABRASION SLEEVE (I.25" X 40")	
I1	I18-270	1	ABRASION SLEEVE (I.25" X 70")	
I2	I17-564	1	ABRASION SLEEVE(I.75" X 15")	
I3	106-389	2	WASHER (M8)	
I4	154-963	1	HOSE I040FX45-24"-3000)	TO PORT #4 ON 150-II79 AND 150-3072
I5	154-963	1	HOSE I040FX45-24"-3000)	TO PORT #3 ON 150-II79 AND 150-3072
I6	154-681	1	HOSE I040FX-62"-3000)	TO CLOCKWISE ROTATION PORT
I7	154-681	1	HOSE I040FX-62"-3000)	TO THRUST PORT
I8	154-263	1	CONNECTOR I04S-04045)	

NOT SHOWN:

FOOTNOTES:

NOTE:

THRUST/ROTATION VALVE HYDRAULICS

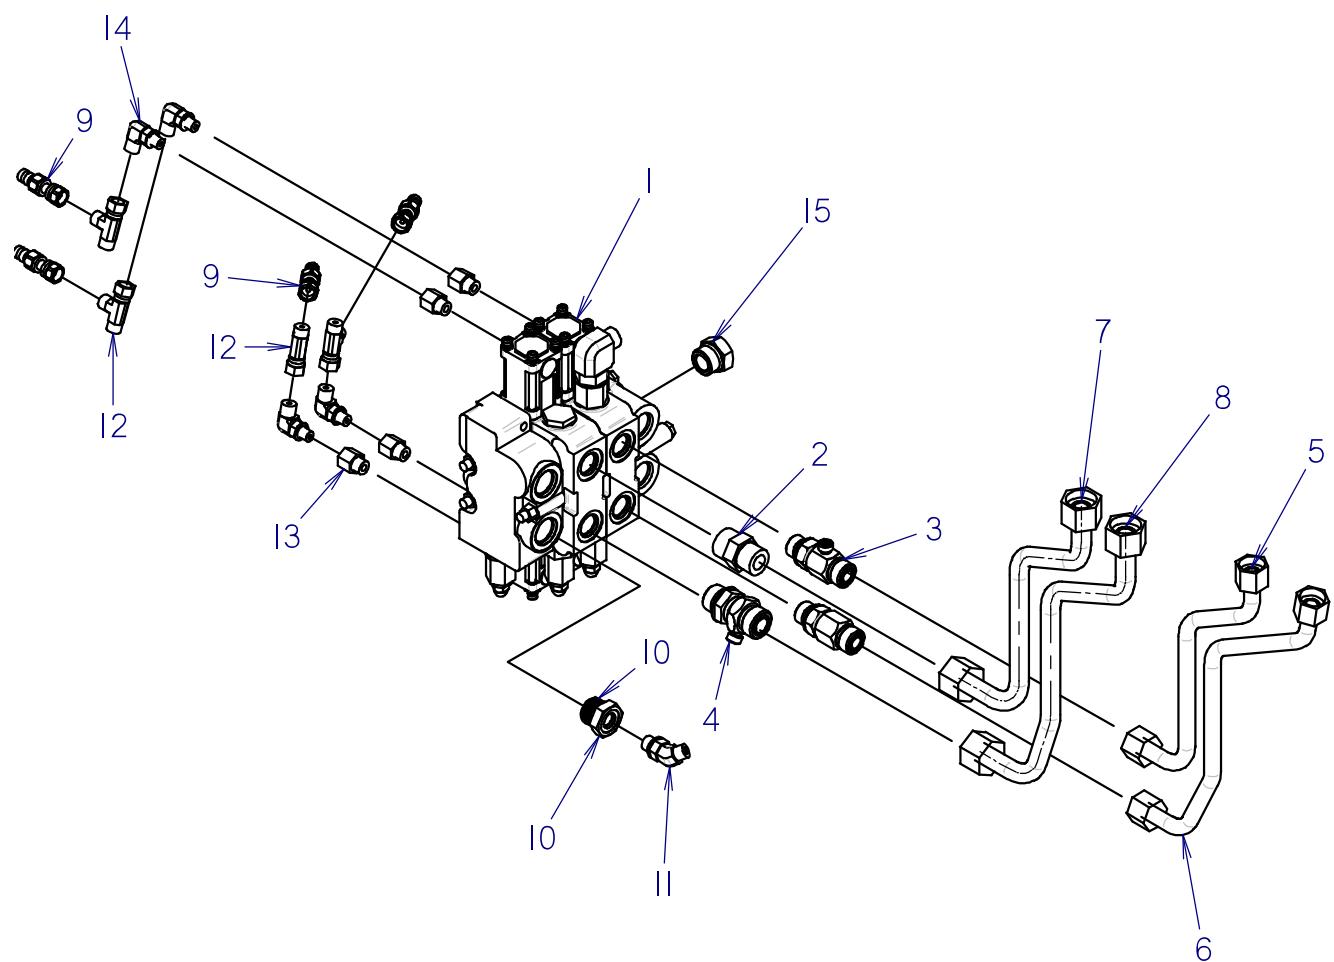

THRUST/ROTATION VALVE HYDRAULICS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	150-I174	1	VALVE	SEE FOOTNOTES 1 & 2
2	154-269	1	CONNECTOR (I2S-I20)	
3	514-041	2	RUN TEE (I0S-I00-040)	
4	149-815	1	TEE (I2S-I20-040, SPECIAL)	
5	150-I616	1	HYD LINE (-I0)	
6	150-I617	1	HYD LINE (-I0)	
7	150-I620	1	HYD LINE (-I2)	
8	150-I621	1	HYD LINE (-I2)	
9	159-156	4	QDC ADAPTER (02-040F)	
I0	155-I29	1	REDUCER (I2S-06SF)	
I1	154-250	1	CONNECTOR (040-06S45)	
I2	154-265	4	UNION RUN TEE (040FX-040-040)	
I3	155-254	4	REDUCER (06S-04SF)	
I4	154-252	4	CONNECTOR (04S-04090)	
I5	500-302	1	PLUG (-I2 SI)	SEE FOOTNOTE 3


NOT SHOWN:

FOOTNOTES:

1. INLET COVER RELIEF VALVE CARTRIDGE KIT P/N: 500-I392
2. WORK PORT RELIEF VALVE CARTRIDGE KIT P/N: 500-I393
3. BEFORE S/N: CMWJT922A70000154 ,I55-I74 S/O COUPLER (I2S-I2H90) IS USED

NOTE:

HOSE CARRIER HYDRAULICS

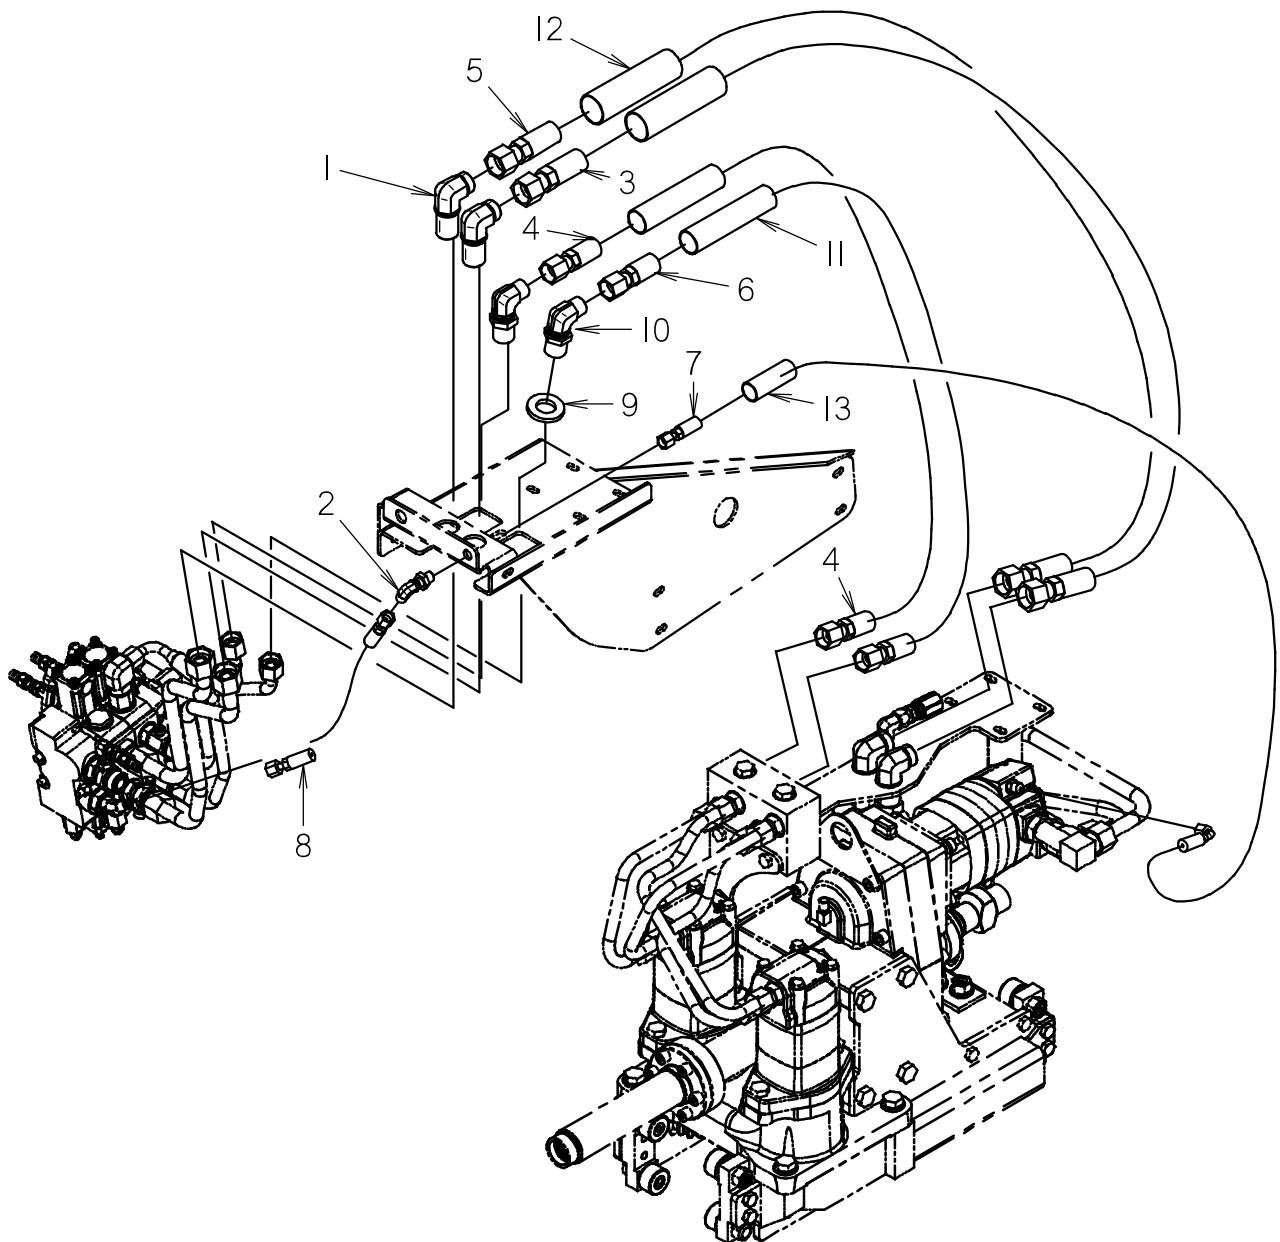

HOSE CARRIER HYDRAULICS



REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	156-482	2	BK CONNECTOR (I20-I2090BK)	
2	154-355	1	BK CONNECTOR (I040-04090BK)	
3	I50-I532	1	HOSE (I20FX-95"-3000)	
4	I50-I533	1	HOSE (I00FX-98"-3000)	
5	I50-I532	1	HOSE (I20FX-95"-3000)	
6	I50-I533	1	HOSE (I00FX-98"-3000)	
7	I55-488	1	HOSE (I040FX90-I06"-3000)	
8	515-249	1	HOSE (I040FX-26"-3000)	
9	I06-144	1	WASHER (I")	
I0	I54-29I	2	BK CONNECTOR (I00-I0090BK)	
I1	I17-210	2	ABRASION SLEEVE (I.25" X I00")	
I2	I16-787	2	ABRASION SLEEVE (I.59" X 95")	
I3	I05-I103	1	ABRASION SLEEVE (I.00" X I08")	

NOT SHOWN:

FOOTNOTES:

NOTE:

CARRIAGE HYDRAULICS

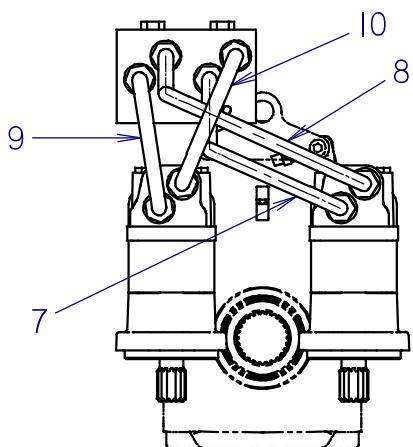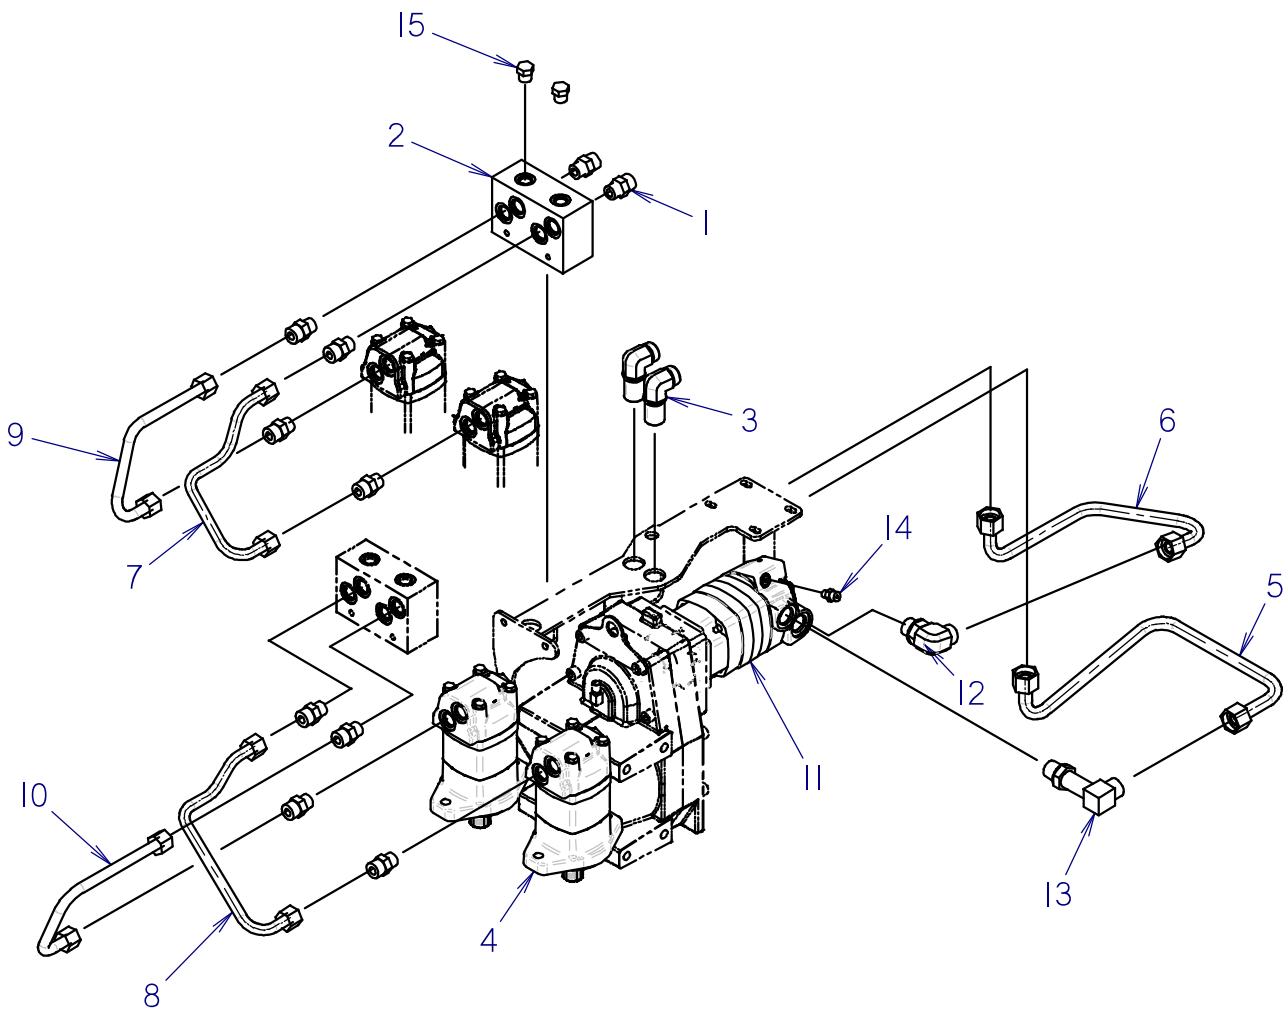

CARRIAGE HYDRAULICS

REF	PART NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	154-301	10	CONNECTOR (I0S-I00)		
2	300-3280	1	MANIFOLD BLOCK		
3	156-482	2	BK CONNECTOR (I20-I2090BK)		
4	150-1395	2	GEROLER MOTOR		SEE FOOTNOTE I
5	150-1474	1	HYD LINE (I-12)		
6	150-1473	1	HYD LINE (I-12)		
7	150-1470	1	HYD LINE (I-10)		
8	150-1467	1	HYD LINE (I-10)		
9	150-1469	1	HYD LINE (I-10)		
I0	150-1468	1	HYD LINE (I-10)		
I1	158-881	1	MOTOR		SEE FOOTNOTES 2 & 3
I2	154-270	1	CONNECTOR (I2S-I2090)		
I3	154-338	1	CONNECTOR (I2S-I2090, XL)		
I4	154-278	1	CONNECTOR (I04S-040)		
I5	154-381	2	PLUG (08S)		


NOT SHOWN:

FOOTNOTES:

- I. SEAL REPAIR KIT P/N: 500-658
2. SEAL REPAIR KIT, REAR P/N: 500-711
3. SHAFT SEAL REPAIR KIT P/N: 500-758

NOTE:

THRUST/ROTATION GAUGES

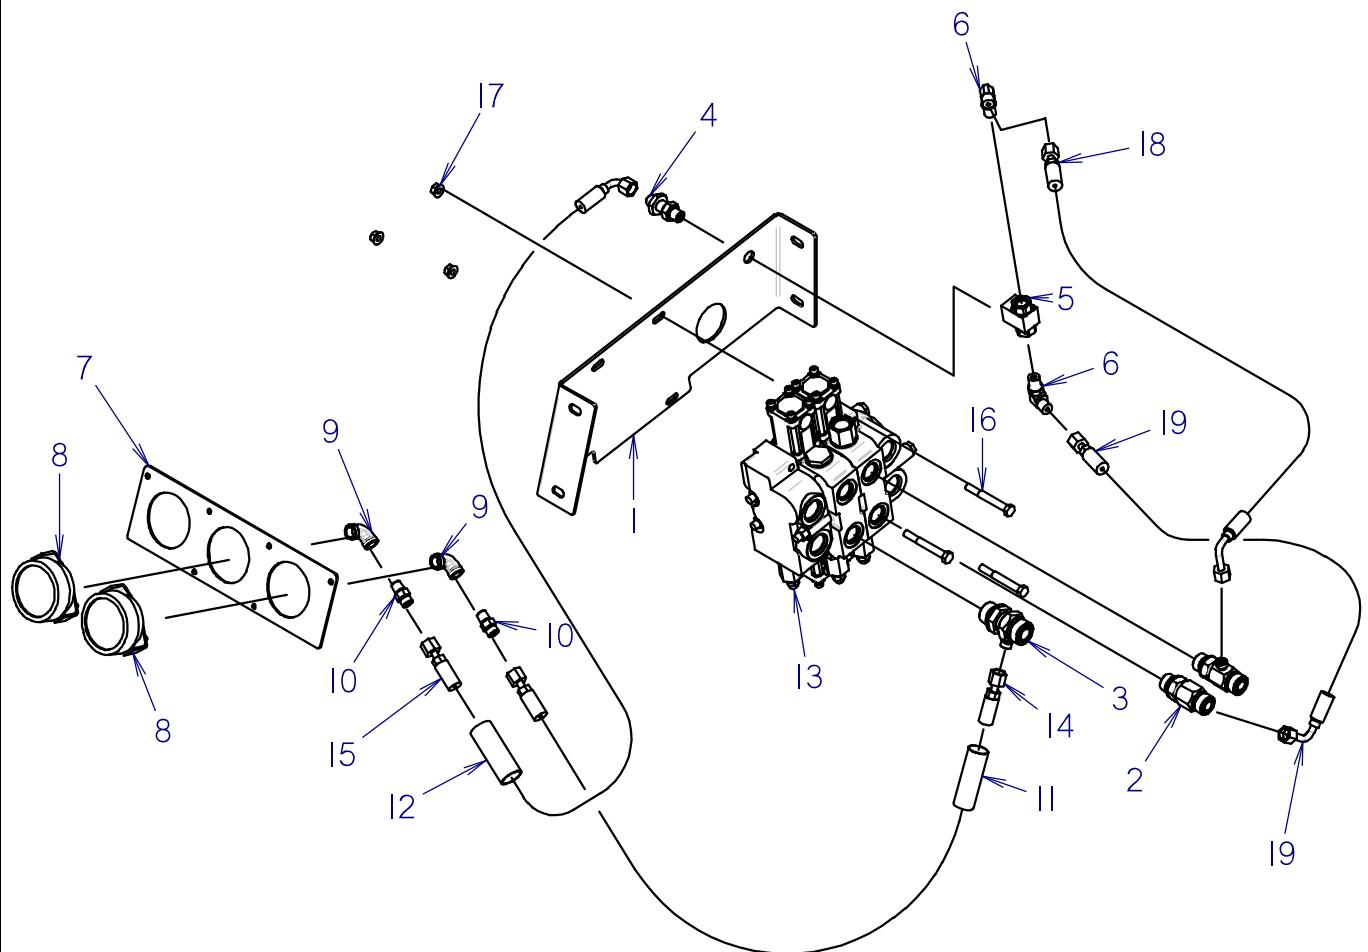

THRUST/ROTATION GAUGES


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	300-2712	1	VALVE MOUNT	
2	514-041	2	RUN TEE (I0S-I00-040)	
3	I49-815	1	TEE (I2S-I20-040, SPECIAL)	
4	I53-238	1	BK CONNECTOR (I040-06S)	
5	I58-600	1	LSVI LOAD SHUTTLE	
6	I54-226	2	CONNECTOR (I040-06S90)	
7	300-3252	1	GAUGE MOUNT PANEL	
8	258-045	2	PRESSURE GAUGE (4000 PSI)	
9	I49-896	2	STREET ELBOW(I04NF-04NF90)	
I0	I54-339	2	CONNECTOR (I04N-040)	
I1	I05-II04	1	ABRASION SLEEVE (1.00" X 17")	
I2	II7-718	1	ABRASION SLEEVE (1" X 36")	
I3	I50-II74	1	VALVE	
I4	I54-682	1	HOSE (I040FX-I7"-3000)	
I5	I54-728	1	HOSE (I040FX90S-36"-3000)	
I6	I06-330	3	SCREW (M8-1.25 X 70MM)	
I7	I06-386	3	FLG LOCKNUT (M8-1.25)	
I8	I59-889	1	HOSE (I040FX90L-8"-3000)	
I9	I59-889	1	HOSE (I040FX90L-8"-3000)	

NOT SHOWN:

FOOTNOTES:

NOTE:

WRENCH VALVE SERVICE PARTS

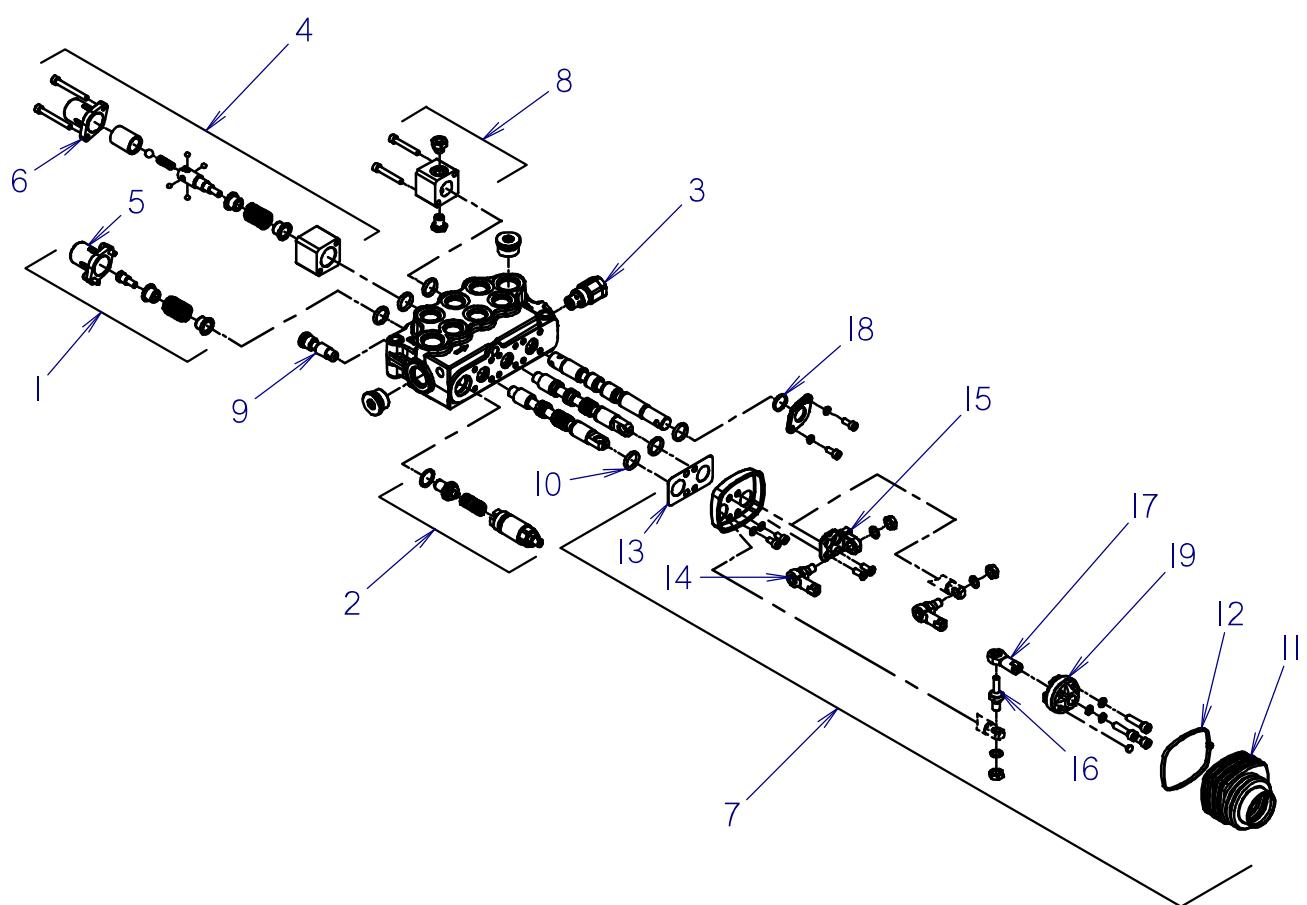

WRENCH VALVE SERVICE PARTS


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	150-II82	3	SPOOL DIRECTIONAL VALVE	
I	500-I369	1	SPOOL CONTROL KIT	INCLUDES REF NO. 5
2	500-I370	1	RELIEF VALVE CARTRIDGE	
3	500-I371	1	VRC BACK-PRESSURE CARTRIDGE	
4	500-I372	1	SPOOL CONTROL KIT	INCLUDES REF NO. 6
5	500-I373	1	SPOOL BONNET	
6	500-I374	1	SPOOL BONNET	
7	499-006	1	JOYSTICK LINKAGE ASSEMBLY	INCLUDES REF NO. II THRU I7,I9
8	499-459	1	ROTARY DETENT KIT	
9	149-664	1	LOAD CHECK	
10	157-218	6	O-RING	
II	499-I35	1	RUBBER BELLOW	
I2	499-I37	1	BELLOW CLAMP	
I3	157-744	1	SEAL, JOYSTICK	
I4	499-I39	2	ARTICULATED JOINT	
I5	499-I66	1	FULCRUM	
I6	499-I33	1	ROD END PULL	
I7	499-I38	1	ROD END	
I8	153-067	1	O-RING	
I9	499-I34	1	ARTICULATION HOLDER	

NOT SHOWN:

FOOTNOTES:

NOTE:

WRENCH VALVE HYDRAULICS

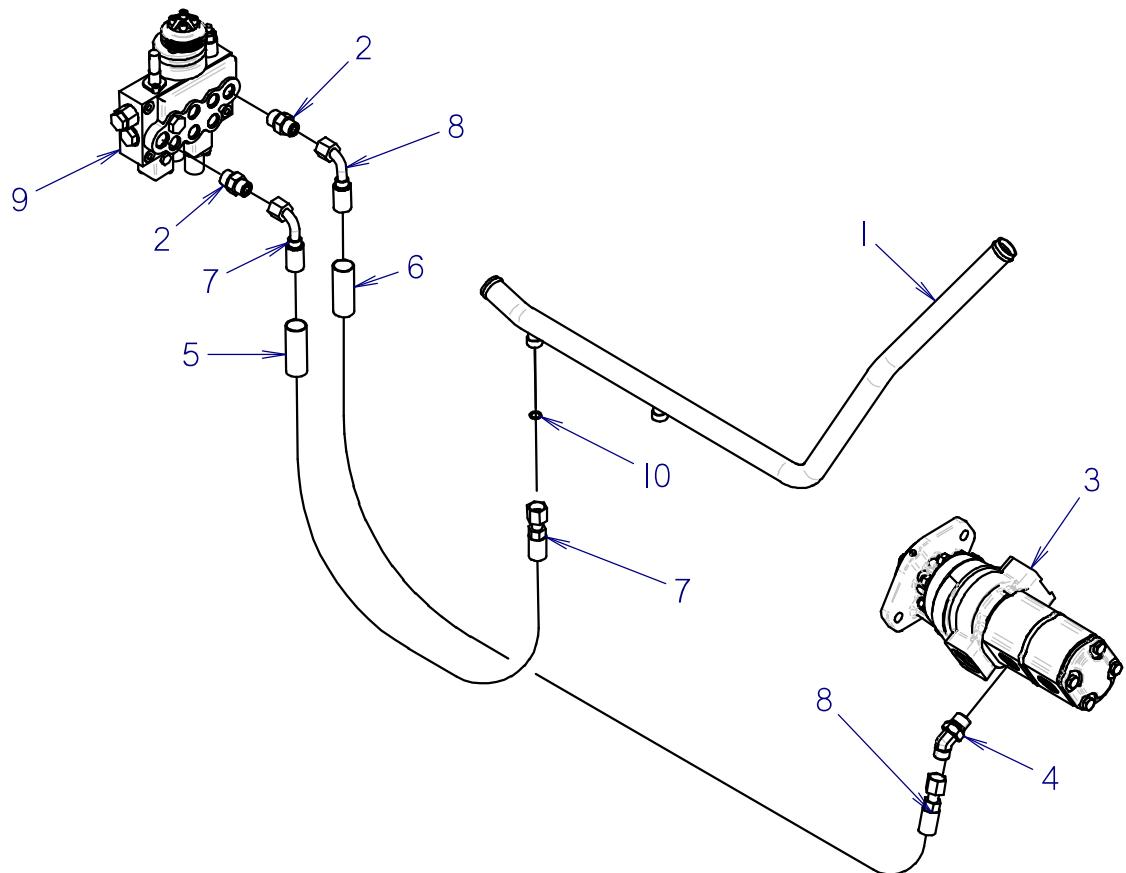

WRENCH VALVE HYDRAULICS

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	150-1510	1	HARDLINE	
2	154-279	2	CONNECTOR I080-I0S1	
3	150-1436	1	TRIPLE GEAR HYDRAULIC PUMP	
4	154-264	1	CONNECTOR I080-I0S45	
5	I18-062	1	ABRASION SLEEVE (1.00" X 62")	
6	I17-213	1	ABRASION SLEEVE (1.00" X 96")	
7	154-884	1	HOSE I080FX90-60"-3000)	
8	515-745	1	HOSE I080FX90M-94"-3000)	
9	150-I182	1	WRENCH VALVE	
10	157-039	1	O-RING (014 D90)	

NOT SHOWN:


FOOTNOTES:

NOTE:

01

ID0178745

STATIONARY WRENCH HYDRAULICS

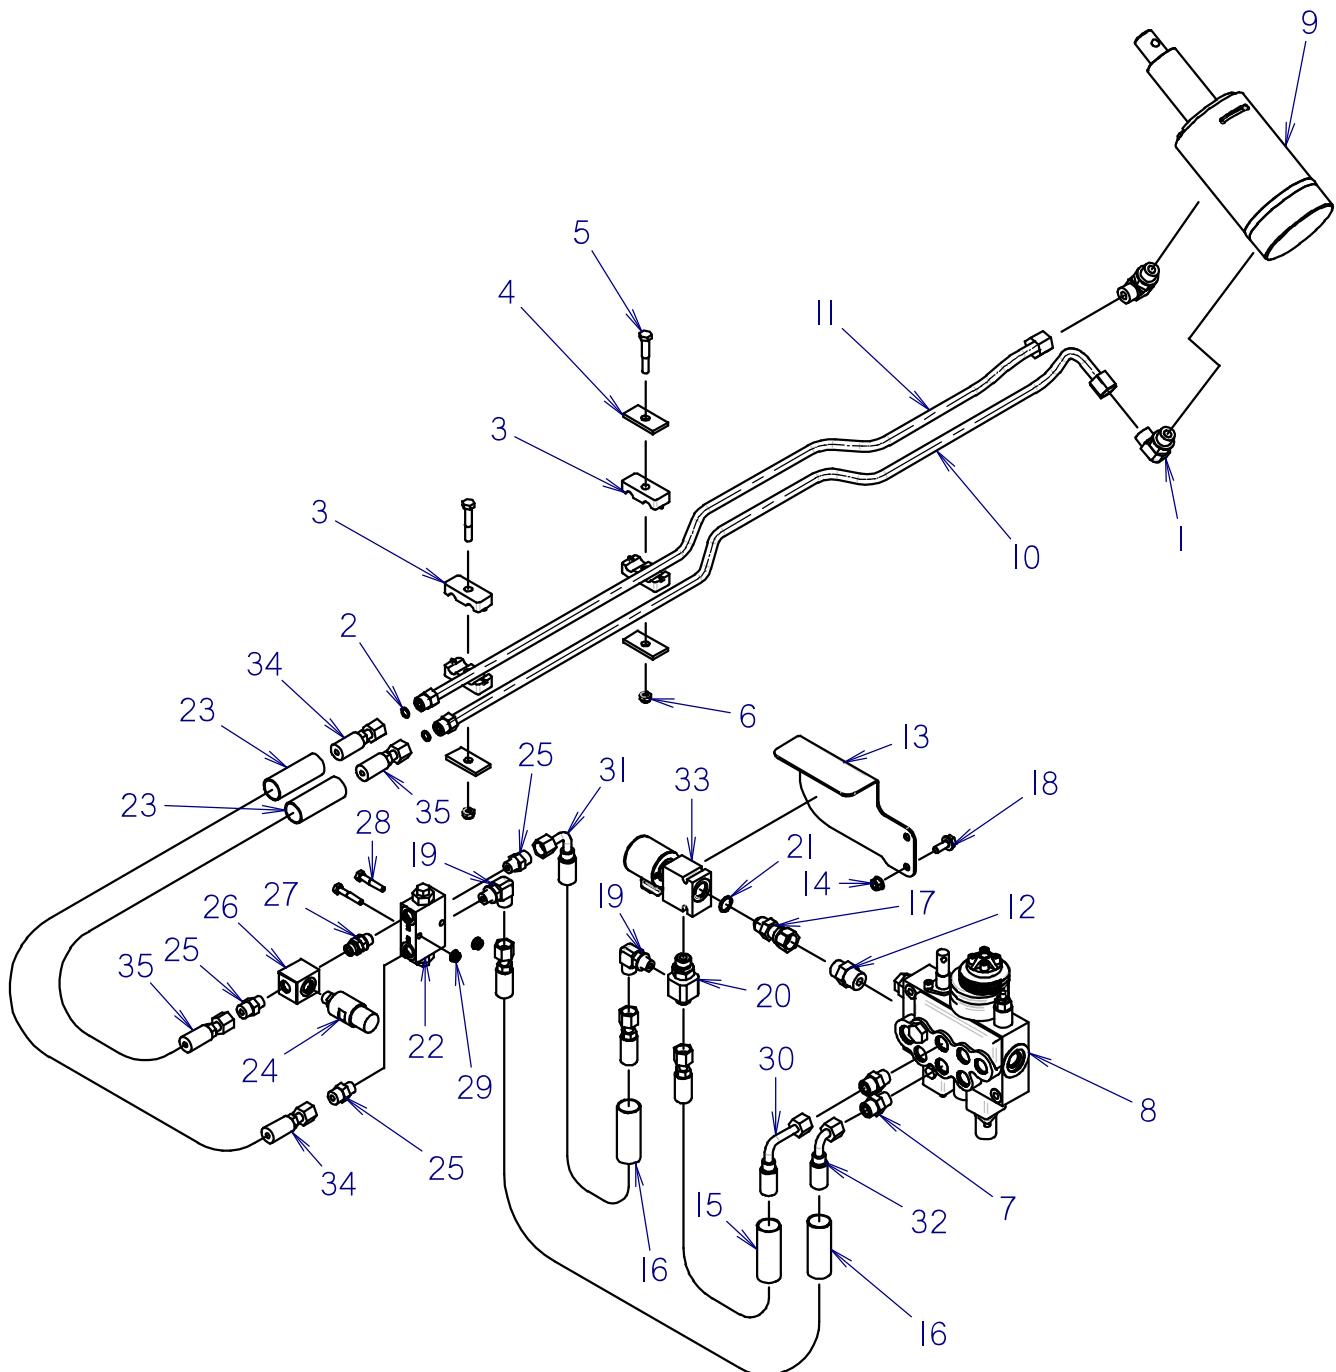

STATIONARY WRENCH HYDRAULICS


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	154-235	2	CONNECTOR I08S-08090)	
2	157-038	2	O-RING I012 D90)	
3	I10-270	4	BOLT-ON CLAMP I9/I6", HALF)	
4	305-256	3	BACKUP SPACER	
5	106-329	2	SCREW (M8-I.25 X 50MM)	
6	107-096	2	LOCKNUT (M8-I.25, NLK)	
7	154-222	2	CONNECTOR I060-08S)	
8	I50-198I	1	WRENCH VALVE	
9	I51-213	1	CYL (3.5" X I.75" X 2.0")	
I0	157-494	1	HYD LINE I-08)	
I1	157-495	1	HYD LINE I-08)	
I2	154-279	1	CONNECTOR I080-I0S)	
I3	300-5983	1	COVER	
I4	106-386	1	FLG LOCKNUT (M8-I.25)	
I5	I17-6II	1	ABRASION SLEEVE (I.00" X 22")	
I6	I17-989	2	ABRASION SLEEVE (I.00" X 24")	
I7	I56-732	1	CONNECTOR I08J-080)	
I8	I06-I62	1	FLG SCREW (M8-I.25 X 20MM, CD8)	
I9	154-342	2	CONNECTOR I06S-06090)	
20	I50-I629	1	RUN TEE (08S-060-06SF)	
21	I55-706	1	O-RING I098 D90)	
22	I49-I36	1	HYD LOCKOUT VALVE	
23	I17-387	2	ABRASION SLEEVE (I.00" X 42")	
24	I15-I3I9	1	PRESSURE SWITCH	
25	I54-22I	3	CONNECTOR I06S-060)	
26	I50-I206	1	TEE I06SF-06SF-06SF)	
27	I55-I53	1	CONNECTOR I06S-06S)	
28	I05-8I8	2	BOLT I/4-NC X I-I/2"	
29	I05-832	2	FLG LOCKNUT (I/4-NC)	
30	5I5-657	1	HOSE I060FX90L-23"-3000)	
3I	I57-95I	1	HOSE I060FX90M-25"-3000)	
32	I53-3I6	1	HOSE I060FX90S-25"-3000)	
33	I50-I982	1	SOLENOID VALVE 2W-2P-NC	
34	I59-845	1	HOSE I060FX-44"-3000)	
35	I59-845	1	HOSE I060FX-44"-3000)	

NOT SHOWN:

FOOTNOTES:

NOTE:

ROTATING WRENCH HYDRAULICS

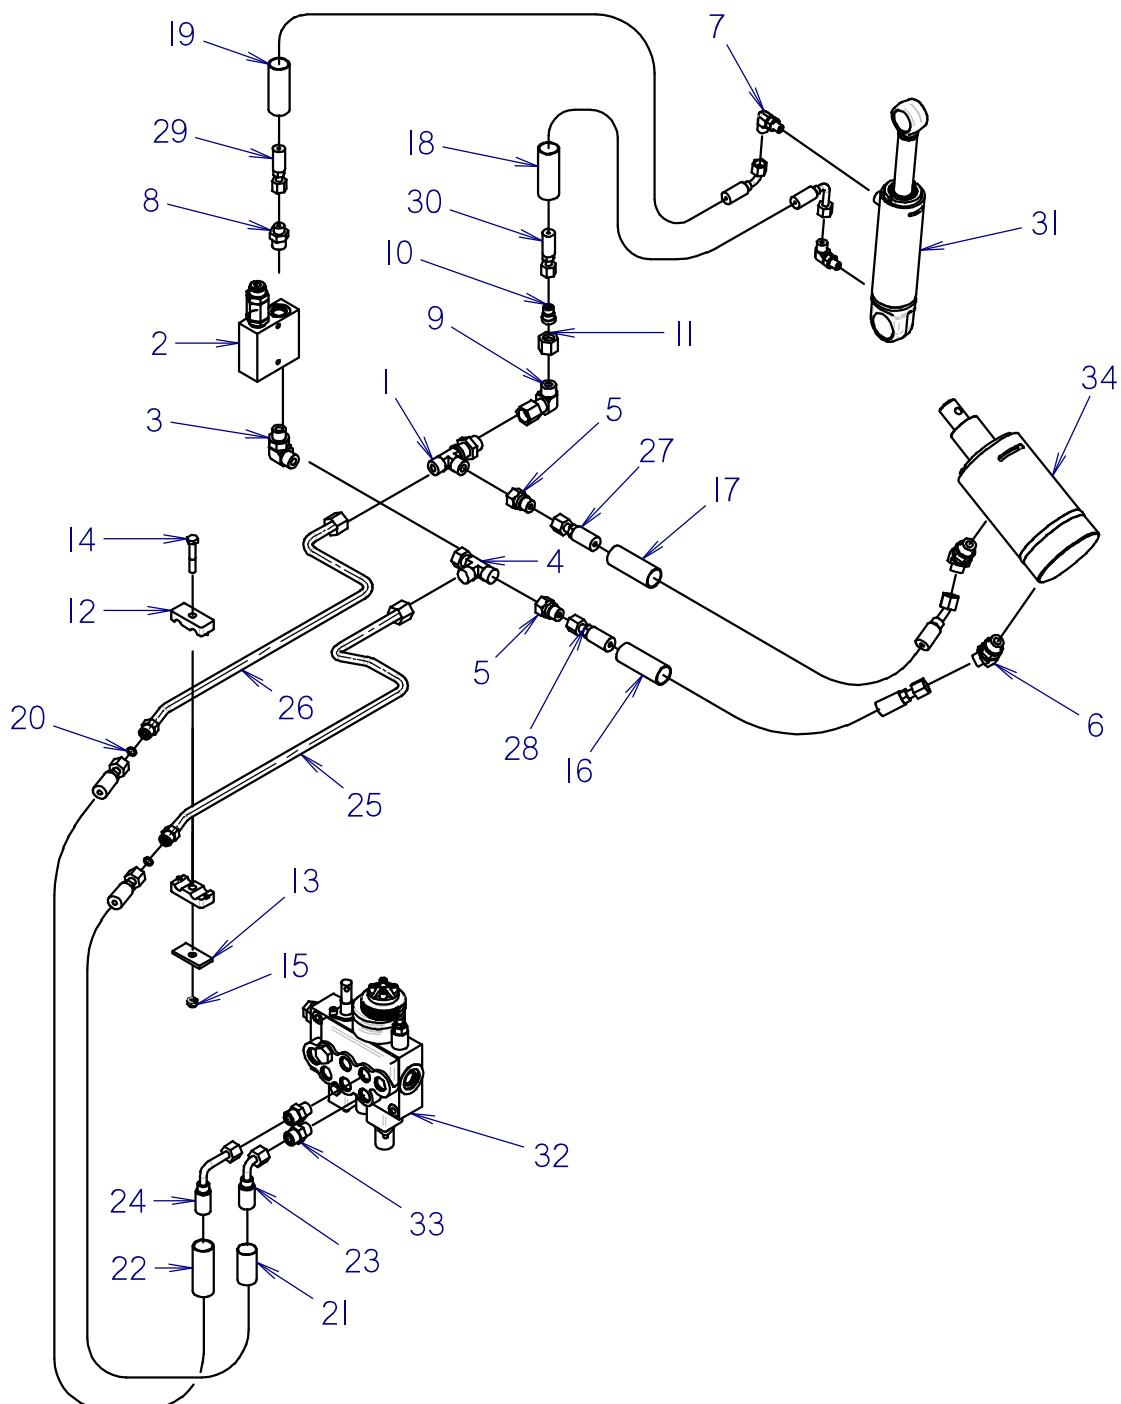

ROTATING WRENCH HYDRAULICS


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	154-295	1	BK RUN TEE (080-080-080BK)	
2	157-249	1	SEQUENCE VALVE	
3	154-235	1	CONNECTOR (08S-08090)	
4	154-266	1	UNION RUN TEE (080FX-080-080)	
5	154-262	2	REDUCER (060-080F)	
6	154-225	2	CONNECTOR (060-08S45)	
7	154-252	2	CONNECTOR (04S-04090)	
8	154-261	1	CONNECTOR (040-08S)	
9	154-256	1	UNION (080-080FX90)	
10	154-248	1	REDUCER STEM (040)	
11	154-272	1	REDUCER NUT (080F)	
12	I10-270	2	BOLT-ON CLAMP (9/16", HALF)	
13	305-256	1	BACKUP SPACER	
14	I06-329	1	SCREW (M8-1.25 X 50MM)	
15	I07-096	1	LOCKNUT (M8-1.25, NLK)	
16	I17-684	1	ABRASION SLEEVE (1.00" X 26")	
17	I17-409	1	ABRASION SLEEVE (1.00" X 28")	
18	I17-278	1	ABRASION SLEEVE (1.00" X 14")	
19	I17-671	1	ABRASION SLEEVE (1" X 12")	
20	I57-038	2	O-RING (012 D90)	
21	I17-612	1	ABRASION SLEEVE (1.00" X 46")	
22	I17-218	1	ABRASION SLEEVE (1" X 52")	
23	154-881	1	HOSE (060FX90-46"-3000)	
24	515-748	1	HOSE (060FX90L-50"-3000)	
25	150-I6I8	1	HYD LINE I-08I	
26	150-I6I9	1	HYD LINE I-08I	
27	I57-937	1	HOSE (060FX45-29"-3000)	
28	I59-846	1	HOSE (060FX-26"-3000)	
29	515-598	1	HOSE (040FX90-12"-3000)	
30	515-599	1	HOSE (040FX90-13"-3000)	
31	I5I-038	1	CYL (2.0 X 1.0 X 4.0)	
32	I50-II82	1	WRENCH VALVE	
33	154-222	2	CONNECTOR (060-08S)	
34	I5I-213	1	CYL (3.5" X 1.75" X 2.0")	

NOT SHOWN:

FOOTNOTES:

NOTE:

HYDRAULIC CYLINDER
3.5" x 1.75" x 2.0"

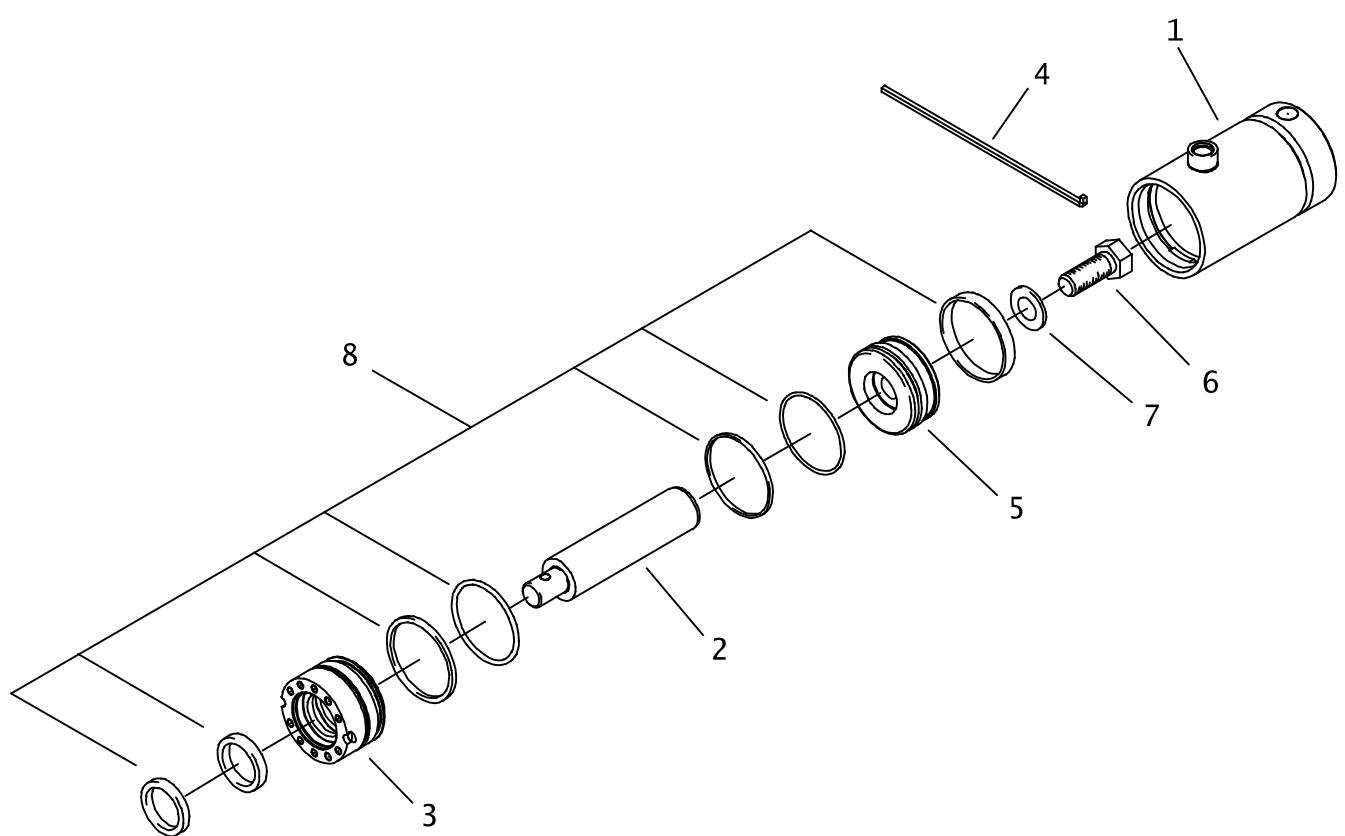

HYDRAULIC CYLINDER 3.5" X 1.75" X 2.0"



REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	151-213	-	CYL (3.5 X 1.75 X 2.0)	INCL REF NO.'S 1 THRU 15
1.	153-849	1	BARREL	
2.	153-845	1	CYL ROD	
3.	153-846	1	CYLINDER GLAND	
4.	149-302	1	LOCK RING (3.5")	
5.	149-301	1	CYL PISTON (3.5" X 1.75")	
6.	106-122	1	BOLT (7/8-NC X 2-1/4", GD8)	SEE FOOTNOTE 1
7.	105-363	1	WASHER (7/8")	
8.	190-174	1	SEAL REPAIR KIT	

NOT SHOWN:

FOOTNOTES:

- I. LUBRICATE WITH WD-40 OR EQUAL TORQUE TO 410-460 FT LBS (566-624 N.M.)

NOTE:

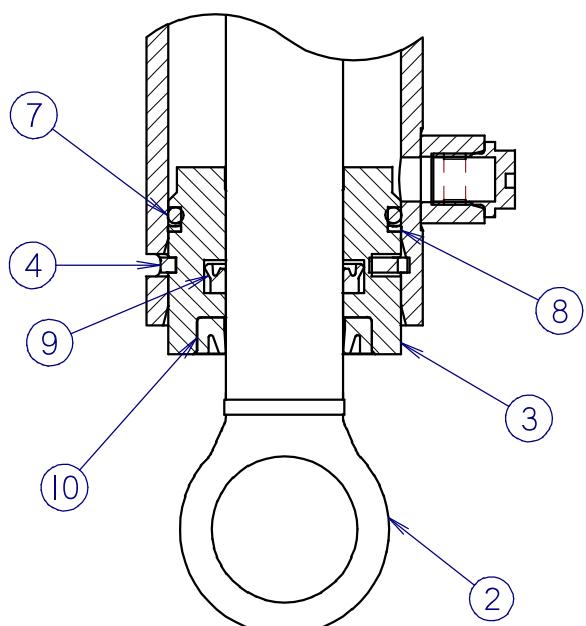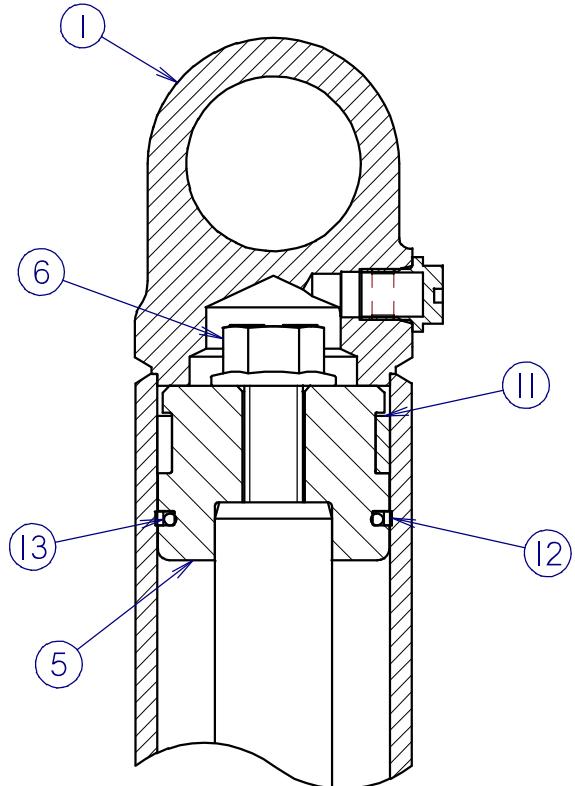HYDRAULIC CYLINDERS (2.0" X 1.0")

HYDRAULIC CYLINDERS (2.0" X 1.0")

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	I5I-094	-	CYL (2.0 X 1.0 X 2.0)	SEE FOOTNOTES I & 2
I	I52-029	I	CYLINDER BARREL (2.0 X 2.0)	
2	I53-007	I	CYLINDER ROD (1.00 X 2.0)	
	I49-667	-	CYL (2.0 X 1.0 X 2.5)	SEE FOOTNOTES I & 2
I	I49-76I	I	CYLINDER BARREL (2.0 X 2.5)	
2	I49-728	I	CYLINDER ROD (1.00 X 2.5)	
	I5I-027	-	CYL (2.0 X 1.0 X 3.0)	SEE FOOTNOTES I & 2
I	I50-282	I	CYLINDER BARREL (2.0 X 3.0)	
2	I50-414	I	CYLINDER ROD (1.00 X 3.0)	
	I5I-038	-	CYL (2.0 X 1.0 X 4.0)	SEE FOOTNOTES I & 2
I	I50-290	I	CYLINDER BARREL (2.0 X 4.0)	
2	I50-42I	I	CYLINDER ROD (1.00 X 4.0)	
	I5I-039	-	CYL (2.0 X 1.0 X 5.0)	SEE FOOTNOTES I & 2
I	I50-29I	I	CYLINDER BARREL (2.0 X 5.0)	
2	I50-422	I	CYLINDER ROD (1.00 X 5.0)	
	I5I-044	-	CYL (2.0 X 1.0 X 6.0)	SEE FOOTNOTES I & 2
I	I50-294	I	CYLINDER BARREL (2.0 X 6.0)	
2	I50-424	I	CYLINDER ROD (1.00 X 6.0)	
	I5I-03I	-	CYL (2.0 X 1.0 X 8.0)	SEE FOOTNOTES I & 2
I	I50-285	I	CYLINDER BARREL (2.0 X 8.0)	
2	I50-417	I	CYLINDER ROD (1.00 X 8.0)	
	I5I-076	-	CYL (2.0 X 1.0 X 10.0)	SEE FOOTNOTES I & 2
I	I52-017	I	CYLINDER BARREL (2.0 X 10.0)	
2	I50-444	I	CYLINDER ROD (1.00 X 10.0)	
	I49-668	-	CYL (2.0 X 1.0 X 12.0)	SEE FOOTNOTES I & 2
I	I50-286	I	CYLINDER BARREL (2.0 X 12.0)	
2	I49-729	I	CYLINDER ROD (1.00 X 12.0)	
3	I50-772	I	CYLINDER HEAD (2.0 X 1.00)	
4	I50-778	I	LOCK RING (2.0)	
5	I50-775	I	CYLINDER PISTON (2.0 X 1.00)	
6	I06-096	I	FLG BOLT (1/2-NC X 1-3/4",GD8)	SEE FOOTNOTE 3
7	I57-022	I	O-RING (224 D90)	
8	I55-732	I	BACKUP RING (224 D90)	
9	I57-540	I	U-SEAL (1.000")	
10	I57-537	I	WIPER SEAL (1.000")	
II	I25-774	I	WEAR RING	
I2	I57-534	I	BACKUP RING (131 D90)	
I3	I57-018	I	O-RING (131 D90)	


NOT SHOWN:

- 259-100 U-SEAL INSTALLER (1" - 1.499")
- 259-235 1.00 ROD WIPER TOOL
- 259-239 WIPER/SEAL INSTALLER (2")
- 259-24I PISTON INSTALLER (2")
- 259-I88 CYL HEAD SPANNER - TWO PIN

FOOTNOTES:

1. REF. #1 & #2 ARE SPECIFIC TO EACH CYLINDER, REF. #3 THRU #13 ARE COMMON FOR ALL THE ABOVE LISTED CYLINDERS
2. SEAL REPAIR KIT P/N I90-I65
3. APPLY LOCTITE 277 OR EQUIVALENT, TORQUE TO 90-100 FT-LBS

NOTE:

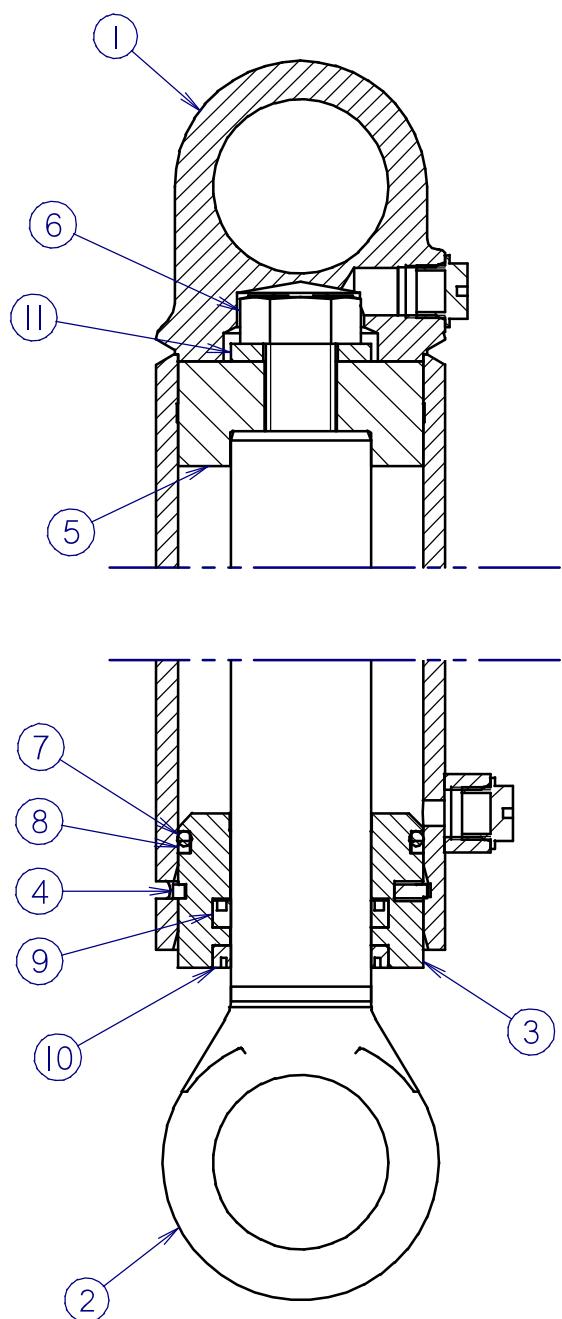HYDRAULIC CYLINDERS (3.5" X 2.0")

HYDRAULIC CYLINDERS (3.5" X 2.0")

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	I5I-I23	-	CYL (3.5 X 2.0 X 4.0)	SEE FOOTNOTES I & 2
I	I52-037	I	CYLINDER BARREL (3.5 X 4.0)	
2	I53-02I	I	CYLINDER ROD (2.00 X 4.0)	
I	I5I-I78	-	CYL (3.5 X 2.0 X 5.0)	SEE FOOTNOTES I & 2
I	I50-300	I	CYLINDER BARREL (3.5 X 5.0)	
2	I50-440	I	CYLINDER ROD (2.00 X 5.0)	
I	I49-692	-	CYL (3.5 X 2.0 X 5.0)	SEE FOOTNOTES I & 2
I	I50-296	I	CYLINDER BARREL (3.5 X 6.0)	
2	I49-735	I	CYLINDER ROD (2.00 X 6.0)	
I	I49-693	-	CYL (3.5 X 2.0 X 8.0)	SEE FOOTNOTES I & 2
I	I52-006	I	CYLINDER BARREL (3.5 X 8.0)	
2	I49-736	I	CYLINDER ROD (2.00 X 8.0)	
I	I5I-II6	-	CYL (3.5 X 2.0 X 10.0)	SEE FOOTNOTES I & 2
I	I52-040	I	CYLINDER BARREL (3.5 X 10.0)	
2	I53-016	I	CYLINDER ROD (2.00 X 10.0)	
I	I5I-047	-	CYL (3.5 X 2.0 X 12.0)	SEE FOOTNOTES I & 2
I	I50-297	I	CYLINDER BARREL (3.5 X 12.0)	
2	I50-429	I	CYLINDER ROD (2.00 X 12.0)	
I	I49-694	-	CYL (3.5 X 2.0 X 16.0)	SEE FOOTNOTE I & 2
I	I49-737	I	CYLINDER ROD (2.00 X 16.0)	
2	I49-805	I	CYLINDER BARREL (3.5 X 16.0)	
I	I49-695	-	CYL (3.5 X 2.0 X 20.0)	SEE FOOTNOTES I & 2
I	I49-765	I	CYLINDER BARREL (3.5 X 20.0)	
2	I49-738	I	CYLINDER ROD (2.00 X 20.0)	
I	I49-696	-	CYL (3.5 X 2.0 X 24.0)	SEE FOOTNOTES I & 2
I	I49-766	I	CYLINDER BARREL (3.5 X 24.0)	
2	I49-739	I	CYLINDER ROD (2.00 X 24.0)	
I	I49-697	-	CYL (3.5 X 2.0 X 30.0)	SEE FOOTNOTES I & 2
I	I49-767	I	CYLINDER BARREL (3.5 X 30.0)	
2	I49-740	I	CYLINDER ROD (2.00 X 30.0)	
				.
3	I50-759	I	CYLINDER HEAD (3.5 x 2.00)	
4	I49-302	I	LOCK RING (3.5)	
5	I50-992	I	CYLINDER PISTON (3.5 X 2.00)	INCL. MOLDED-ON WEAR RING
6	I06-145	I	BOLT (I-NC X 2-1/4", GD8)	SEE FOOTNOTE 3
7	I57-030	I	O-RING (338 D90)	
8	I57-032	I	BACKUP RING (338 D90)	
9	I57-559	I	U-SEAL (2.000")	
10	I57-558	I	WIPER SEAL (2.000")	
II	I06-144	I	WASHER (1")	

FOOTNOTES

1. REF. #I & #2 ARE SPECIFIC TO EACH CYLINDER, REF. #3 THRU #II ARE COMMON FOR ALL THE ABOVE LISTED CYLINDERS.
2. SEAL REPAIR KIT P/N: I90-I75
3. APPLY LOCTITE 277 OR EQUIVALENT, TORQUE TO 630-700 FT-LBS

NOT SHOWN:


- 259-040 U-SEAL INSTALLER (1.5" - UP)
- 259-239 WIPER/SEAL INSTALLER (2")
- 259-244 PISTON SEAL INSTALLER (3.5")
- 259-245 PISTON INSTALLER (3.5")
- 259-I88 CYL HEAD SPANNER - TWO PIN

NOTES:

NOTES:

ANCHOR SYSTEMS

ANCHOR SYSTEM

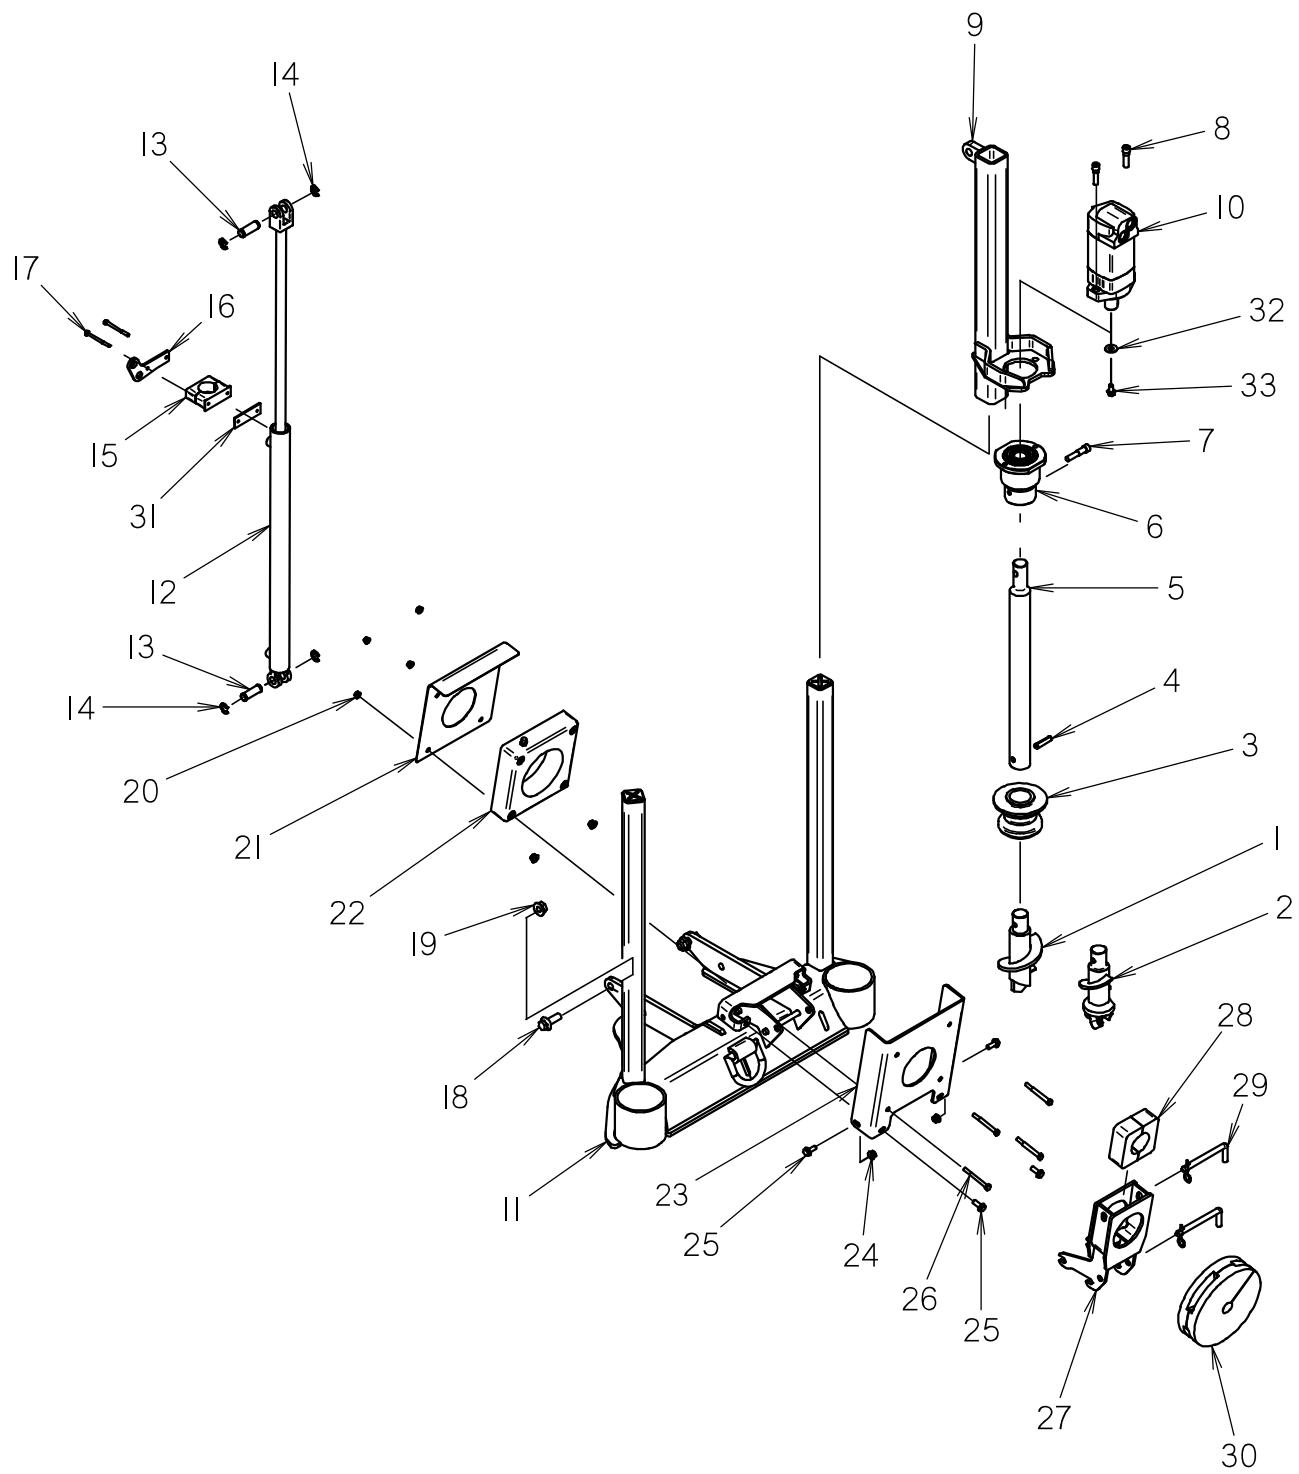

ANCHOR SYSTEM

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	327-460	1	AUGER (4")	SEE FOOTNOTE 1
2	327-457	1	ROCK ANCHOR	
3	158-238	2	CENTERING CAP	
4	107-331	2	ROLL PIN (M12 X 50MM)	
5	166-617	2	SHAFT	
6	350-2174	2	ANCHOR DRIVE COUPLER	SEE FOOTNOTE 3
7	106-771	2	SCREW (M12-1.75 X 60MM, SOCI)	
8	106-707	4	SCREW (M12-1.75 X 45MM, SOCI)	
9	316-767	2	UPPER TUBE	
10	158-700	2	HYD MOTOR	SEE FOOTNOTE 5 FOR SERVICE PARTS
11	300-2951	1	ANCHOR FRAME	
12	151-214	2	HYD CYL	SEE FOOTNOTE 2
13	179-736	4	PIN	
14	115-503	8	KLIP RING (.750")	
15	318-631	2	BOLT-ON CLAMP (1.875)	
16	318-658	2	BULKHEAD BRACKET	
17	107-196	4	BOLT (1/4-NC X 3.0, GD5)	
18	107-336	6	FLG SCREW (M16-2.00X45MM, I.O.9)	
19	106-355	6	FLG NUT (M16-2.00, I.O.9)	
20	106-386	4	FLG LOCKNUT (M8-I.25)	
21	300-2168	1	COVER	
22	215-1081	1	CURRENT TRANSFORMER	
23	300-2131	1	TRANSFORMER COVER	
24	106-266	4	FLG NUT (M10-I.50)	
25	106-724	4	FLG SCREW (M10-I.50 X 25MM)	
26	106-602	4	SCREW (M8-I.25 X 80MM)	
27	300-3930	1	PIPE GUIDE MOUNT	
28	362-1060	2	PIPE GUIDE	BEGINS WITH S/N CMWJT922EB0000488 SEE FOOTNOTE 6
29	107-870	2	PULL PIN (.5 X 5")	
30	149-578	1	SPLIT ROD WIPER 1.25" ID	
31	110-972	2	WELD PLATE	
32	105-794	2	WASHER (M12)	
33	105-825	2	FLG LK BOLT (3/8-NC X 3/4)	

NOT SHOWN:

327-499	ANCHOR DRIVER	
106-685	LOCKNUT (M12-1.75, PRV TRQ, I.O.9)	SEE FOOTNOTE 4
105-156	BOLT (3/8-NC X 1-1/2")	SEE FOOTNOTE 4

FOOTNOTES:

1. 131-259 INSERT BIT - CARBIDE TIPPED
2. 500-1542 SEAL KIT
3. SUPERSEDES 327-499
4. USED WITH 327-499, NOT USED WITH 350-2174
5. 105-909 KEY (5/16" X 1-1/8")
6. USE 362-1057 FOR FINE THREAD PIPE.


NOTE:

NOTES:

FLUID SYSTEMS

ID0135021

WATER TANK

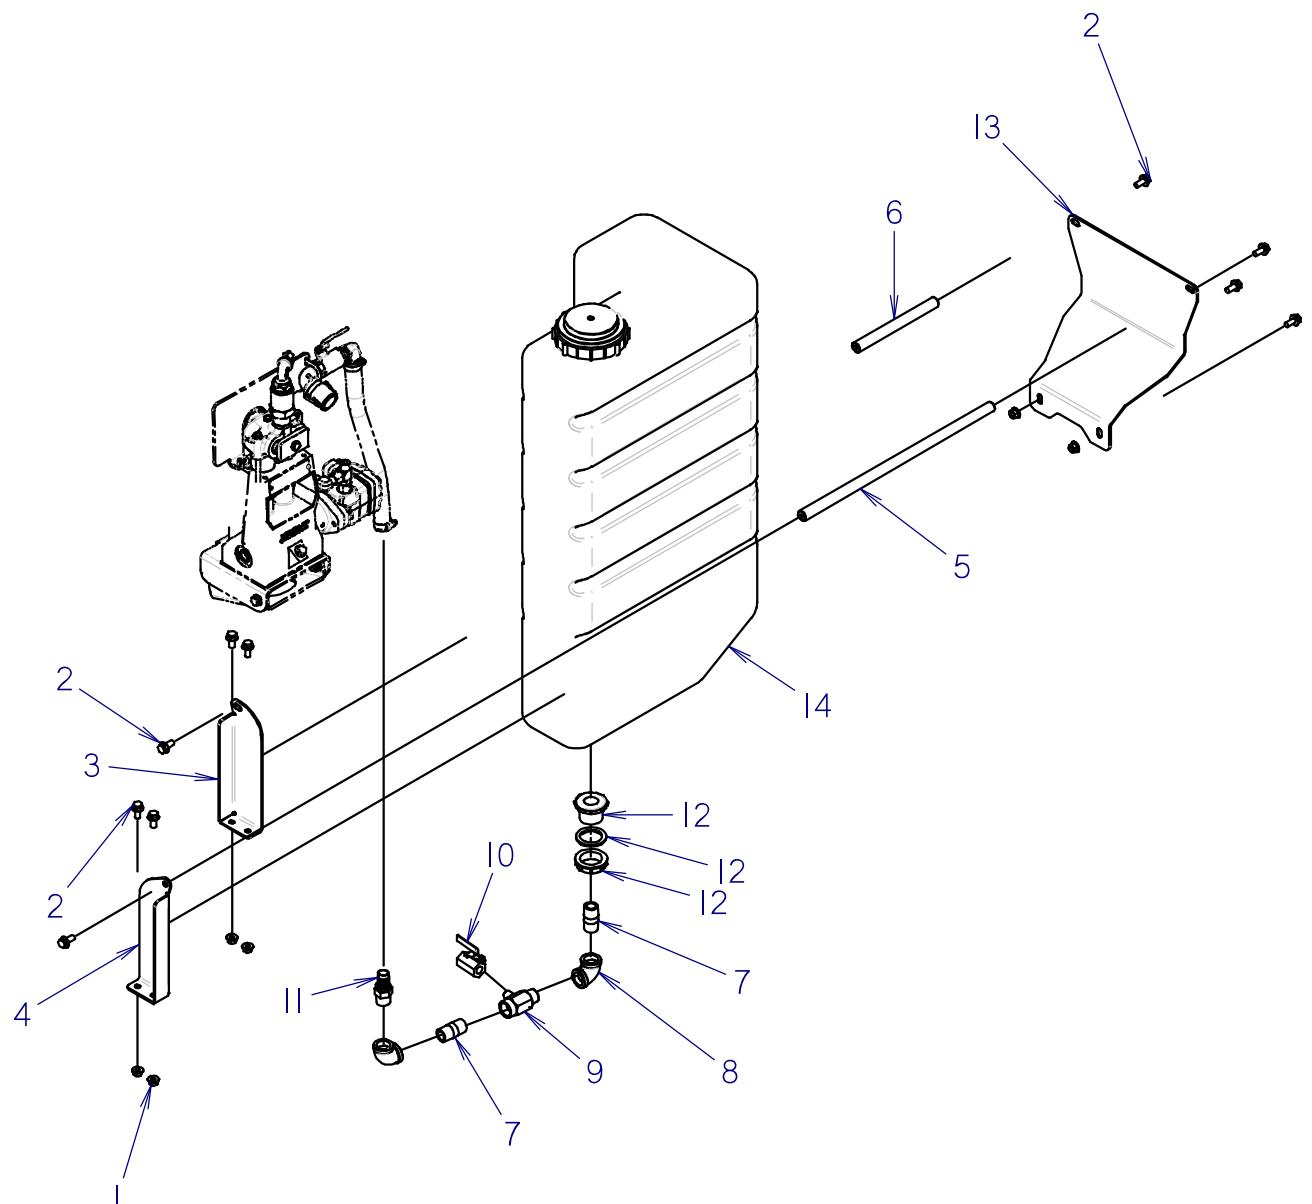

WATER TANK

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	106-354	6	FLANGE NUT (M12-1.75)	
2	106-806	10	FLG LK SCREW (M12-1.75 X 25MM)	
3	300-3390	1	RIGHT BRACKET	
4	300-3391	1	LEFT BRACKET	
5	300-3392	1	LONG BAR	
6	300-3393	1	SHORT BAR	
7	I15-206	2	NIPPLE (16N-2.5")	
8	I15-208	2	ELBOW (16NF-16NF90)	
9	514-024	1	BRANCH TEE (08N-16N-16NF)	
I0	158-579	1	SHUT-OFF (08NF-08NF)	
I1	155-I36	1	S/O COUPLER (16N-16H)	
I2	157-490	1	BK CONNECTOR (16NF POLY)	
I3	300-3387	1	TANK SUPPORT	I @ 20"
I4	362-I078	1	WATER TANK	SEE FOOTNOTE I


NOT SHOWN:

FOOTNOTES:

- I. I57-488 CAP/LID

NOTE:

DRILLING FLUID PUMP INLET (9 GALLON PUMP)

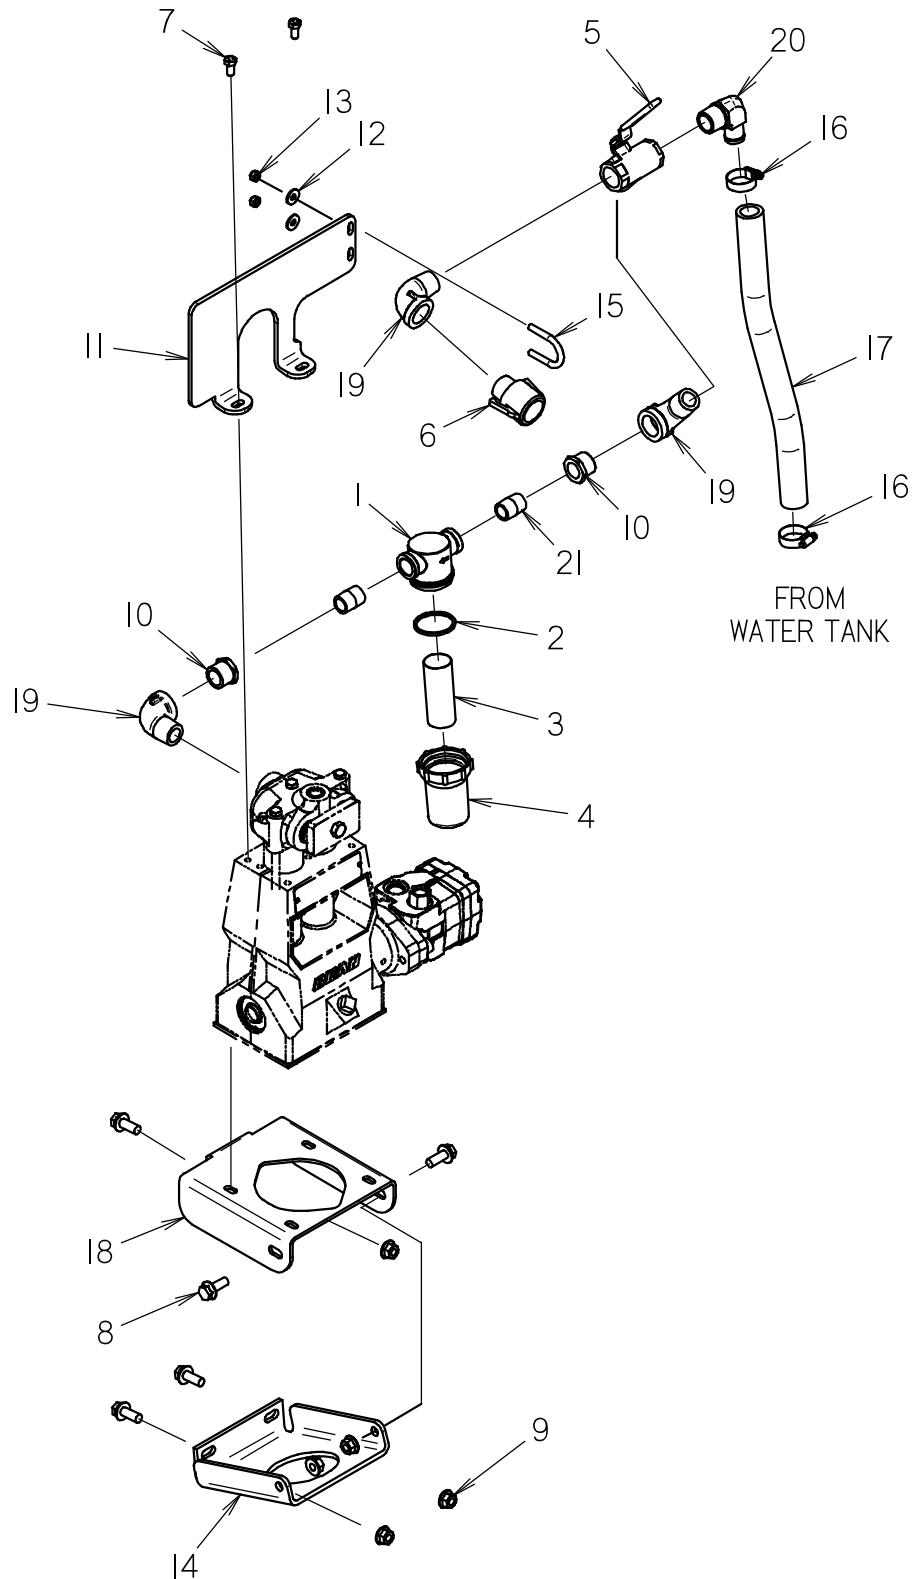

DRILLING FLUID PUMP INLET (9 GALLON PUMP)


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	I53-I33	1	STRAINER (I2NF)	INCLUDES REF NO'S 2, 3 & 4
2	I53-676	1	FILTER GASKET	
3	I53-198	1	SCREEN (20 MESH)	
4	I53-677	1	FILTER BOWL	
5	I49-II3	1	3-WAY SHUT-OFF (I6NF) VALVE	
6	I49-I37	1	FHC CONNECTOR	
7	I05-032	2	BOLT (3/8-NC X 3/4")	
8	I06-469	5	FLG SCREW (M12-L75 X 30MM)	
9	I06-354	5	FLANGE NUT (M12-L75)	
I0	II5-II51	2	REDUCER (I6N-I2NF)	
II	300-3803	1	STRAINER BRACKET	
I2	I05-II7	2	WASHER (5/I6")	
I3	I05-089	2	LOCKNUT (5/I6-NC)	
I4	300-3695	1	SUPPORT PLATE	
I5	I07-563	1	U-BOLT (5/I6-NC X 1-3/8")	
I6	II0-353	2	WORM CLAMP (3/4" TO 1-1/2")	
I7	II6-460	20	BULK HOSE (I")	
I8	300-3405	1	PUMP MOUNT	
I9	II5-440	3	STREET ELBOW (I6N-I6NF90)	
20	I55-I37	1	S/O COUPLER (I6N-I6H90)	
21	II5-I63	2	ALL THREAD (I2N) SCH 80	

NOT SHOWN:

FOOTNOTES:

NOTE:

DRILLING FLUID PUMP INLET
 (13 GALLON PUMP)

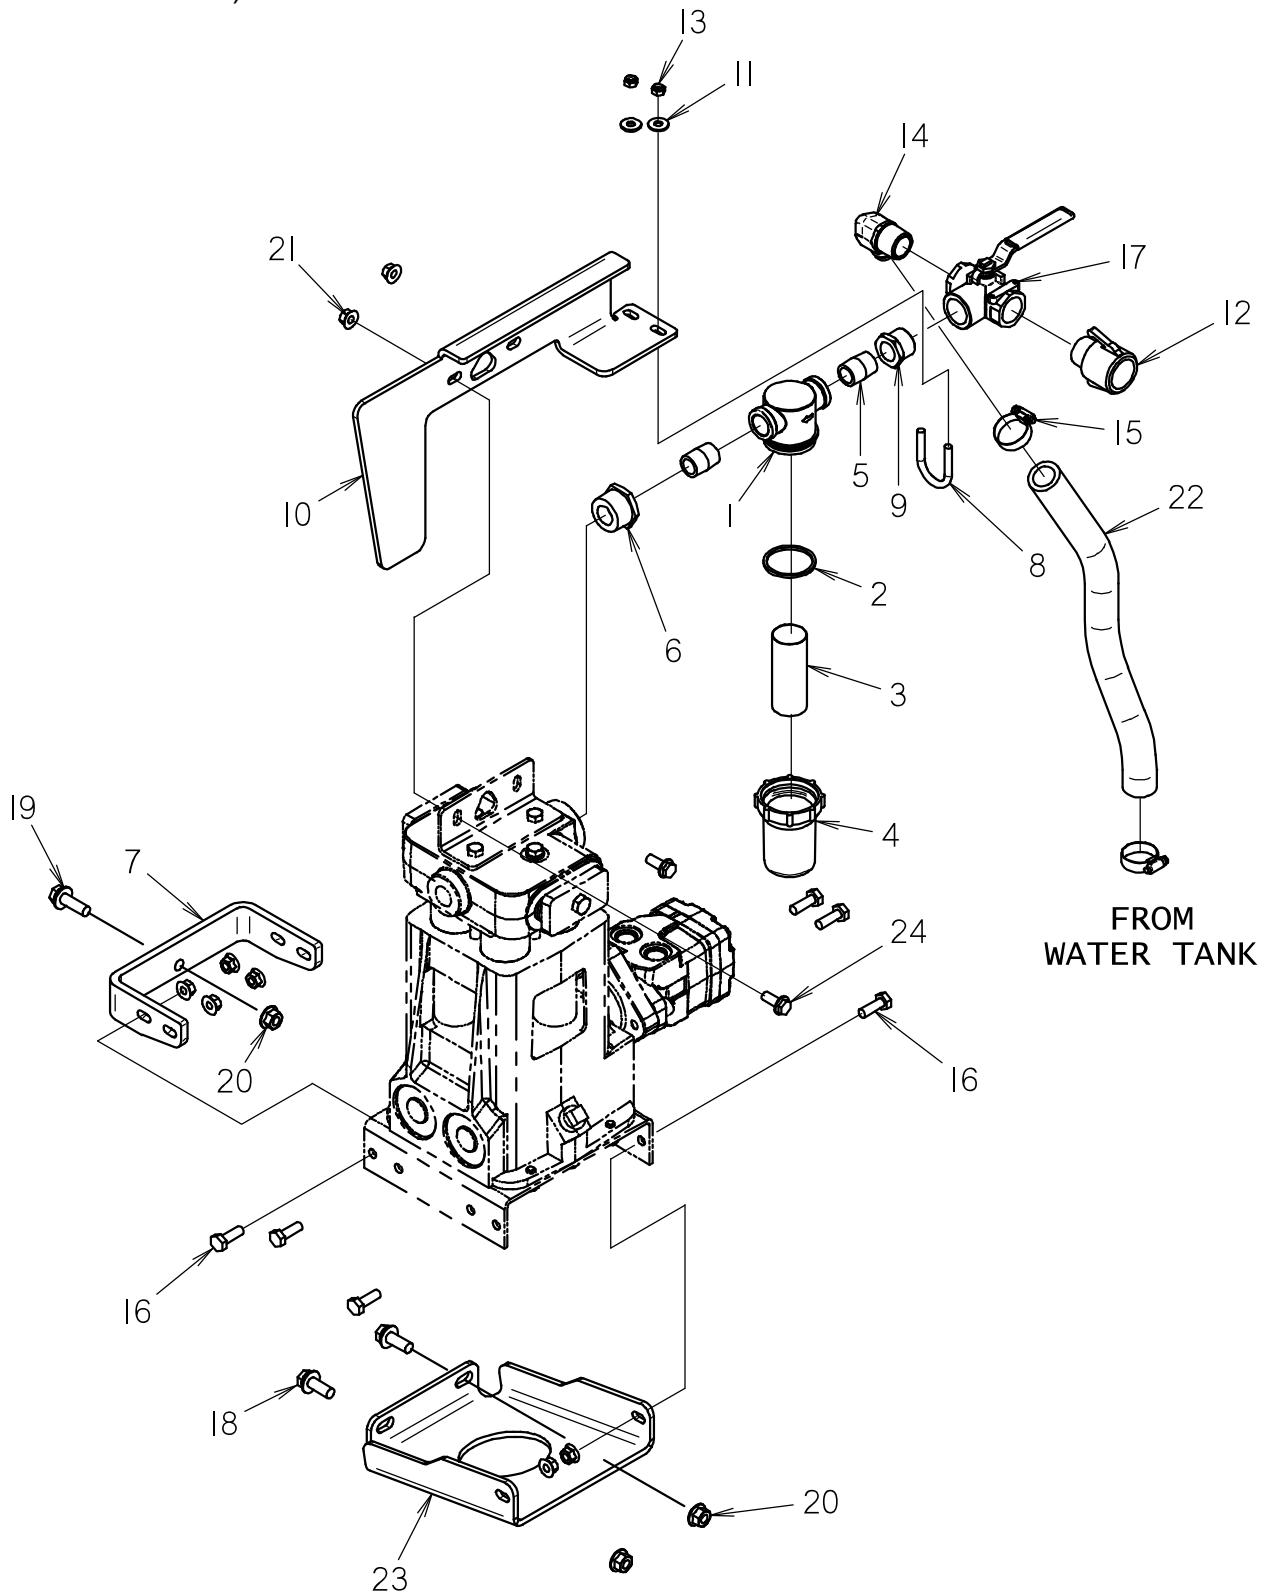

DRILLING FLUID PUMP INLET (13 GALLON PUMP)


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	I53-I33	1	STRAINER (I2NF)	INCLUDES REF NO'S 2, 3 & 4
2	I53-676	1	FILTER GASKET	
3	I53-198	1	SCREEN (20 MESH)	
4	I53-677	1	FILTER BOWL	
5	II5-163	2	ALL THREAD (I2N) SCH 80	
6	II5-260	1	REDUCER (I2N-I2NF)	
7	300-4236	1	MOUNT BRACKET	
8	107-563	1	U-BOLT (5/I6-NC X I-3/8")	
9	II5-151	1	REDUCER (I6N-I2NF)	
I0	300-5228	1	SUPPORT BRACKET	
II	105-II7	2	WASHER (5/I6")	
I2	I49-I37	1	FHC CONNECTOR	
I3	I05-089	2	LOCKNUT (5/I6-NC)	
I4	I55-I37	1	S/O COUPLER (I6N-I6H90)	
I5	II0-353	2	WORM CLAMP (3/4" TO I-I/2")	
I6	I06-079	6	SCREW (M10-I.50 X 30MM)	
I7	I49-II3	1	3-WAY SHUT-OFF (I6NF) VALVE	
I8	I06-469	2	FLG SCREW (M12-I.75 X 30MM)	
I9	I06-632	1	FLG LK SCR (M12-I.75X35MM,SER)	
20	I06-354	3	FLANGE NUT (M12-I.75)	
21	I06-387	8	FLG LOCKNUT (M10-I.50)	
22	II6-460	17	BULK HOSE (", SOLD PER FT)	
23	300-4237	1	PUMP MOUNT	
24	I06-724	2	FLG SCREW (M10-I.50 X 25MM)	

NOT SHOWN:

FOOTNOTES:

NOTE:

DRILLING FLUID PLUMBING

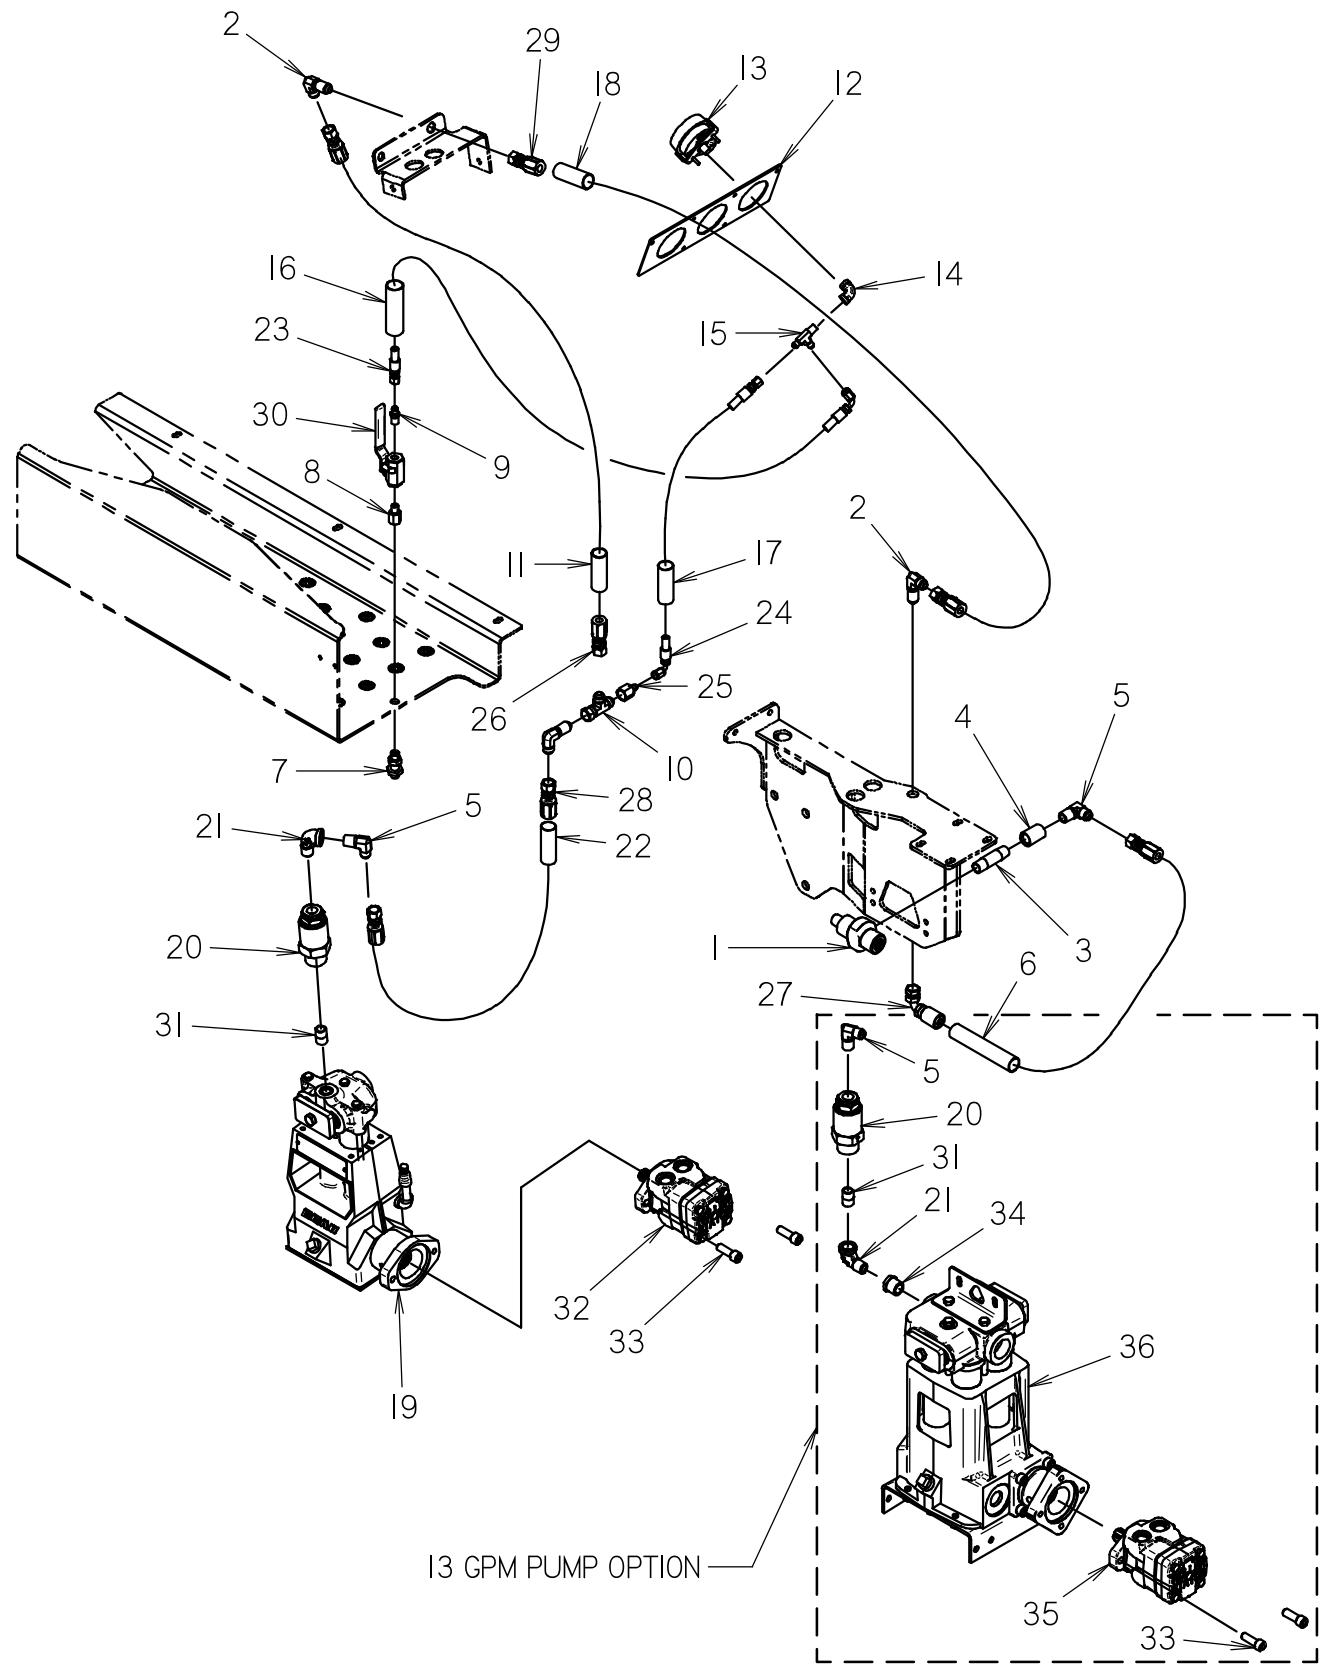

DRILLING FLUID PLUMBING


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	I50-I462	1	WATER SWIVEL I-08J	
2	I54-I48	3	BK CONNECTOR I08J-08J90BK	
3	I15-I24	1	PIPE NIPPLE I1/2-NPT X 3" LG	
4	I15-I55	1	COLLAR I08NF	
5	I54-320	3	CONNECTOR I08N-08J90	
6	I17-280	1	ABRASION SLEEVE I1.00" X 25"	
7	I53-238	1	BK CONNECTOR I040-06S	
8	I53-264	1	REDUCER I04N-06SF	
9	I54-020	1	CONNECTOR I04N-04J	
10	I54-I35	1	UN RUN TEE I08JFX-08J-08J	
11	I17-717	1	ABRASION SLEEVE I1.00" X 40""	
12	300-3252	1	GAUGE MOUNT PANEL	
13	258-062	1	PRESSURE GAUGE I1500 PSI	
14	I49-896	1	STREET ELBOW I04NF-04NF90	
15	I54-II7	1	RUN TEE I04N-04J-04J	
16	I17-4II	1	ABRASION SLEEVE I1.00" X 32"	
17	I17-718	1	ABRASION SLEEVE I1" X 36""	
18	I17-213	1	ABRASION SLEEVE I1.00" X 96""	
19	I58-465	1	MUD PUMP	
20	I49-324	2	FLOW CHECK I08NF-08NF/64PSI	
21	I15-I15	2	STREET ELBOW I08N-08NF90	
22	I17-702	1	ABRASION SLEEVE I1.00" X 68"	
23	I50-I640	1	HOSE I04JFX90-32"-3000I	
24	I50-I639	1	HOSE I04JFX90-36"-3000I	
25	I54-259	1	REDUCER I04J-08JF	
26	I50-I638	1	HOSE I08JFX-40"-3000I	
27	I50-I456	1	HOSE I-08JFX90S-24"-3000I	
28	I50-I572	1	HOSE I08JFX-70"-3000I	
29	I50-I534	1	HOSE I08JFX-95"-3000I	
30	I20-07I	1	BALL VALVE	
31	I15-I9I	2	NIPPLE I08N	
32	I50-I262	1	GEROLER GEAR MOTOR	
33	I06-204	4	BOLT I1/2 - NC X I.50", SOC	TORQUE TO I00 FT-LBS, USE LOCKTITE 242 OR EQUIVALENT
34	I15-I26	1	REDUCER I12N-08NF	
35	I50-I5II	1	GEROLER GEAR MOTOR	
36	I58-I005	1	DRILLING FLUID PUMP	SEE FOOTNOTE I

NOT SHOWN:

FOOTNOTES:

I. I9I-I007 PACKING KIT

NOTE:

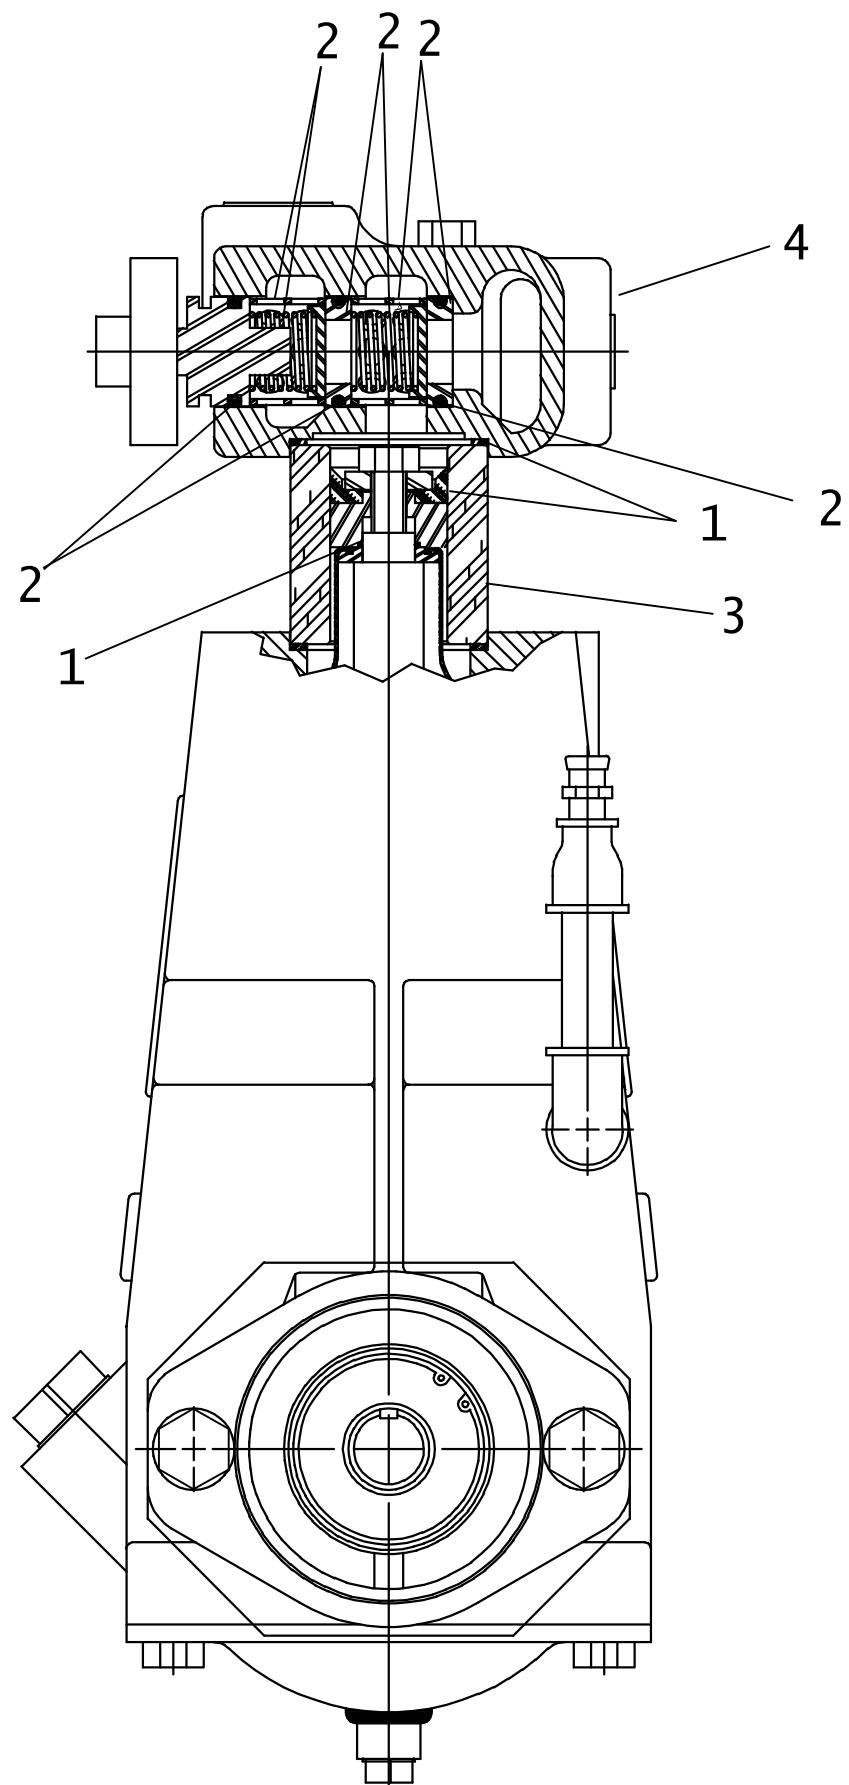MUD PUMP
9 GPM


MUD PUMP 9 GPM

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	158-465	-	MUD PUMP	BEGINS WITH S/N 2N2090
1.	190-933	1	PACKING REPAIR KIT (MUD PUMP)	
2.	190-815	2	VALVE REPAIR KIT	
3.	500-903	2	CERAMIC CYLINDER	
4.	499-015	1	FLUID CYLINDER (HEAD)	

NOT SHOWN:
499-086 2 VALVE COVER

FOOTNOTES:

NOTE:

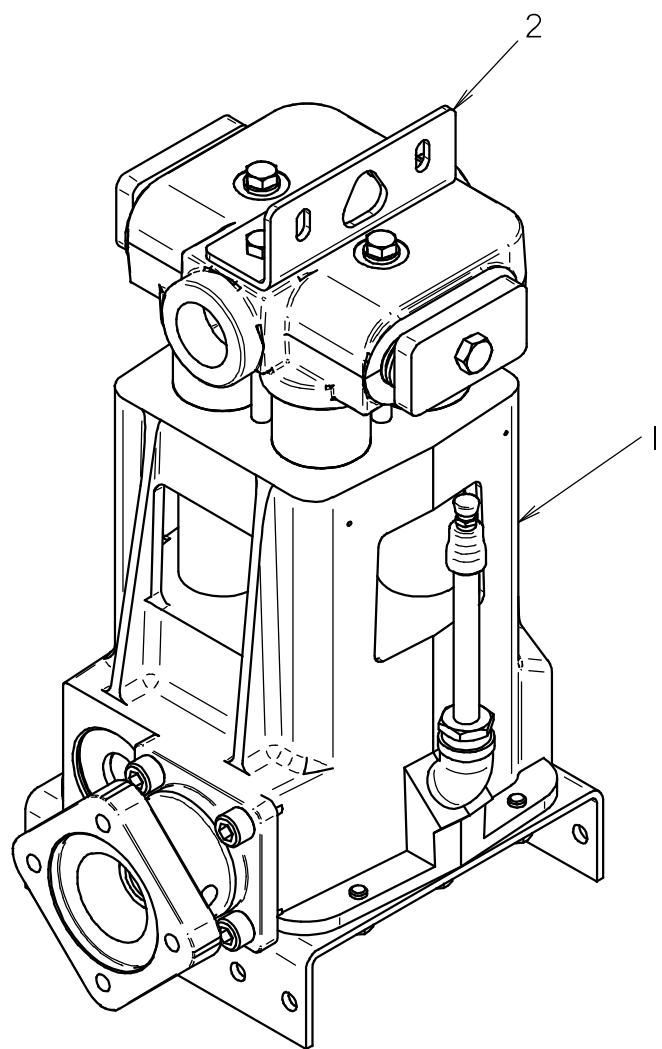MUD PUMP
13 GPM

MUD PUMP 13 GPM

REF	PART	NO.	NUMBER	QTY	DESCRIPTION	REMARKS
I	I58-I005			1	DRILLING FLUID PUMP	INCLUDES BRACKET
2	300-5172			1	BRACKET	

NOT SHOWN:

- I9I-034 1 PACKING REPAIR KIT
- I57-75I 4 SEAL, CRANKSHAFT
- 499-059 4 PACKING HOLDER
- 499-058 4 CERAMIC CYLINDER (I-3/8")

FOOTNOTES:

NOTE:

01


ID0271569

NOTES:

NOTES:

ACCESSORIES

AUTO LUBER ASSEMBLY

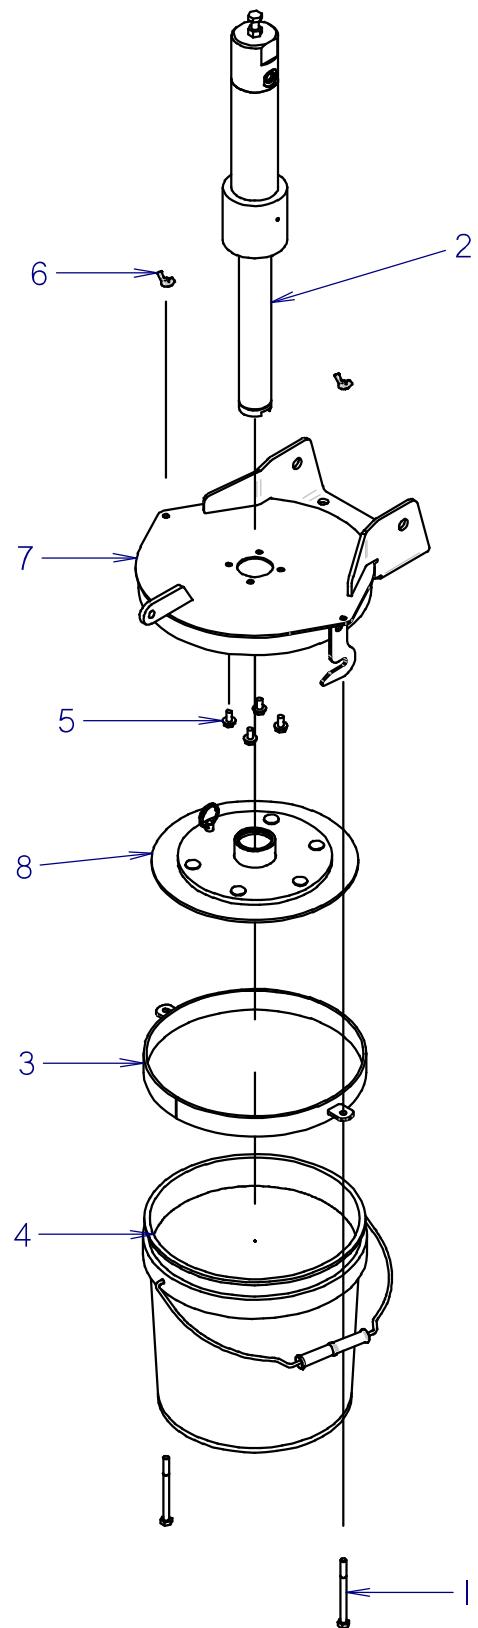

AUTO LUBER ASSEMBLY


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	105-297	2	BOLT 1/4-NC X 3-1/4"	
2	350-1760	1	GREASE PUMP - LOW OUTPUT	
3	350-399	1	BASE	
4	259-858	1	TOOL JNT LUBE, STD SPRY 2 GAL	
5	106-378	4	FLG LK SCREW (M6-1.00 X 12MM)	
6	195-339	2	WING NUT 1/4-NCI	
7	350-400	1	COVER WELDMENT	
8	350-1932	1	TOOL JOINT LUBE FOLLOWER	

NOT SHOWN:

FOOTNOTES:

NOTE:

LUBRICATOR MOUNT, NOZZLE & APPLICATOR

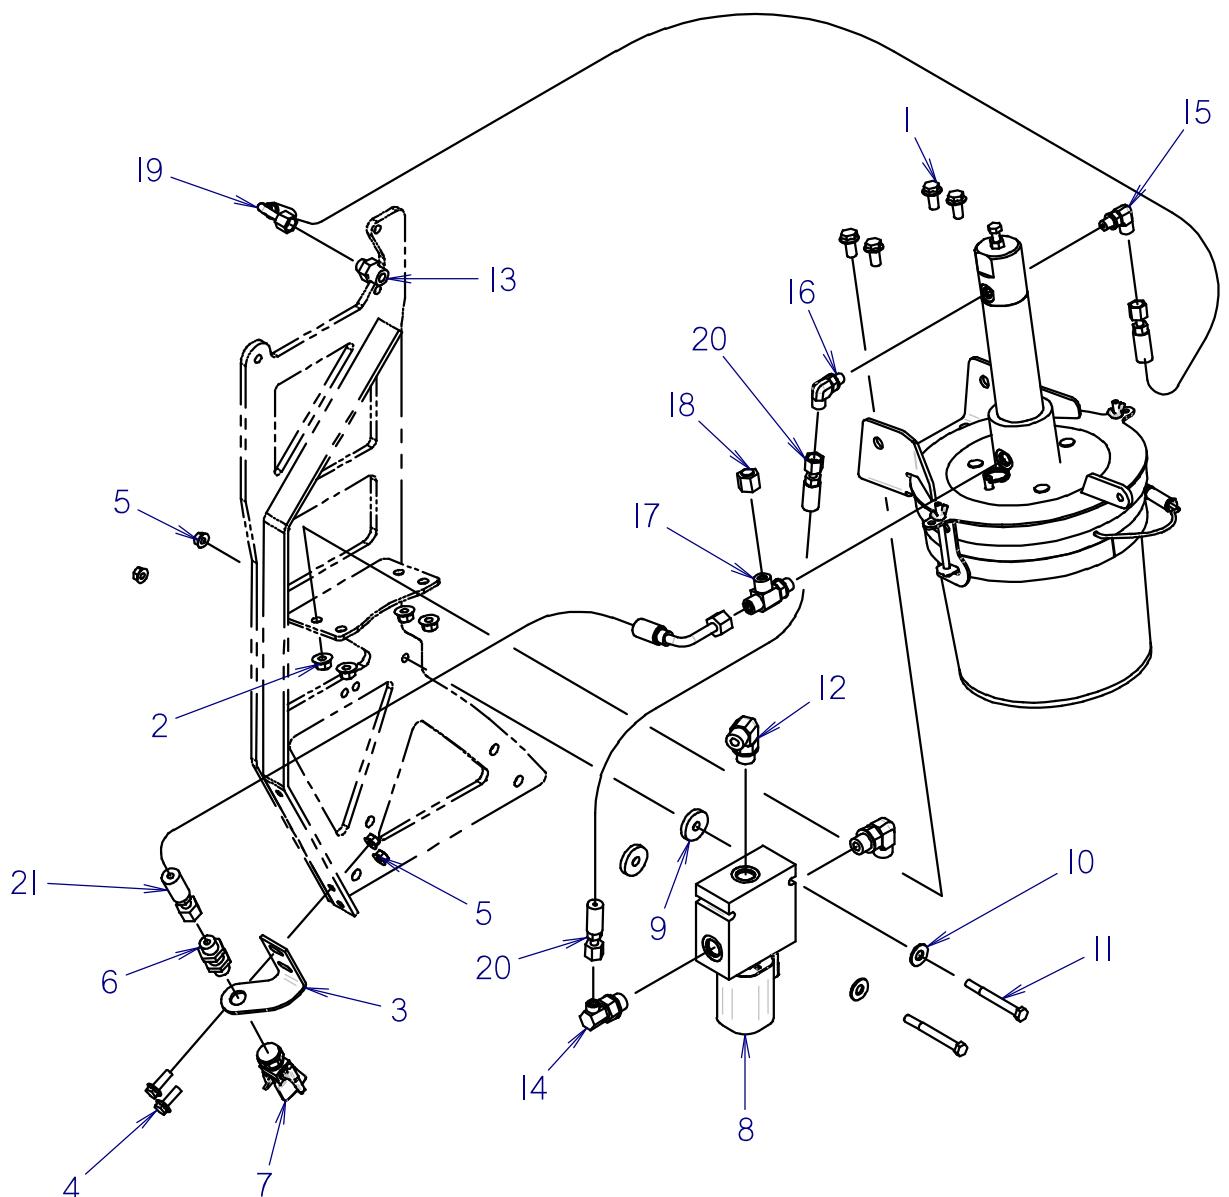

LUBRICATOR MOUNT, NOZZLE & APPLICATOR


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	106-382	4	FLG LK SCREW (M10-1.50 X 20MM)	
2	106-387	4	FLG LOCKNUT (M10-1.50)	
3	318-409	1	NOZZEL BRACKET	
4	106-381	2	FLG LK SCREW (M8-1.25 X 25MM)	
5	106-386	4	FLG LOCKNUT (M8-1.25)	
6	514-163	1	BK CONNECTOR (060-060BK)	
7	149-399	1	SPRAY NOZZLE (65)	
8	150-1397	1	2 POSITION 3 WAY SOLENOID VALVE	
9	105-886	2	WASHER (40")	
10	105-118	2	WASHER (3/8")	
11	106-602	2	SCREW (M8-1.25 X 80MM)	
12	154-235	2	CONNECTOR (08S-08090)	
13	154-261	1	CONNECTOR (040-08S)	
14	154-276	1	CONNECTOR (040-08S90)	
15	154-401	1	CONNECTOR (04S-04090, ORF)	
16	154-252	1	CONNECTOR (04S-04090)	
17	154-345	1	RUN TEE (06S-060-060)	
18	154-326	1	CAP (060F)	
19	154-857	1	HOSE (040FX90-19"-3000)	
20	154-783	1	HOSE (040FX-24"-3000)	
21	150-1585	1	HOSE (060FX90L-24"-3000)	OPTIONAL: 153-585 HEATED HOSE

NOT SHOWN:

FOOTNOTES:

NOTE:

GREASE PUMP - LOW OUPUT

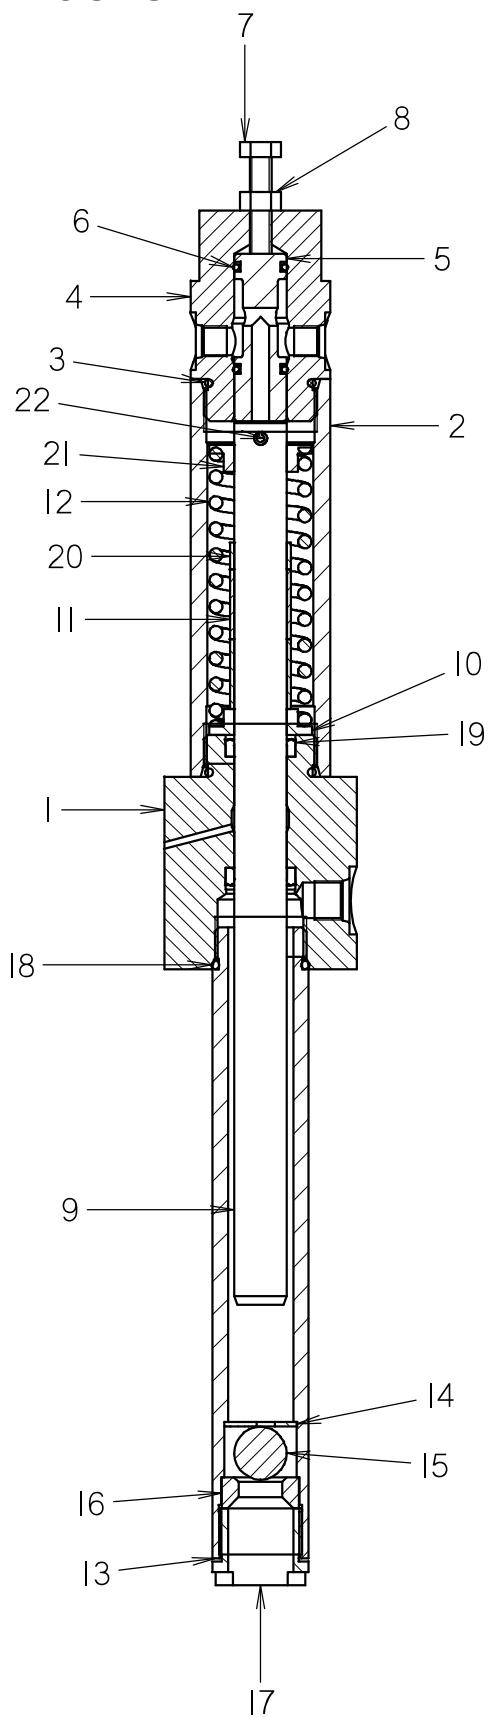

GREASE PUMP - LOW OUPUT


REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	350-1760	-	GREASE PUMP - LOW OUTPUT	
I	350-687	1	PUMP BODY	
2	350-682	1	BARREL	
3	155-702	2	O-RING (920 D90)	
4	350-686	1	CYLINDER CAP	
5	350-421	1	ADJUSTING SPOOL	
6	157-049	2	O-RING (113 D70)	
7	107-492	1	SCREW (M8-L.25 X 35MM, ALL THD)	
8	106-078	1	NUT (M8-L.25)	
9	166-280	1	PLUNGER	SEE FOOTNOTE I
I0	350-671	1	ROD GUIDE	
I1	125-424	2	BRONZE BUSHING (.750")	
I2	I17-228	1	COMPRESSION SPRING	
I3	350-693	1	PUMP BARREL	
I4	30I-0196	1	RETAINER CLIP	SUPERSEDES RETAINER CLIP I05-653
I5	125-I25	1	DETENT BALL (.750")	
I6	350-691	1	VALVE SEAT	
I7	350-692	1	INLET TUBE	
I8	155-748	1	O-RING (916 D90)	
I9	I17-227	2	SEAL (POLY PAK)	
I0	125-422	1	BRONZE BUSHING (.751")	
I1	178-467	1	ROD CAP	SEE FOOTNOTE I
I2	105-525	1	ROLL PIN (3/16" X 1-1/4")	SEE FOOTNOTE I

NOT SHOWN:

FOOTNOTES:

- I. USE I66-280, I78-467 & I05-525 TO SUPERCEDE 308-603

NOTE:

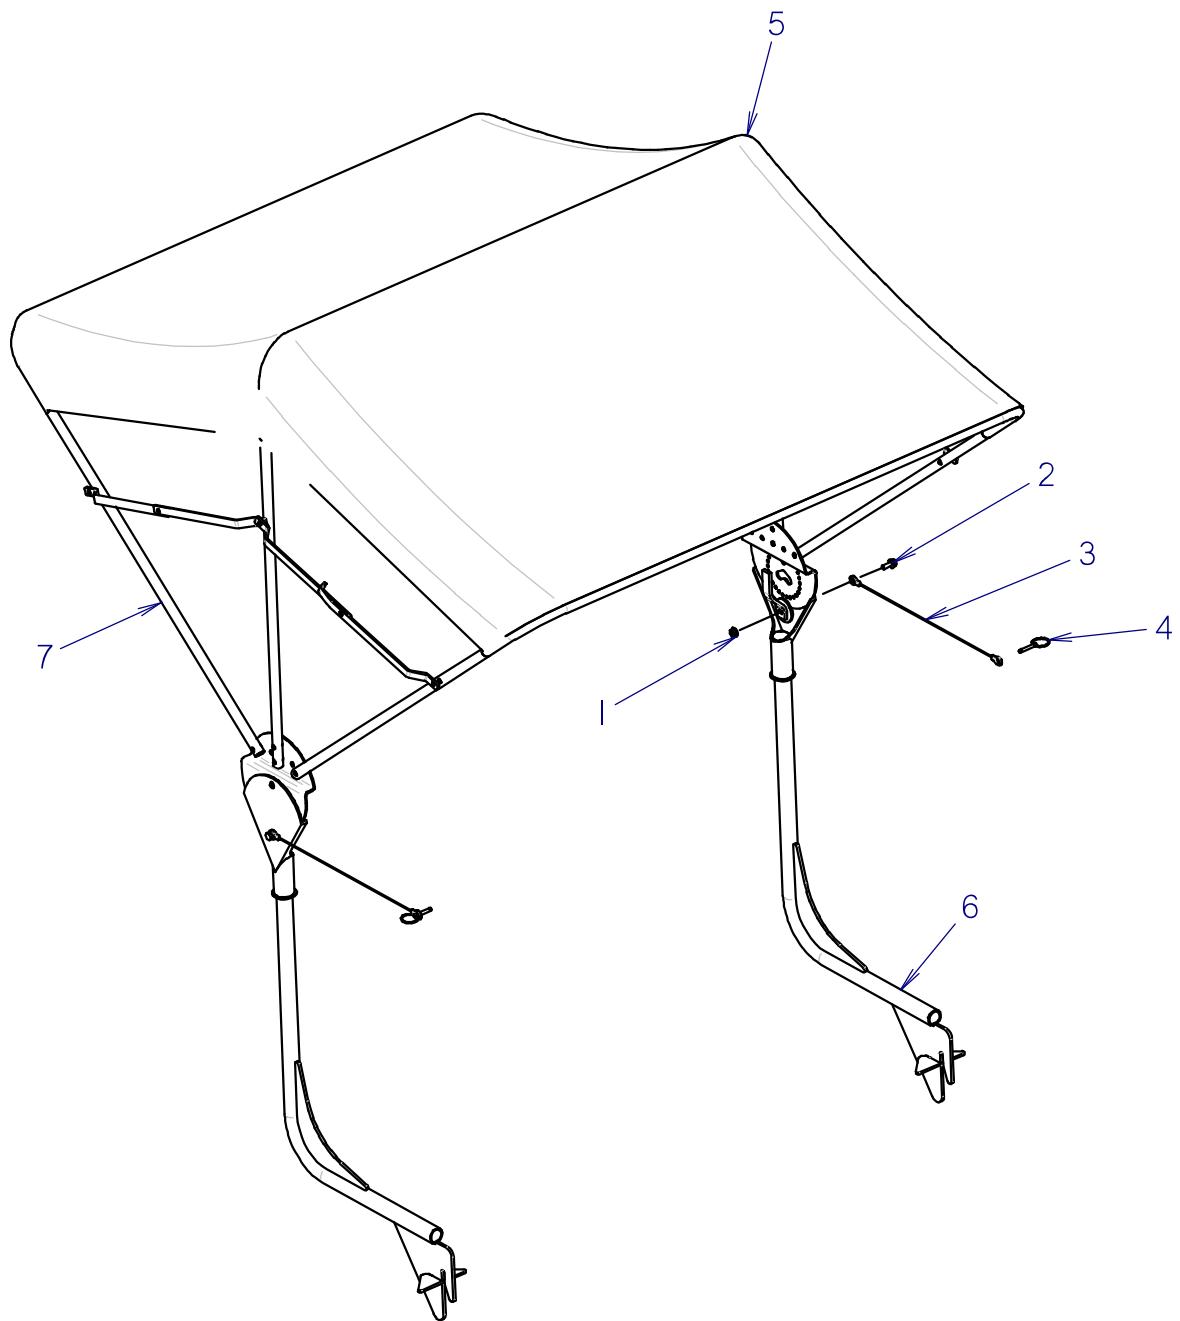CANOPY

CANOPY

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	106-385	1	FLG LOCKNUT (M6-L.00)	
2	106-712	2	FLG SCREW (M6-L.00 X 16MM)	
3	II0-239	2	LANYARD CABLE (13.5")	
4	II0-284	2	PULL PIN (3/16" X 13/16")	
5	362-II25	1	CANOPY	
6	300-3662	2	CANOPY MOUNT	
7	362-II39	1	CANOPY BRACKETS	


NOT SHOWN:

FOOTNOTES:

NOTE:

OI

ID0181338

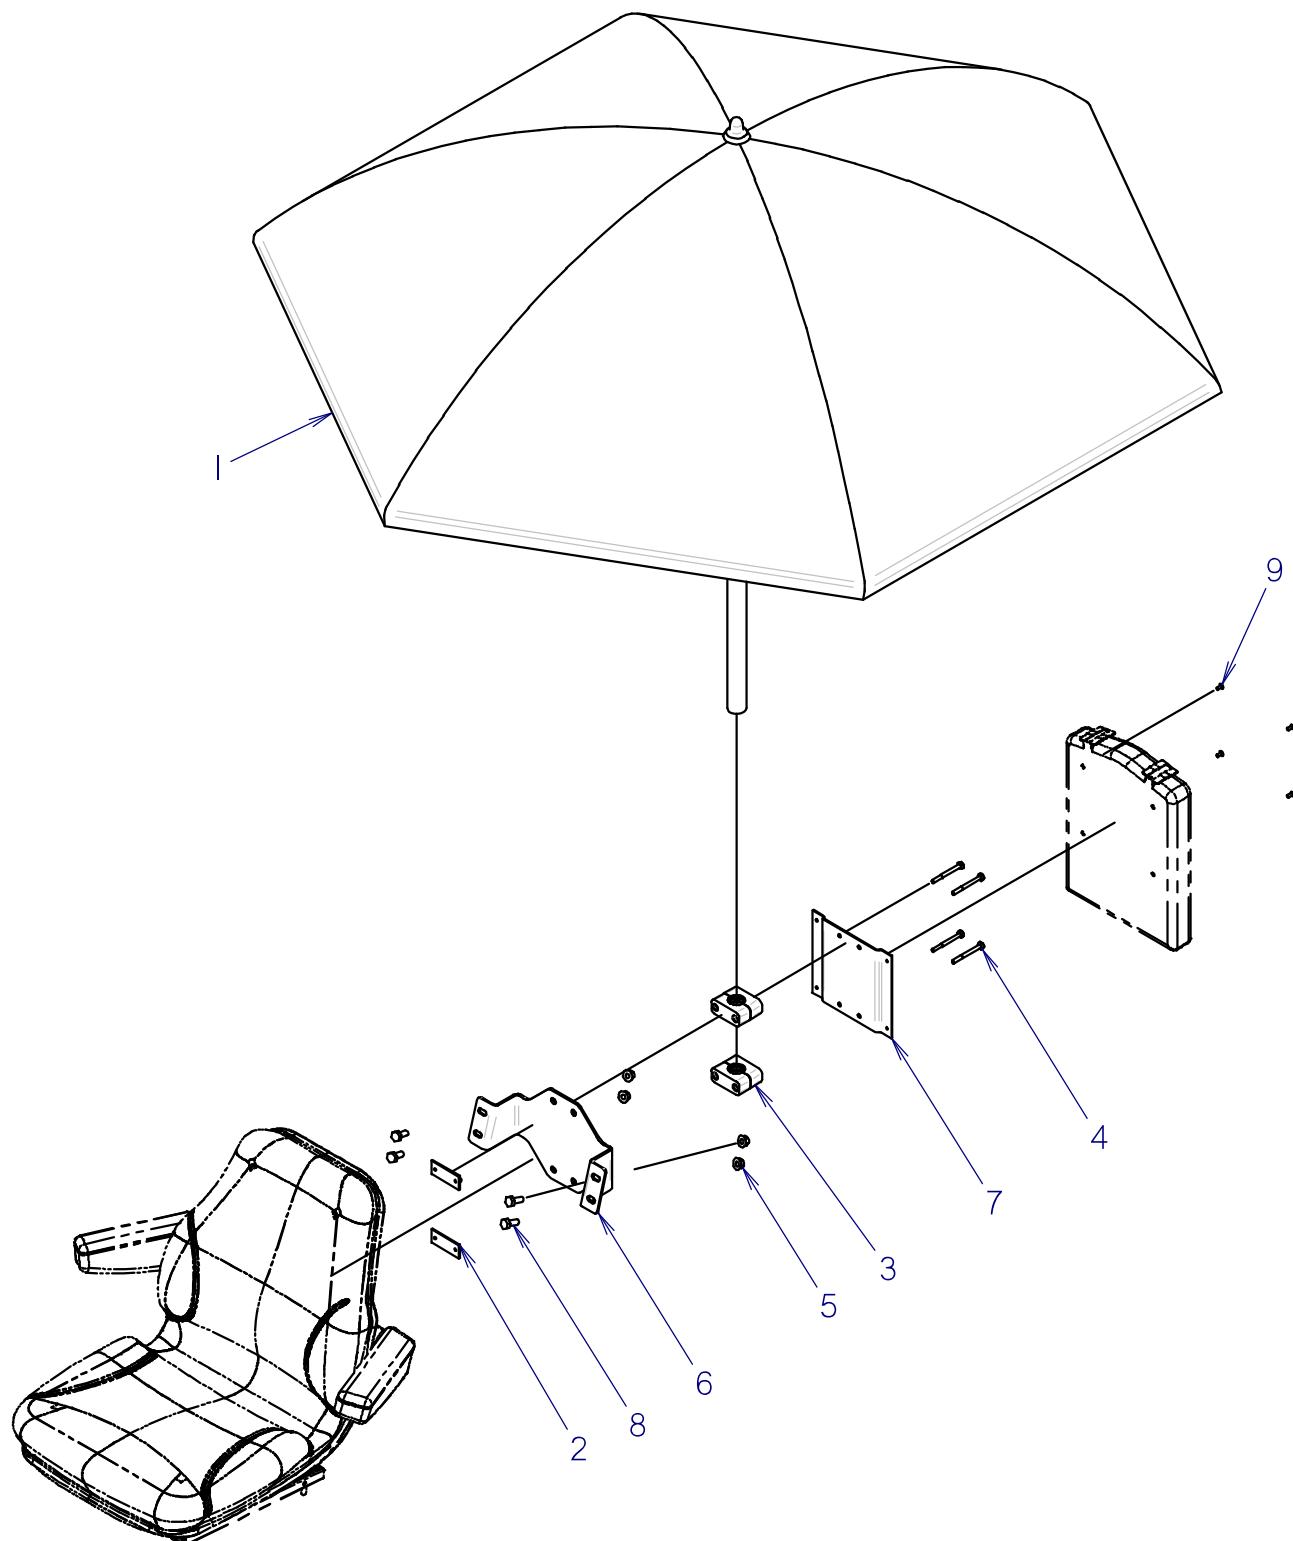UMBRELLA KIT

UMBRELLA KIT

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
	I90-I290		UMBRELLA KIT	
1	344-700	1	UMBRELLA	
2	322-363	2	WELD PLATE	
3	III-026	2	BOLT-ON CLAMP (I-I/4", PAIR)	
4	107-743	4	BOLT (I/4-NC X 2.75, GD5)	
5	106-387	4	FLG LOCKNUT (M10-I.50)	
6	303-321	1	UMBRELLA MOUNT	
7	300-6038	1	MOUNT PLATE	
8	105-245	4	SCREW (M10-I.50 X 25MM)	
9	I10-560	4	POP RIVET (3/16" X I/2", ALUM)	


NOT SHOWN:

FOOTNOTES:

NOTE:

01

ID0193432

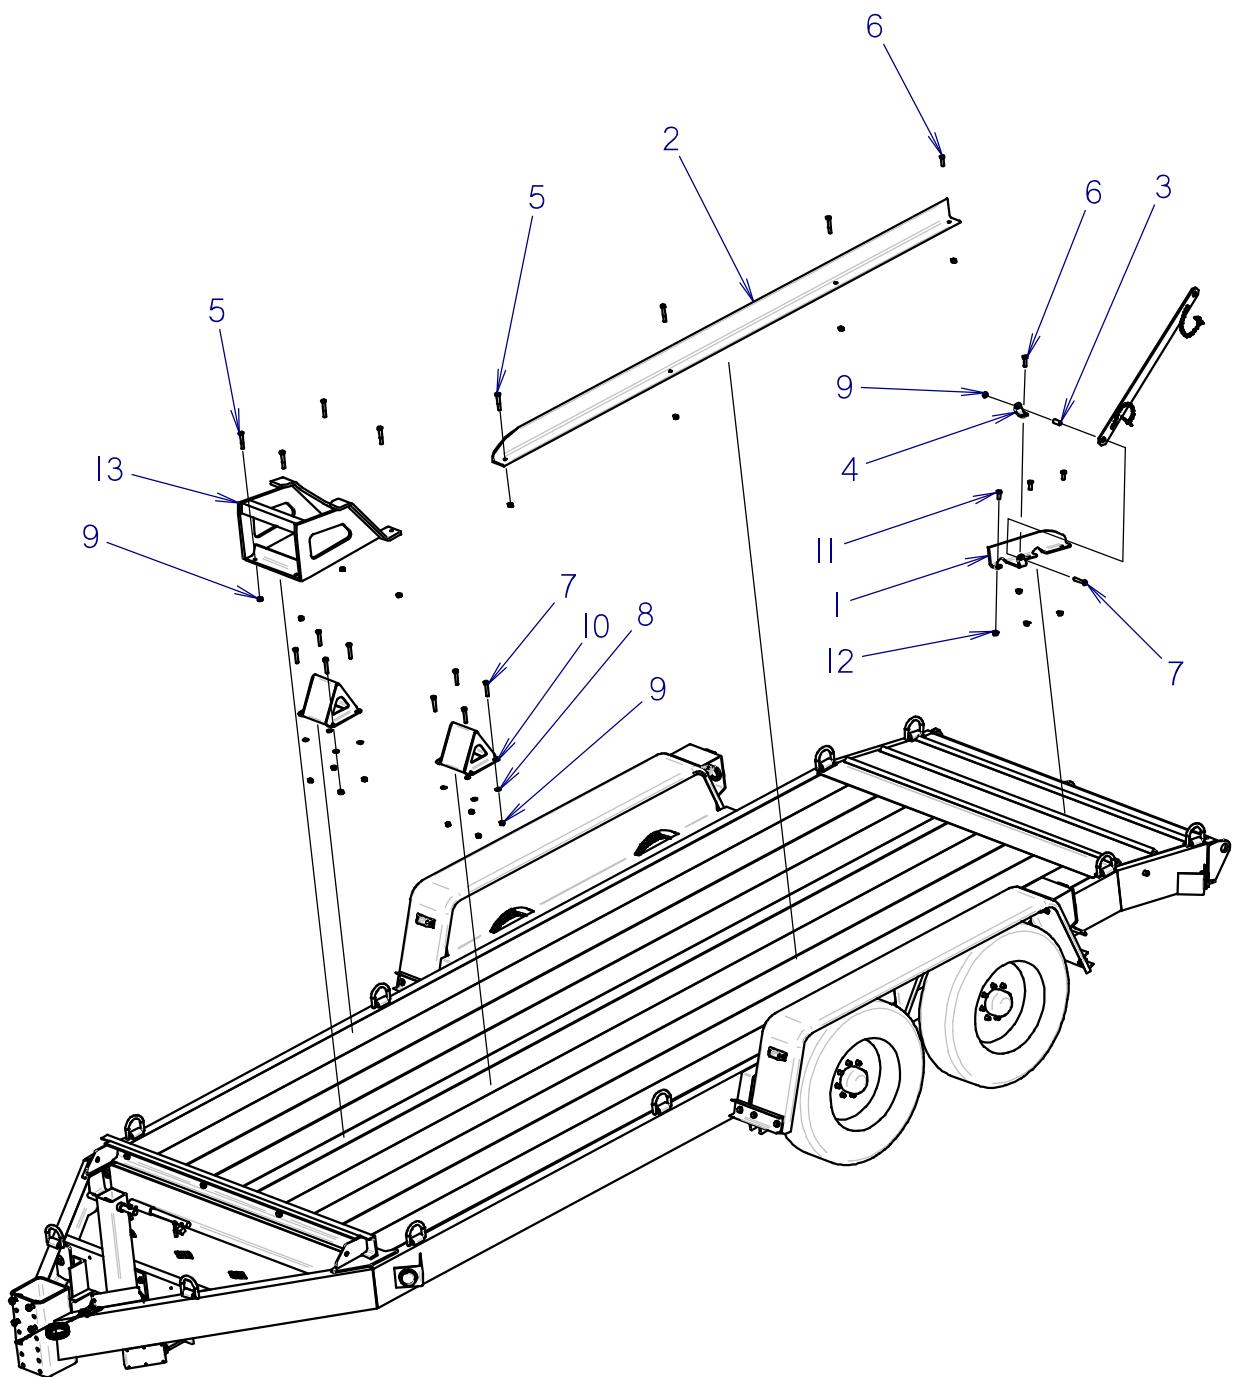T18B TIE DOWN KIT

T18B TIE DOWN KIT

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
I	190-I293	1	T18B TIE DOWN KIT	INCLUDES ITEMS I THRU I3 & TIE DOWN ASSEMBLIES NOT SHOWN
I	323-738	1	GUIDE PLATE	
2	323-737	1	GUIDE RAIL	
3	I78-351	1	BUSHING	
4	323-739	1	BRACKET	
5	107-308	7	SCREW (M12-1.75 X 75MM)	
6	106-333	2	SCREW (M12-1.75 X 40MM, 8.8)	
7	107-507	9	SCREW (M12-1.75 X 65MM)	
8	106-391	8	WASHER (M12)	
9	106-685	17	LOCKNUT(M12-1.75,PRV TRQ,10.9)	
I0	323-951	2	STOP	
I1	105-273	3	SCREW (M12-1.75 X 30MM)	
I2	106-709	4	FLG LK NUT (M12-1.75)	
I3	300-6624	1	FRONT MOUNT	

NOT SHOWN:

324-I001 2 TIE DOWN ASSEMBLY


FOOTNOTES:

NOTE:

01

ID0198267

WASH WAND PLUMBING

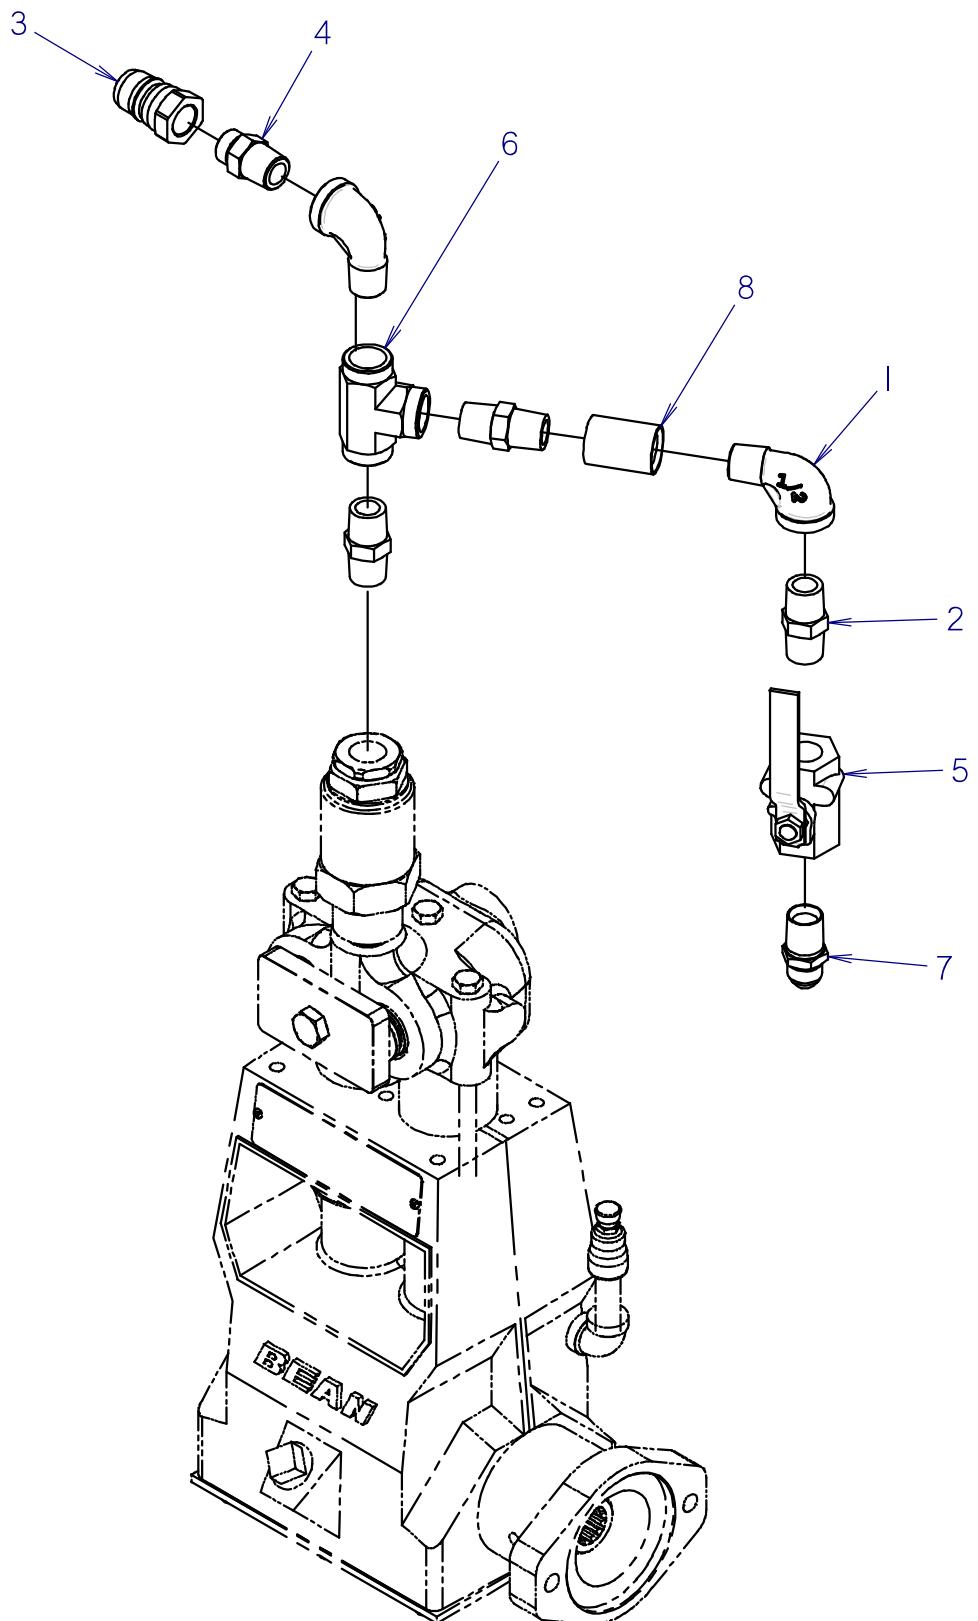

WASH WAND PLUMBING

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	I15-I15	2	STREET ELBOW (08N-08NF90)	
2	155-210	3	CONNECTOR (08N-08N)	
3	159-089	1	QDC ADAPTER (08-08SF)	
4	514-240	1	CONNECTOR (08N-08S)	
5	158-579	1	SHUT-OFF (08NF-08NF)	
6	514-241	1	TEE (08N-08N-08N)	
7	154-097	1	CONNECTOR (08N-08J)	
8	I15-I15	1	COLLAR (08NF)	


NOT SHOWN:

FOOTNOTES:

NOTE:

01

ID0I8I336

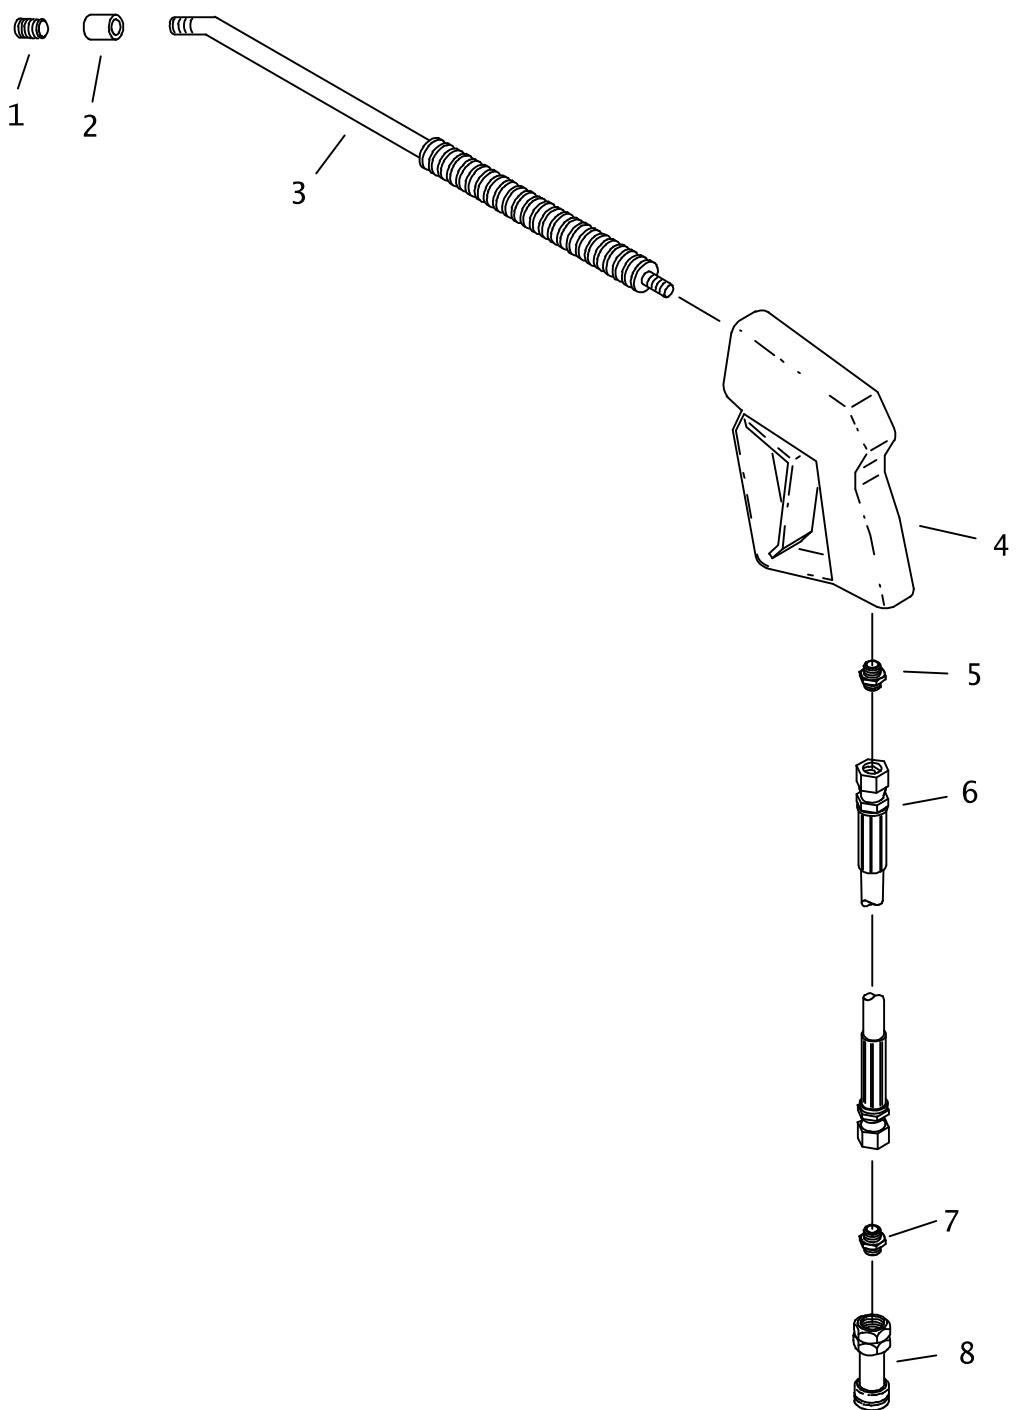WASH WAND

WASH WAND

REF	PART	NO.	NUMBER	QTY	DESCRIPTION	REMARKS
			350-1861	-	WASH WAND ACCESSORY KIT	SEE FOOTNOTE 1
1.	155-242	1	NOZZLE (04N, ORF .047", TC)			
2.	115-170	1	COLLAR (04NF)			
3.	259-353	1	WASH WAND (04N-36")			
4.	259-197	1	SPRAY GUN			
	190-938	-	REPAIR KIT, SPRAY GUN			
5.	514-141	1	CONNECTOR (06N-080)			
6.	154-804	1	HOSE (080FX-290"-3000)			
7.	154-233	1	CONNECTOR (08S-080)			
8.	159-088	1	QDC BODY (08-08SF)			
	190-186	-	SEAL REPAIR KIT			


NOT SHOWN:

FOOTNOTES:

1. INCL REF NO.'S 1 THRU 8 & PARTS ON "WASH WAND PLUMBING" PAGE.

NOTE:

GROUNDING CABLES

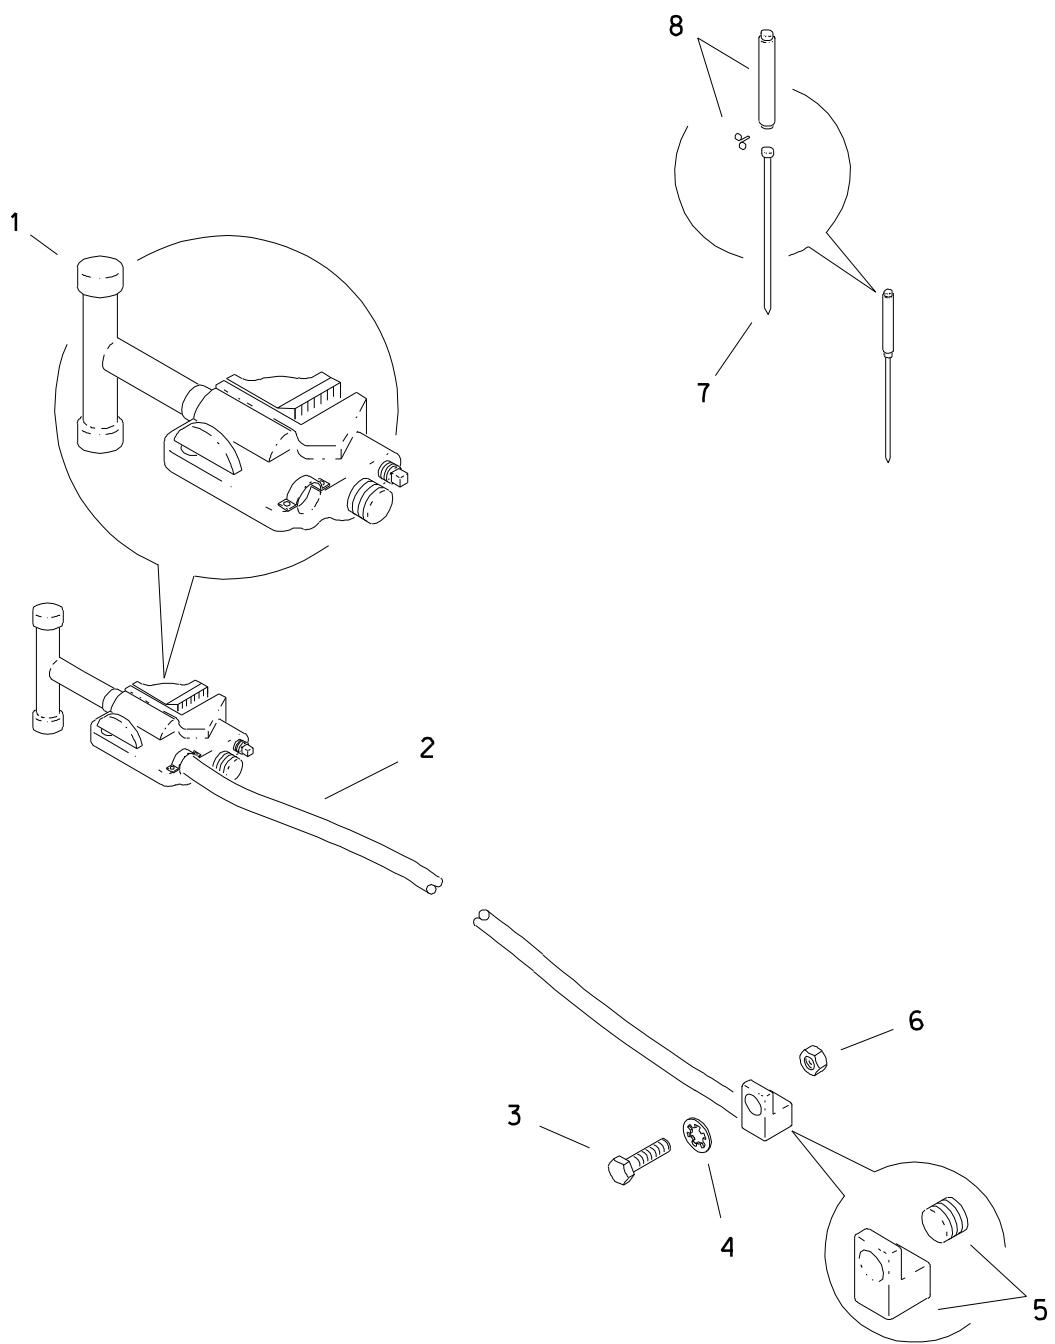

GROUNDING CABLES

REF NO.	PART NUMBER	QTY	DESCRIPTION	REMARKS
1	215-769	1	GROUND CLAMP	
2	215-813	1	GROUND CABLE (1/0 GA X 25')	INCL REF NO.'S 1 AND 5
	215-768 AR		GROUND CABLE (1/0 GA)	USE 25 FT
3	106-462	1	BOLT (3/8-NC X 1-1/4", SIL BRZ)	
4	106-220	1	INT STAR WASHER (3/8", SIL BRZ)	
5	215-773	1	RING LUG TERMINAL (27/64")	
6	106-454	1	LOCKNUT (3/8-NC, SIL BRZ)	
7	215-775	1	GROUND ROD	
8	215-776	1	SLIDE DRIVER	

FOOTNOTES

NOTES:

MISCELLANEOUS

ID0135063

SAE Bolt and Nut Torque Value Chart

Grade 5: UNC or UNF Thread

Size	Hex nut, or bolt tapped into hex nut, or d&t hole		Hex top deformed locknut		Flange nut, locknut, or bolt tapped into flange nut or d&t* hole	
	ft•lb	N•m	ft•lb	N•m	ft•lb	N•m
1/4	12	16	8	11	20	27
5/16	25	34	15	20	45	60
3/8	40	54	25	34	75	100
7/16	65	90	40	55	125	170
1/2	100	135	60	80	190	260
9/16	150	200	90	125	270	370
5/8	200	270	120	165	370	500
3/4	350	475	210	285	650	880
7/8	560	760	340	460	1250	1425
1	840	1140	500	680	1580	2145
1-1/8	1030	1400	320	840	1950	3645
1-1/4	1460	1980	880	1195	2760	3475

Grade 8: UNC or UNF Thread

Size	Hex nut, or bolt tapped into hex nut, or d&t hole		Hex top deformed locknut		Flange nut, locknut, or bolt tapped into flange nut or d&t* hole	
	ft•lb	N•m	ft•lb	N•m	ft•lb	N•m
1/4	14	19	10	14	24	33
5/16	30	40	18	25	50	70
3/8	55	73	35	50	90	125
7/16	85	115	50	70	140	190
1/2	130	175	80	110	220	300
9/16	190	260	110	150	310	420
5/8	260	355	160	245	430	585
3/4	450	610	270	365	750	1015
7/8	730	990	440	600	1210	1640
1	1090	1480	650	880	1320	2465
1-1/8	1550	2100	930	1260	2580	3500
1-1/4	2180	2955	1310	1780	3640	4935

*drilled and tapped

Metric Bolt and Cap Screw Torque Values

Size	Class 4.8				Class 8.8 and 9.8				Class 10.9				Class 12.9			
	Lubricated		Dry		Lubricated		Dry		Lubricated		Dry		Lubricated		Dry	
	N·m	ft·lb	N·m	ft·lb	N·m	ft·lb	N·m	ft·lb	N·m	ft·lb	N·m	ft·lb	N·m	ft·lb	N·m	ft·lb
M6	4.8	3.5	6	4.5	9	6.5	11	8.5	13	9.5	17	12	15	11.5	19	14.5
M8	12	8.5	15	11	22	16	28	20	32	24	40	30	37	28	47	35
M10	23	17	29	21	43	32	55	40	63	47	80	60	75	55	95	70
M12	40	29	50	37	75	55	95	70	110	80	140	105	130	95	165	120
M14	63	47	80	60	120	88	150	110	175	130	225	165	205	150	260	190
M16	100	73	125	92	190	140	240	175	275	200	350	225	320	240	400	300
M18	135	100	175	125	260	195	330	250	375	275	475	350	440	325	560	410
M20	190	140	240	180	375	275	475	350	530	400	675	500	625	460	800	580
M22	260	190	330	250	510	375	650	475	725	540	925	675	850	625	1075	800
M24	330	250	425	310	650	475	825	600	925	675	1150	850	1075	800	1350	1000
M27	490	360	625	450	950	700	1200	875	1350	1000	1700	1250	1600	1150	2000	1500
M30	675	490	850	625	1600	950	1650	1200	1850	1350	2300	1700	2150	1600	2700	2000
M33	900	675	1150	850	1750	1300	2200	1650	2500	1850	3150	2350	2900	2150	3700	2750
M36	1150	850	1450	1075	2250	1650	2850	2100	3200	2350	4050	3000	3750	2750	4750	3500

Do not use these values if a different torque value or tightening procedure is given for specific application. Torque values listed are for general use only. Check tightness of fasteners periodically.

Shear bolts are designed to fail under predetermined loads. Always replace shear bolts with identical property class fasteners.

Fasteners should be replaced with the same or higher property class. If higher property class fasteners are used, these should only be tightened to strength of original.

Make sure fastener threads are clean and that the threads are properly started. This will prevent them from cross threading or galling when tightened.

Tighten plastic insert or crimped type steel locknuts to approximately 50% of dry torque indicated on chart. Apply torque to the nut - not the bolt head. Tighten toothed or serrated type locknuts to full torque value.

LUBRICATED means coated with lubricant. DRY means plain or zinc plated without any type of lubricant.

Hydraulic Cylinder Bolt Torque Chart

Bolt Size (inch)	Bolt Part No.	Cylinder Repair Kit Part No.	Torque (ft•lb)	Torque (N•m)
1/2	106-096	190-165	90-100	120-135
5/8	106-097	190-166 & 190-169	180-200	245-270
3/4	106-098	190-167 & 190-170	290-325	395-440
7/8	106-122	190-172 & 190-174	410-640	550-625
1	106-145	190-175 & 190-189	630-700	855-950
1-1/8	106-146	190-177	770-850	1045-1170

As a general rule:

- 1/2-inch bolts are used in cylinders with 1-inch rods
- 5/8-inch bolts are used in cylinders with 1 1/4-inch rods
- 3/4-inch bolts are used in cylinders with 1 1/2-inch rods
- 7/8-inch bolts are used in cylinders with 1 3/4-inch rods
- 1-inch bolts are used in cylinders with 2-inch rods (one with 1 3/4-inch)
- 1-1/8-inch bolts are used in cylinders with 2-1/4-inch rods

IMPORTANT: Do not reuse cylinder piston bolts when rebuilding a hydraulic cylinder. Each cylinder repair kit contains a new bolt. Use it. Lubricate lightly and torque to value shown on chart.

SAE & ORS Hydraulic Fitting Replacement O-Ring Chart

Fraction Size	Dash Size	SAE (Port Seal O-Ring)		ORS (Face Seal O-Ring)	
		Thread Size	O-Ring P/N	Thread Size	O-Ring P/N
1/16	1	NA	NA	NA	NA
1/8	2	5/16 - 24	NA	NA	NA
3/16	3	3/8 - 24	NA	NA	NA
1/4	4	7/16 - 20	155-760	9/16 - 18	157-037
5/16	5	1/2 - 20	NA	NA	NA
3/8	6	9/16 - 18	155-705	11/16 - 16	157-038
1/2	8	3/4 - 16	155-706	13/16 - 16	157-039
5/8	10	7/8 - 14	155-707	1 - 14	157-040
3/4	12	1-1/16 - 12	155-709	1-3/16 - 12	157-017
7/8	14	1-3/16 - 12	155-747	NA	NA
1	16	1-5/16 - 12	155-748	1-7/16 - 12	155-714
1-1/4	20	1-5/8 - 12	155-702	1-11/16 - 12	NA
1-1/2	24	1-7/8 - 12	157-001	2 - 12	NA
2	32	2-1/2 - 12	NA	NA	NA
2-1/2	40	3 - 12	NA	NA	NA
3	48	3-1/2 - 12	NA	NA	NA

Thread size indicates the diameter of the threaded area in fractions of an inch and number of threads per inch.

NA = not a current CMW part numbered o-ring, or dash size does not occur in current CMW applications

SAE = straight thread fitting that seals by sandwiching a hard o-ring between a shoulder on the male part and an angular surface at the mouth of the female port.

ORS = o-ring face seal; a type of fitting that seals by compressing a hard, captive o-ring between two flat parallel faces, one grooved for the o-ring and the other plain to act as the sealing surface

JT922 Tier 4i

Related Publications

Component	Ass'y	P/N
Model:		
JT922	Parts Manual	053-1134
JT922	Operators Manual	053-1146
JT922	Technical Supplement	053-1147
Engine:		
Deutz	Parts Manual – F4L2011	195-1071 ... 053-115
Deutz.....	Operators Manual - F4L2011.....	054-115
Deutz.....	Service (Shop) Manual - F4L2011	055-074

Filters

Engine:		
Air Filter Parts Ass'y	194-297
Element (primary)	194-759
Element (secondary)	194-758
Oil Filter Element (spin-on) - Deutz	195-849
Fuel Filter Element (spin-on)	195-807

Hydraulic:

Oil Filter Element (1-1/2-UNF, spin-on, Replacement)	153-792
--	---------

Optional Kits

O-ring Repair Kit - FLG, ORS & SAE (15 different O-rings)	190-051
O-ring Repair Kit - Field Service (46 different O-rings)	190-052



**Ditch
Witch®**

199

Parts Manual Change Request

(Please print clearly)

Date: _____

Dealer No. (required): _____

Your Name: _____

Position: _____

Phone: _____

Fax: _____

E-mail: _____

Publication Information:

Parts Manual No.: ____ - ____

Model: _____

Illustration Part No.:

Manual Page No.:

- | | |
|----------------------|----------|
| 1. ____ - ____ | 1. _____ |
| 2. ____ - ____ | 2. _____ |
| 3. ____ - ____ | 3. _____ |

Nature of Change Request:

Text

Graphics

Missing Information

Describe change requested (*if possible, include copy of publication page with changes marked.*):

**Please fax completed form to
Parts Manual Department (580) 572-3525**

Thank you for taking the time to submit this request. We will contact you if further information is needed to process your request.

A Note To Ditch Witch Equipment Owners:

If your equipment was purchased through a Ditch Witch dealer, there is no need to read further.


However, if you purchased from any other source, please fill out the form on the reverse side and return it to us.

This will enable you to receive updates on this equipment as well as information on new products of interest.

Thanks for using Ditch Witch equipment.

(Please Fold Along This Line And Seal At Bottom With Tape)

.....

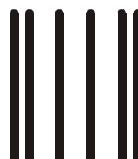


NO POSTAGE
NECESSARY
IF MAILED
IN THE
UNITED STATES

BUSINESS REPLY MAIL

FIRST CLASS

PERMIT NO 23 PERRY OKLAHOMA

POSTAGE WILL BE PAID BY

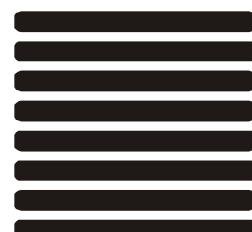

**The Charles Machine Works, Inc.
P.O. Box 66
Perry, Oklahoma 73077-9989**



ID0040564

Ditch Witch® Registration Card

Please Type or Print All Information

Purchaser's Company Name

Attention

Street Address or P.O. Box

City

County

State

Zip

Nation

()

Phone Number With Area Code

Model

S rial Number

Attachments/Accessories

Serial Numbers

Attachments/Accessories

Serial Numbers

Attachments/Accessories

Serial Numbers

Name of Ditch Witch Dealership

Your Signature